

# CROWN

## Parts Manual



**FC4000** Series

---

**CROWN**

***TABLE OF CONTENT***

---

## Table of Content

<b>ITD – INTRODUCTION</b>	<b>PAGE</b>	<b>SERIAL NR. CUT</b>	<b>REV.</b>
General .....	7		
Model - Number .....	8		
<b>SECTION 1 – COVERS</b>	<b>PAGE</b>	<b>SERIAL NR. CUT</b>	<b>REV.</b>
Covers .....	14,16,18,20,22		
Seat & Pan .....	24		
Seat (Static).....	26		
Seat (Suspension) .....	28		
<b>SECTION 2 – HYDRAULIC PARTS</b>	<b>PAGE</b>	<b>SERIAL NR. CUT</b>	<b>REV.</b>
Tube/Hose Layout .....	32,34,36,38,40,42		
Control Valve Linkage .....	44,46,48		
Control Lever .....	50		
Hydraulic TL & TT Mast .....	52		
Hydraulic Accessories TL Mast .....	54		
Hydraulic Accessories TT Mast .....	56		
Valve Bloc .....	58,60		
Tilt Manifold .....	62		
Park Brake Release Manifold .....	64		
Lowering Flow Control Manifold .....	66		
Accessory Manifold .....	68		
Pump .....	72		
Pump Motor .....	74		
<b>SECTION 3 – DRIVE UNIT</b>	<b>PAGE</b>	<b>SERIAL NR. CUT</b>	<b>REV.</b>
Gear Box .....	78		
Drive Motor .....	82		
Drive Tire .....	84		
<b>SECTION 4 – ELEKTICAL</b>	<b>PAGE</b>	<b>SERIAL NR. CUT</b>	<b>REV.</b>
Socket - Housing .....	90		
Electrical Components .....	94		
Contactor Panel .....	96,100,104		
Panel.....	108,110		
Distribution Panel .....	112		
Fuse Box .....	114		
Contactor (Forward & Reverse) .....	116		Rev. 4 09/95
Contactor ("EE") .....	118		Rev. 2 11/01
Contactor ("EE") .....	120		Rev. 3 11/01
Contactor (Steering) .....	122		Rev. 2 12/93
Contactor ("EE") .....	124		Rev. 3 11/01
Contactor (Pump) .....	126		
Tilt Limit Switch .....	128		
Mast Wiring (TL & TT) .....	130,132		
Directional Control .....	134		Rev. 1 09/01
Foot Operated Directional Control .....	136		
Accelerator .....	138		
Diagnostic Switch .....	140		
Park Brake Switch .....	142		
Working Light .....	144		Rev. 1 03/02

Working Light .....	146
Working Light - TT Mast .....	148
Light Rear .....	150,152

<b>SECTION 5 – BRAKE</b>	<b>PAGE</b>	<b>SERIAL NR. CUT</b>	<b>REV.</b>
Foorbrake .....	156		
Drive Brake .....	158		
Park - Brake .....	160		
Brake Cylinder .....	162		

<b>SECTION 6 – STEERING</b>	<b>PAGE</b>	<b>SERIAL NR. CUT</b>	<b>REV.</b>
Pump - Steering & Drive Brake .....	166		
Pump Motor (Steering) .....	168		Rev. 2 10/00
Steer Wheel .....	170		
Steer Axle .....	172		
Steer Cylinder .....	174		Rev. 2 05/96
Steering Column .....	176,178,180		

<b>SECTION 7 – MAST/LIFT STRUCTURE</b>	<b>PAGE</b>	<b>SERIAL NR. CUT</b>	<b>REV.</b>
TL Mast .....	184		
TL Mast Accessories .....	186		
Lift Chain TL Mast .....	188		
TT Mast .....	190		
TT Mast Accessories .....	194		
Lift Chain TT Mast .....	196		
Fork Carriage .....	198,200		
Sideshift .....	202		
Fork .....	204		
Load Backrest .....	208		
Yoke .....	210		

<b>SECTION 8 – CYLINDER</b>	<b>PAGE</b>	<b>SERIAL NR. CUT</b>	<b>REV.</b>
Lift Cylinder .....	214		
Free Lift Cylinder .....	216		
Tilt Cylinder .....	218		
Sideshift Cylinder .....	220		

<b>SECTION 10 – LABELS &amp; DECALS</b>	<b>PAGE</b>	<b>SERIAL NR. CUT</b>	<b>REV.</b>
Labels & Decals .....	224,226,228		

This Manual contains 230 Pages

---

**CROWN**

***INTRODUCTION***

---

**General**

**Maintenance and Repair**

Only qualified and Crown authorised personnel may carry out work on the truck.

**Otherwise warranty will be void.**

**Ordering Spare Parts**

Spare parts can be ordered by quoting:

- The truck model number
- The truck serial number
- The truck specification number

This information can be found on the truck's data plate. Only if this information is provided can the order be processed quickly, correctly and reliably.

Please refer to the Technical Specifications Sheet for the utilisable loads, technical data and dimensions for this series. Brochures can be obtained from your CROWN dealer or from the following address:

Battery Weight Lbs.		D.C. Voltage
Max.	Min	
Max. A. H. Cap.	HR. Rate	Batt. Type
Truck Wt. Less Batt.		
Max. Grade With 12 In. Max. Fork Height		%
Load Tire Treac Width		
180° Traverse Sideshift		
Model Number		Fork Length
Serial Number		Max. Tilt Back °
Truck Data Number		
<small>This truck as released from the factory conforms to the mandatory requirements of the ANSI B56.1 Standard.</small>		
<small>Crown Equipment Corp. New Bremen, OH 45869</small>		
<small>CL B</small>		


**TRUCK DATA PLATE**

6312

**CROWN Gabelstapler GmbH**  
**Moosacher Str. 52**  
**80809 Munich**  
**GERMANY**  
**Tel.: +49 (0)89 / 93 002 -0**  
**Fax: +49 (0)89 / 93 002 -175 oder 133**

## Model-Number

### MODEL NUMBER EXAMPLE

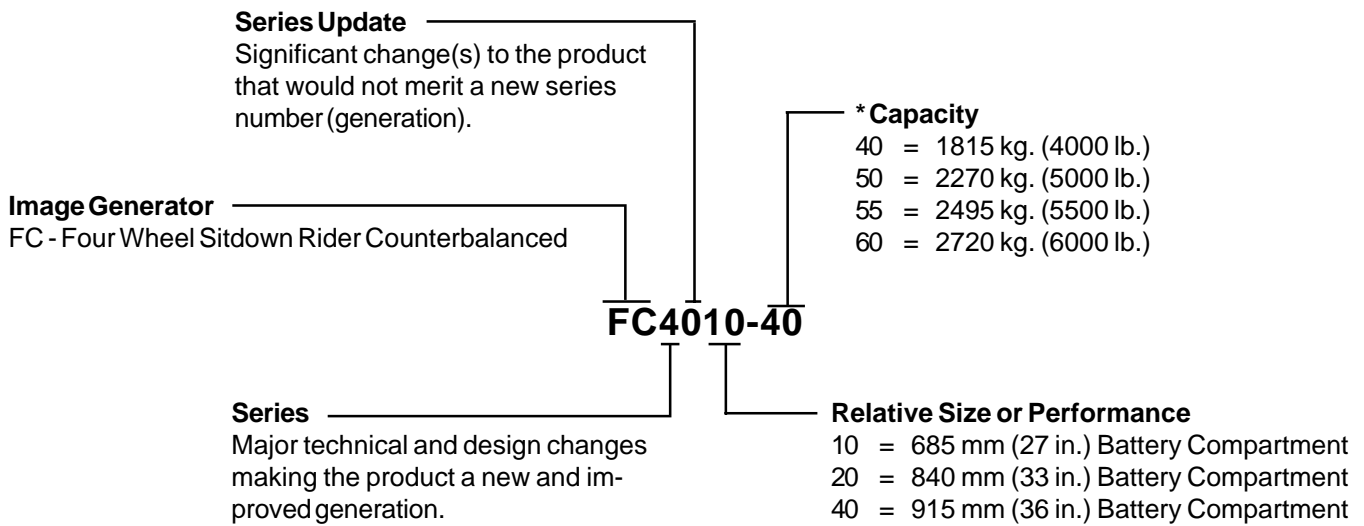

The example of the model number shown above (FC4010-40) is a FC4000 series. It has a 685 mm (27 in.) battery compartment and 1815 kg. (4000 lb.) capacity.

\* Actual rated capacity may vary, depending on special equipment or modifications. Consult capacity plate located on the overhead guard.

**BUY NOW**

**Then Instant Download  
the Complete Manual  
Thank you very much!**