



CROWN



Parts Manual

Ersatzteilhandbuch

Manual de pièces détachés

GPC 2000 Series

CROWN

TABLE OF CONTENT

Table of Content

MA – SAFETY	PAGE	SERIAL NR. CUT	REV.
Safety Symbols used in the Manual	M/P-MA-0000-001		Rev.1 4/00
ITD – INTRODUCTION	PAGE	SERIAL NR. CUT	REV.
General	P-ITD-6620-001		Rev.1 11/00
Page Numbers	M/P-ITD-6620-002		
P-1.1 – LUBRICATION	PAGE	SERIAL NR. CUT	REV.
Lubrication Type	P-1.1-6620-002		
DIA – ELECTRICAL DIAGRAMS	PAGE	SERIAL NR. CUT	REV.
Diagrams 2020	M/P-DIA-6620-001		Rev.1 01/01
Diagrams 2040	M/P-DIA-6620-025		Rev.1 01/01
Diagrams 2040S	M/P-DIA-6620-050		
M/P – HYDRAUKIC	PAGE	SERIAL NR. CUT	REV.
Hydraulic Schematic	M/P-2.0-6620-001		
SECTION 1 – COVERS	PAGE	SERIAL NR. CUT	REV.
Caster Wheel	P-1.5-6620-001		Rev.2 01/01
Load Wheel	P-1.5-6620-025		Rev.1 01/01
Covers	P-1.6-6620-001		Rev.2 01/01
SECTION 2 – HYDRAULIC PARTS	PAGE	SERIAL NR. CUT	REV.
Tube/Hose Layout	P-2.1-6620-001		
Pumpen Motor and Pump	P-2.13-6620-001		Rev.2 01/01
SECTION 3 – DRIVE UNIT	PAGE	SERIAL NR. CUT	REV.
Drive Unit	P-3.0-6620-001		Rev.2 01/01
Gearbox	P-3.1-6620-001		Rev.1 01/01
Drive Motor	P-3.2-6620-001		Rev.3 06/01
Knuckle	P-3.3-6620-001		Rev.2 01/01
SECTION 4 – ELECTRICAL	PAGE	SERIAL NR. CUT	REV.
Control Panel	P-4.1-6620-001		Rev.2 01/01
Steering Controller	P-4.2-6620-001		
Drive Board	P-4.3-6620-001		Rev.2 01/01
Contactora	P-4.4-6620-001		
Quick Pic	P-4.6-6620-001		
Accelerator Switch	P-4.6-6620-025		
Lift/Lower and Horn	P-4.6-6620-050		
Control Handle	P-4.6-6620-075		Rev.2 01/01
Handle	P-4.6-6620-077		
Control Handle (Cap)	P-4.6-6620-079		Rev.2 01/01
Foot Brake/Walk Along 2020/2040	P-4.6-6620-100		Rev.1 01/01
Walk Along and Lift/Lower 2040S	P-4.6-6620-125		
Platform	P-4.6-6620-150		

Battery Connector/Emergency Disconnect	P-4.7-6620-001	Rev.1 2/97
Dash Board	P-4.9-6620-001	Rev.2 01/01
Steer Indicator	P-4.9-6620-025	

SECTION 5 – BRAKE	PAGE	SERIAL NR. CUT	REV.
Brake 2020	P-5.6-6620-001		Rev.1 2/97
Brake 2040/2040S	P-5.6-6620-025		Rev.2 01/01

SECTION 6 – STEERING	PAGE	SERIAL NR. CUT	REV.
Steering	P-6.2-6620-001		
Steering Motor	P-6.2-6620-025		
Steering	P-6.4-6620-001		
Steering Column	P-6.7-6620-001		Rev.1 2/97

SECTION 7 – MAST/LIFT STRUCTURE	PAGE	SERIAL NR. CUT	REV.
Platform Lift	P-7.1-6620-001		Rev.1 01/01
Fork Lift	P-7.1-6620-025		
Fork Carriage	P-7.7-6620-001		Rev.1 01/01
Lift Structure	P-7.8-6620-001		Rev.2 01/01
Load Backrest	P-7.10-6620-001		Rev.1 01/01
Guard Rail	P-7.10-6620-075		

SECTION 8 – CYLINDER	PAGE	SERIAL NR. CUT	REV.
Lift Cylinder (Platform Lift)	P-8.4-6620-001		Rev.1 01/01
Free Lift Cylinder	P-8.4-6620-025		
Free Lift Cylinder (Platform Lift and Combi)	P-8.4-6620-050		

SECTION 9 – CABIN/PLATFORM	PAGE	SERIAL NR. CUT	REV.
Platform	P-9.0-6620-001		Rev.2 01/01
Platform (Platform Lift/Fork Lift)	P-9.0-6620-075		
Platform (Fork Lift)	P-9.0-6620-100		

SECTION 10 – MISCELLANEOUS SERVICE INF.	PAGE	SERIAL NR. CUT	REV.
Labels and Decals	P-10.9-6620-001		Rev.2 01/01

CROWN

SAFETY

BUY NOW

**Then Instant Download
the Complete Manual
Thank you very much!**