



Service Manual



ST3000 Series

Overview of Revisions:

Blank page



TABLE OF CONTENT

Blank page

Table of Content

MA – SAFETY	PAGE	SER-NO. CUT	REV.
Safety Symbols used in the Manual	3		
General Maintenance and Repair Safety Notes	3		
Maintenance and Repair	3		
Before Leaving the Truck	4		
Before Carrying out Work on the Truck	4		
Before Operating the Truck	4		
Warnings and Labels on the Truck	4		
ITD – INTRODUCTION	PAGE	SER-NO. CUT	REV.
General	7		
Operating Instructions	7		
Service Training	7		
Ordering Spare Parts	7		
Using the Manual	7		
Model-Number	8		
M1 – LUBRICATION AND ADJUSTMENT	PAGE	SER-NO. CUT	REV.
COMPONENT ACCESS	11		
Lifting and Blocking	13		
Outriggers	14		
Recommended Lubricants and Oils	15		
Lubricants	15		
Cold Store Trucks	15		
Truck Decommissioning	15		
Restoring the Truck to Service	15		
Maintenance	19		
Lubrication points and intervals	19		
Inspection and Maintenance Schedule	21		
Casters	30		
Torques	31		
M2 – HYDRAULICS	PAGE	SER-NO. CUT	REV.
Hydraulic Symbols	35		
Hydraulic Unit Removal	39		
Hydraulic System	40		
Operation	40		
Raise (Refer to Illustration)	40		
Lower	41		
Hydraulic Reservoir Capacity	42		
Changing the hydraulic oil and hydraulic filter	42		
MOTOR & PUMP ASSEMBLY	44		
HYDRAULIC LINES AND FITTINGS	44		
General Rules for Hydraulic Lines and			
Fittings	44		
CIRCUIT BLEEDING	45		
DRIFT TEST	45		
Proportional function:	45		
REMOVAL	45		
MOTOR	46		
PUMP	46		
After replacing pump:	46		
Replacing the relief valve	47		
Relief valve setting	47		
Relief valve test and setting	47		
HYDRAULIC TROUBLESHOOTING CHART	48		

M3 – DRIVE UNIT	PAGE	SER-N0. CUT	REV.
Gear Unit	51		
Drive unit, general	52		
Drive unit removal	52		
Drive motor removal	52		
Motor disassembly	53		
Motor assembly	53		
Drive motor assembly	55		
Gear unit disassembly	56		
General	56		
Preparation	56		
Draining the oil	56		
Drive unit removal	56		
Gear unit cover removal	56		
Gear unit disassembly	57		
Gear unit assembly	57		
Gear unit cover installation	59		
Adding Oil	59		
Drive unit installation	59		
M4 – ELEKTRICS	PAGE	SER-N0. CUT	REV.
Electrics - General	63		
Wire Colour Codes	63		
Abbreviations	64		
Electrical Symbols	67		
Electrical Components	68		
Traction Pod (POT, FS, RS)	68		
Fast / Slow Travel Switch (HSS)	68		
Safety Reverse Switch (SAS)	68		
Brake Switch (BRS)	68		
Override Switch (ORS)	68		
Raise / Lower Switches (RAS, LOS)	69		
Limit Switch (LMS)	69		
Horn Switch (HNS)	69		
Key Switch (KYS)	69		
Emergency Disconnect (BD)	69		
Fuses (FU)	69		
OPTION Thermal Switch (THS)	69		
Hydraulic Control Module (HCM)	69		
Unigage (BDI)	69		
Integrated Charger	69		
Plug Holder (PC)	69		
Drive motor (M1)	69		
Hydraulic Motor (M2)	69		
Main Contactor (Line/LC)	70		
Lift Contactor (P/P1+P2)	70		
Electromagnetic Brake (BRK)	70		
Terminal Board (TB)	70		
Travel Alarm Driver (DR)	70		
Aux. Hydraulic Switch (SLS/SRS)	70		
Remote Control Toggle Switch (ECS)	70		
Aux. Hydraulic Valves (SVA1/SVA2)	70		
Horn (HN)	70		
Main Circuit Board (MAIN PCB)	70		
Hydraulic Circuit Board (HYD PCB)	70		
Travel Alarm (ALM)	70		
Receiver	70		
Transmitter	70		

M4 – ELEKTRICS	PAGE	SER-N0. CUT REV.
SEM0 Traction Controller	74	
General	74	
Precautionary Measures	74	
Functional Characteristics	74	
Speed control	74	
Reduced speed ranges	74	
Downhill speed control	74	
Regenerative braking	74	
Anti Roll Down Function	75	
Hourmeter	75	
Self-Diagnostic System	75	
Monitored Circuits	75	
Safety Mechanisms	75	
Incorrect polarity	75	
Wiring Errors	75	
Temperature protection	75	
Start sequence	75	
Protection rating	75	
Maintenance	76	
Replacing the SEM0 Traction Controller	77	
Parameter Setting after Replacing the Traction Controller	77	
Preparatory Measures	77	
Adjustment	77	
Status LED	79	
Programmer	80	
General	80	
Crown Handset P/N 793548 (Includes Cord)	80	
Operating SEM0 Controller Menu	81	
General	81	
Menu structure	81	
Menu Functions	82	
PARAMETER CHANGE	82	
TEST	82	
ALARMS	82	
PROGRAM VACC	82	
CONFIG	82	
Functions Menu, general	83	
Parameter Change Menus	84	
Settings and Error Messages	85	
Tester Menu	86	
TESTER Menu	87	
Alarms Menu	88	
ALARMS Menu	89	
Calibrating the Traction Pod Potentiometer, PROGRAM VACC menu	92	
Preparatory Measures	92	
Calibration	92	
Config. Menu	93	
CONFIG Menu	94	
SET MODEL	94	
SET OPTIONS	94	
ADJUSTMENTS	94	
On Board Charger	95	
General	95	
Battery Charging Phases	95	
First Phase (I1)	95	

M4 – ELEKTRICS	PAGE	SER-N0. CUT	REV.
Second Phase (P)	95		
Third Phase (U)	95		
Fourth Phase (I2)	95		
End of Normal Charging	96		
Special Charging Phases	96		
Compensating Charge	96		
Float Charge	96		
Partial Charging	96		
Charging Errors	97		
Green LED is not lit	97		
Possible Causes:	97		
Green LED flashing	97		
Important Technical Data	98		
Replacing the Charger	98		
Removal / Installation	98		
Traction Motor Maintenance	99		
Access to brushes	99		
Maintenance	99		
Armature	99		
Bearings	99		
Pump Motor Maintenance	100		
Access to brushes	100		
Maintenance	100		
Armature	100		
REPLACING PUMP MOTOR BRUSHES	100		
Contactors	102		
Inspection	102		
Contacts	102		
Coils	102		
Springs	102		
Servicing	103		
Dismantling	103		
Assembly	103		
Hydraulic Control Module (HCM)	104		
Battery Discharge Indicator (BDI)	105		
OPERATION	105		
General	106		
Battery Discharge Indicator Setting (BDI)	106		
Calibration for wet batteries	107		
TROUBLESHOOTING	108		
Traction Controller Safety Test	109		
M5 – BRAKE	PAGE	SER-N0. CUT	REV.
Brake	113		
Function	113		
Disassembly	113		
Assembly	115		
Air gap setting	115		
Brake moment setting	116		
Brake test	116		
Definition of run-in/new rotor	116		
General Notes	116		
M6 – DIRECTION	PAGE	SER-N0. CUT	REV.
Live ring bearing	121		
Disassembly	121		
Assembly	121		

BUY NOW

**Then Instant Download
the Complete Manual
Thank you very much!**