



Service Manual



SX3000 Series

Overview of Revisions:

Blank page



TABLE OF CONTENTS

Blank page

Table of Contents

MA – SAFETY	PAGE	SER-NO. CUT	REV.
Safety Symbols used in the Manual	3		
General Maintenance and Repair Safety Notes	3		
Maintenance and Repair	3		
Before Leaving the Truck	4		
Before Carrying out Work on the Truck	4		
Before Operating the Truck	4		
Warnings and Labels on the Truck	4		
ITD – INTRODUCTION	PAGE	SER-NO. CUT	REV.
General	7		
Operating Instructions	7		
Service Training	7		
Ordering Spare Parts	7		
Using the Manual	7		
Model-Number	8		
M1 – LUBRICATION AND ADJUSTMENT	PAGE	SER-NO. CUT	REV.
COMPONENT ACCESS	11		
Lifting and Blocking	13		
Outriggers	14		
Recommended Lubricants and Oils	15		
Lubricants	15		
Cold Store Trucks	15		
Truck Decommissioning	15		
Restoring the Truck to Service	15		
Maintenance	19		
Lubrication points and intervals	19		
Inspection and Maintenance Schedule	21		
Casters	30		
Torques	31		
M2 – HYDRAULICS	PAGE	SER-NO. CUT	REV.
Hydraulic Symbols	35		
Hydraulic Unit Removal	39		
Hydraulic System	40		
Operation	40		
Raise (Refer to Illustration)	40		
Lower	41		
Hydraulic Reservoir Capacity	42		
Changing the hydraulic oil and hydraulic filter	42		
MOTOR & PUMP ASSEMBLY	44		
HYDRAULIC LINES AND FITTINGS	44		
General Rules for Hydraulic Lines and			
Fittings	44		
CIRCUIT BLEEDING	45		
DRIFT TEST	45		
Proportional function:	45		
REMOVAL	45		
MOTOR	46		
PUMP	46		
After replacing pump:	46		
Replacing the relief valve	47		
Relief valve setting	47		
Relief valve test and setting	47		
HYDRAULIC TROUBLESHOOTING CHART	48		

M3 – DRIVE UNIT	PAGE	SER-N0. CUT	REV.
Gear Unit	51		
Drive unit, general	52		
Drive unit removal	52		
Drive motor removal	52		
Motor disassembly	53		
Motor assembly	53		
Drive motor assembly	55		
Gear unit disassembly	56		
General	56		
Preparation	56		
Draining the oil	56		
Drive unit removal	56		
Gear unit cover removal	56		
Gear unit disassembly	57		
Gear unit assembly	57		
Gear unit cover installation	59		
Adding Oil	59		
Drive unit installation	59		
M4 – ELEKTRICS	PAGE	SER-N0. CUT	REV.
Electrics - General	63		
Wire Colour Codes	63		
Abbreviations	64		
Electrical Symbols	67		
Electrical Components	68		
Traction Pod (POT, FS, RS)	68		
Fast / Slow Travel Switch (HSS)	68		
Safety Reverse Switch (SAS)	68		
Brake Switch (BRS)	68		
Override Switch (ORS)	68		
Raise / Lower Switches (RAS, LOS)	69		
Limit Switch (LMS)	69		
Horn Switch (HNS)	69		
Key Switch (KYS)	69		
Emergency Disconnect (BD)	69		
Fuses (FU)	69		
OPTION Thermal Switch (THS)	69		
Thermal switch (THS2)	69		
Hydraulic Control Module (HCM)	69		
Unigage (BDI)	69		
Integrated Charger	69		
Plug Holder (PC)	69		
Drive motor (M1)	69		
Hydraulic Motor (M2)	70		
Main Contactor (Line/LC)	70		
Lift Contactor (P/P1+P2)	70		
Electromagnetic Brake (BRK)	70		
Terminal Board (TB)	70		
Travel Alarm Driver (DR)	70		
Aux. Hydraulic Switch (SLS/SRS)	70		
Remote Control Toggle Switch (ECS)	70		
Aux. Hydraulic Valves (SVA1/SVA2)	70		
Horn (HN)	70		
Main Circuit Board (MAIN PCB)	70		
Hydraulic Circuit Board (HYD PCB)	70		
Travel Alarm (ALM)	70		
Receiver	70		

M4 – ELEKTRICS	PAGE	SER-N0. CUT REV.
SEM0 Traction Controller	74	
General	74	
Precautionary Measures	74	
Functional Characteristics	74	
Speed control	74	
Reduced speed ranges	74	
Downhill speed control	74	
Regenerative braking	74	
Anti Roll Down Function	75	
Hourmeter	75	
Self-Diagnostic System	75	
Monitored Circuits	75	
Safety Mechanisms	75	
Incorrect polarity	75	
Wiring Errors	75	
Temperature protection	75	
Start sequence	75	
Protection rating	75	
Maintenance	76	
Replacing the SEM0 Traction Controller	77	
Parameter Setting after Replacing the Traction Controller	77	
Preparatory Measures	77	
Adjustment	77	
Status LED	79	
Programmer	80	
General	80	
Crown Handset P/N 793548 (Includes Cord)	80	
Operating SEM0 Controller Menu	81	
General	81	
Menu structure	81	
Menu Functions	82	
PARAMETER CHANGE	82	
TEST	82	
ALARMS	82	
PROGRAM VACC	82	
CONFIG	82	
Functions Menu, general	83	
Parameter Change Menus	84	
Settings and Error Messages	85	
Tester Menu	86	
TESTER Menu	87	
Alarms Menu	88	
ALARMS Menu	89	
Calibrating the Traction Pod Potentiometer, PROGRAM VACC menu	92	
Preparatory Measures	92	
Calibration	92	
Config. Menu	93	
CONFIG Menu	94	
SET MODEL	94	
SET OPTIONS	94	
ADJUSTMENTS	94	
On Board Charger	95	
General	95	
Battery Charging Phases	95	
First Phase (I1)	95	

M4 – ELEKTRICS	PAGE	SER-N0. CUT	REV.
Second Phase (P)	95		
Third Phase (U)	95		
Fourth Phase (I2)	95		
End of Normal Charging	96		
Special Charging Phases	96		
Compensating Charge	96		
Float Charge	96		
Partial Charging	96		
Charging Errors	97		
Green LED is not lit	97		
Possible Causes:	97		
Green LED flashing	97		
Important Technical Data	98		
Replacing the Charger	98		
Removal / Installation	98		
Electric Motors	99		
General Maintenance Instructions	99		
Preparation	99		
Important Maintenance Instructions	99		
Traction Motor Maintenance	100		
Access to brushes	100		
Maintenance	100		
Armature	100		
Bearings	100		
Pump Motor Maintenance	101		
Access to brushes	101		
Maintenance	101		
Armature	101		
Contactors	102		
Inspection	102		
Contacts	102		
Coils	102		
Springs	102		
Servicing	103		
Dismantling	103		
Assembly	103		
Hydraulic Control Module (HCM)	104		
Battery Discharge Indicator (BDI)	105		
OPERATION	105		
General	106		
Battery Discharge Indicator Setting (BDI)	106		
Calibration for wet batteries	107		
TROUBLESHOOTING	108		
Traction Controller Safety Test	109		
M5 – BRAKE	PAGE	SER-N0. CUT	REV.
Brake	113		
Function	113		
Disassembly	113		
Assembly	115		
Air gap setting	115		
Brake moment setting	116		
Brake test	116		
Definition of run-in/new rotor	116		
General Notes	116		

M6 – DIRECTION	PAGE	SER-N0. CUT	REV.
Live ring bearing	121		
Disassembly	121		
Assembly	121		
M6 – DIRECTION	PAGE	SER-N0. CUT	REV.
Control handle return springs	122		
Adjustment	122		
Disassembly	122		
Assembly	122		
Control Handle Grip	123		
Main Components	123		
Hand grip component removal and assembly	124		
Hand Grip Shells	124		
Upper and lower shell removal	124		
Upper and lower shell assembly	125		
Switch Unit	126		
Disassembly	126		
Switch unit assembly	126		
“Rabbit/Turtle” toggle switch	127		
Disassembly	127		
Assembly	127		
Hydraulic PC board	127		
Disassembly	127		
Assembly	127		
Main PC Board Removal/Installation	128		
Potentiometer	129		
Disassembly	129		
Assembly	130		
Safety Reverse Switch	130		
Disassembly	130		
Assembly	130		
Horn switch	131		
Disassembly	131		
Assembly	132		
Hand Grip	132		
Disassembly	132		
Assembly	132		
M7 – MAST	PAGE	SER-N0. CUT	REV.
Mast	135		
General	135		
Torque Requirements	135		
Lifting Gear Minimum Capacity	135		
TL Mast	135		
TT Mast	135		
Mast Removal	135		
Installation	136		
Fork Carriage Removal	136		
Fork Carriage Installation	137		
Fork Carriage Adjustment	137		
Mast Maintenance	138		
Lubricating Roller Tracks	138		
Mast shims	139		
TL Mast Assembly	140		
TT Mast Assembly	141		

M7 – MAST	PAGE	SER-N0. CUT	REV.
Lift chains	142		
General	142		
Inspection	142		
Cleaning	142		
Wear	142		
Freedom of Movement of Chain Links	143		
Chain Tension	143		
Chain Anchor and Pulleys	144		
Worn Connection Plates	144		
Protruding or Turned Chain Pins	144		
Corrosion	144		
Chain Lateral Wear	145		
Uneven Chain Tension	145		
Misaligned Lift Components	145		
Lift Chain Lubrication	146		
Separating Lift Chains	147		
Tools and Equipment Required	147		
Detachment	147		
Fork Tines	148		
General	148		
Terms	148		
Fork Identification	148		
Repairs	148		
Fork Inspection	148		
Crack Inspection	148		
Verticality Test	149		
Fork Blade Warping	149		
Measuring the Fork Tip Width	149		
Fork Tine Height Difference	149		
Fork Stop	149		
Fork Blade Wear	150		
M8 – CYLINDERS	PAGE	SER-N0. CUT	REV.
Cylinders	153		
General	153		
Safety when working on hydraulic systems	153		
General Instructions for			
Repairing Hydraulic Components	153		
Rod Seal Assembly	154		
General	154		
Large Rod Seal Assembly	154		
Small Seal Rod Assembly	155		
Rod Seal Assembly, Sealing Lip First	156		
Cylinders	157		
Mast Lift Cylinder	157		
Seal Replacement	157		
Installing Mast Lift Cylinders	158		
Carriage Cylinder	159		
Seal Replacement	159		
Installing Carriage Cylinder	160		
Cylinder Bleeding and Flushing	160		
Bleeding — Mast Lift Cylinders	160		
Bleeding — Carriage Cylinder (if applicable)	160		
Flushing — Mast Lift Cylinders and Carriage			
Cylinder (if applicable)	160		
Drift Test	161		
Cylinder Shimming	161		
Secondary Cylinder Shim	161		

M8 – CYLINDERS	PAGE	SER-N0. CUT	REV.
Primary Cylinder Shim	161		
DIA – ELECTRICAL DIAGRAMS	PAGE	SER-N0. CUT	REV.
SX 3000 Standard	165		
Overview	165		
Traction Controller - Sem0 Logic	166		
Traction Controller - Sem0 Power Circuit	167		
Power Unit Control Circuit	168		
Control Handle - Control Circuit	169		
Hydraulic Control Module (HCM)	170		
SX 3000 with Options	171		
Overview	171		
Traction Controller - Sem0 Logic	172		
Traction Controller - Sem0 Power Circuit	173		
Power Unit - Control Circuit	174		
Control Handle - Control Circuit	175		
Hydraulic Control Module (HCM) - Travel Alarm and Flashing Beacon	176		
Wire Harness	177		
Control Handle Wiring	178		
Power Cables	179		
Terms	180		
HYD – HYDRAULIC SCHEMATIC	PAGE	SER-N0. CUT	REV.
SX 3000 Standard	183		
SX3000 with Sideshift	184		

Blank page

CROWN



SAFETY

BUY NOW

**Then Instant Download
the Complete Manual
Thank you very much!**