



# CROWN



**Service Manual**  
Wartungshandbuch  
Manuel de maintenance

**WP2000S** Series



---

# **CROWN**

## ***TABLE OF CONTENT***

---

---

Page intentionally left blank  
Seite absichtlich freigelassen  
Page intentionnellement laissée blanche

## Table of Content

<b>MA – SAFETY</b>	<b>PAGE</b>	<b>SER-NR. CUT</b>	<b>REV.</b>
<b>Safety Symbols used in the Manual</b> .....	<b>M/P-MA-0000-001</b>		
<b>General Maintenance and Repair Safety Notes</b> .....	<b>M/P-MA-0000-001</b>		
- Maintenance and Repair .....	M/P-MA-0000-002		
- Before Leaving the Truck .....	M/P-MA-0000-002		
- Before Carrying out Work on the Truck .....	M/P-MA-0000-002		
- Before Operating the Truck .....	M/P-MA-0000-002		
<b>Warnings and Labels on the Truck</b> .....	<b>M/P-MA-0000-002</b>		
<b>ITD – INTRODUCTION</b>	<b>PAGE</b>	<b>SER-NR. CUT</b>	<b>REV.</b>
<b>General</b> .....	<b>M/P-ITD-1720-501</b>		
- Operating instruction .....	M/P-ITD-1720-501		
- Service training .....	M/P-ITD-1720-501		
- Replacement parts orders .....	M/P-ITD-1720-501		
- Structure of the Manual .....	M/P-ITD-1720-501		
- Page Numbers .....	M/P-ITD-1720-502		
<b>Truck Data Numbering Sheet</b> .....	<b>M/P-ITD-1720-504</b>		
<b>M1 – LUBRICATION AND ADJUSTMENT</b>	<b>PAGE</b>	<b>SER-NR. CUT</b>	<b>REV.</b>
<b>Component Access</b> .....	<b>M-1.0-1720-001</b>		
<b>Jacking up the Truck</b> .....	<b>M-1.0-1720-001</b>		
<b>Lifting by Crane</b> .....	<b>M-1.0-1720-001</b>		
<b>Lifting by Truck</b> .....	<b>M-1.0-1720-002</b>		Rev.1 09/00
<b>Components</b> .....	<b>M-1.0-1720-003</b>		Rev.1 09/00
<b>Maintenance</b> .....	<b>M-1.1-1720-004</b>		
- Driver Participation .....	M-1.1-1720-001		
- Daily Maintenance Log .....	M-1.1-1720-001		
- Recommended Lubricants and Oils .....	M-1.1-1720-001		
- Lubricants .....	M-1.1-1720-001		
- Cold Store Trucks .....	M-1.1-1720-001		
- Check and Maintenance Schedule .....	M-1.2-1720-001		
- Safety Reverse Switch - Functional Test .....	M-1.2-1720-003		Rev.1 09/00
- Grease items and grease intervals .....	M-1.2-1720-010		Rev.1 09/00
<b>Adjustment of castor- and drivewheel pressure</b> .....	<b>M-1.5-1720-501</b>		
<b>Torques</b> .....	<b>M-1.9-0000-001</b>		
<b>M2 – HYDRAULICS</b>	<b>PAGE</b>	<b>SER-NR. CUT</b>	<b>REV.</b>
<b>Hydraulic Symbols</b> .....	<b>M-2.0-0000-001</b>		
<b>Hydraulic System</b> .....	<b>M-2.1-1720-001</b>		
- Removal .....	M-2.2-1720-001		
- Hydraulikpump .....	M-2.3-1720-001		
- Filter .....	M-2.3-1720-002		
- Pressure Filter .....	M-2.3-1720-002		
- Suction and Return Filters .....	M-2.3-1720-002		
- Oil Change .....	M-2.3-1720-002		
- Commissioning .....	M-2.3-1720-002		
<b>M3 – DRIVE UNIT</b>	<b>PAGE</b>	<b>SER-NR. CUT</b>	<b>REV.</b>
<b>Gear Unit</b> .....	<b>M-3.1-1720-501</b>		
- Removal .....	M-3.1-1720-501		
- Repair .....	M-3.1-1720-501		
- Disassembly/Assembly .....	M-3.1-1720-503		
- Installation .....	M-3.1-1720-505		

M4 – ELECTRICS	PAGE	SER-NR. CUT	REV.
<b>Electrics - General</b> .....	<b>M-4.0-0000-001</b>		
- Wire Colour Codes .....	M-4.0-0000-001		
- Abbreviations .....	M-4.0-0000-002		
- Electrical Symbols .....	M-4.0-0000-004		
<b>Electrical Components</b> .....	<b>M-4.2-1720-500</b>		
- Transmitter (POT, FS, RS) .....	M-4.2-1720-500		
- Fast / Slow Travel Switch (HSS) .....	M-4.2-1720-500		
- Reverse Safety Switch (SAS) .....	M-4.2-1720-500		
- Brake Switch (BRS) .....	M-4.2-1720-500		
- Override Switch (ORS) .....	M-4.2-1720-503		
- Lift / Lower Switch (RAS, LOS) .....	M-4.2-1720-503		
- Limit Switch (LMS) .....	M-4.2-1720-503		
- Horn Switch (HNS) .....	M-4.2-1720-503		
- Key Switch (KYS) .....	M-4.2-1720-503		
- Emergency Disconnect .....	M-4.2-1720-503		
- Fuses (FU) .....	M-4.2-1720-503		
- Temperature Switch (THS) (Freezer/Corrosion Truck only) .....	M-4.2-1720-503		
<b>SEM 1 Traction Controller</b> .....	<b>M-4.3-1720-001</b>		
General .....	M-4.3-1720-001		
- Precautionary Measures .....	M-4.3-1720-001		
Operational Features .....	M-4.3-1720-001		
- Speed Control .....	M-4.3-1720-001		
- Reduced Speed Ranges .....	M-4.3-1720-001		
- Downhill Speed Control .....	M-4.3-1720-001		
- Regenerative Braking .....	M-4.3-1720-001		
- Anti-Roll-Down-Function .....	M-4.3-1720-001		
- Hourmeter .....	M-4.3-1720-002		
- Self Test .....	M-4.3-1720-002		
- Monitored Circuits .....	M-4.3-1720-002		
Protective Devices .....	M-4.3-1720-003		
- Polarity Protection .....	M-4.3-1720-003		
- Wiring Errors .....	M-4.3-1720-003		
- Temperature .....	M-4.3-1720-003		
- Start Sequence .....	M-4.3-1720-003		
- Protective Class .....	M-4.3-1720-003		
Maintenance .....	M-4.3-1720-003		
Controller connections SEM-1 .....	M-4.3-1720-004		
- Pin Layout SEM-1 .....	M-4.3-1720-005		
- Status-LED .....	M-4.3-1720-006		
<b>Programmer</b> .....	<b>M-4.4-1720-001</b>		
General .....	M-4.4-1720-001		
Operating Menu Controller SEM-1 .....	M-4.4-1720-002		
- Operating Menu - Overview .....	M-4.4-1720-003		
- Menu Functions .....	M-4.4-1720-004		
Settings and Alarms .....	M-4.5-1720-001		
- Menue PARAMETER CHANGE .....	M-4.5-1720-001		
- Menue TESTER .....	M-4.5-1720-004		
- Menue ALARMS .....	M-4.5-1720-006		
- Menue PROGRAM VACC .....	M-4.5-1720-008		
- Menü CONFIG .....	M-4.5-1720-009		
<b>Traction Controller Safety Test</b> .....	<b>M-4.20-1720-001</b>		
<b>Battery</b> .....	<b>M-4.25-1720-001</b>		
Function .....	M-4.25-1720-001		
Reading the Electrolyte Level .....	M-4.25-1720-001		
Replacing the Battery .....	M-4.25-1720-001		
Removing the Battery .....	M-4.25-1720-001		
Charging the Battery .....	M-4.25-1720-002		

<b>Battery Discharge Indicator (BDI)</b> .....	<b>M-4.25-1720-002</b>		
- General .....	M-4.25-1720-002		
- Adjusting the Battery Discharge Indicator .....	M-4.25-1720-002		
<b>Traction / Pump Motor Maintenance</b> .....	<b>M-4.35-1720-001</b>		
- Access .....	M-4.35-1720-001		
-Maintenance .....	M-4.35-1720-001		
<b>M5 – BRAKE</b>	<b>PAGE</b>	<b>SER-NR. CUT</b>	<b>REV.</b>
<b>Brake</b> .....	<b>M-5.0-1720-501</b>		
- Function .....	M-5.0-1720-501		
- Removal .....	M-5.0-1720-501		
- Assembly .....	M-5.0-1720-502		
- Air Gap Setting .....	M-5.0-1720-502		
- Brake Moment Setting .....	M-5.0-1720-503		
- Testing the Brake .....	M-5.0-1720-503		
<b>M6 – STEERING</b>	<b>PAGE</b>	<b>SER-NR. CUT</b>	<b>REV.</b>
<b>Multitask Handle - Springs for Return Function</b> .....	<b>M-6.1-1720-501</b>		
- Adjustment .....	M-6.1-1720-501		
- Removal .....	M-6.1-1720-501		
- Assembly .....	M-6.1-1720-501		
<b>M7 – LIFTING MECHANISM</b>	<b>PAGE</b>	<b>SER-NR. CUT</b>	<b>REV.</b>
<b>Lift Linkage</b> .....	<b>M-7.0-1720-501</b>		
- Fork Height Setting .....	M-7.0-1720-002		
<b>M8 – CYLINDERS</b>	<b>PAGE</b>	<b>SER-NR. CUT</b>	<b>REV.</b>
<b>Lift Cylinders</b> .....	<b>M-8.1-1720-501</b>		
- Operation .....	M-8.1-1720-501		
- Removal .....	M-8.1-1720-501		
- Inspection .....	M-8.1-1720-503		
- Replacing the Piston Seal .....	M-8.1-1720-503		
<b>DIA – ELECTRICAL DIAGRAMS</b>	<b>PAGE</b>	<b>SER-NR. CUT</b>	<b>REV.</b>
<b>Standard Version</b> .....	<b>M/P-DIA-1720-001</b>		
- Schematic Diagram .....	M/P-DIA-1720-001		
- Traction Controller .....	M/P-DIA-1720-002		
- Power Unit Circuit .....	M/P-DIA-1720-004		
- Control Handle Circuit .....	M/P-DIA-1720-005		
- Walkie- / Rider Circuit .....	M/P-DIA-1720-006		
- Power Cables .....	M/P-DIA-1720-007		
- Main Harness .....	M/P-DIA-1720-008		
- Tiller Harness .....	M/P-DIA-1720-009		
<b>Freezer- / Corrosion Trucks</b> .....	<b>M/P-DIA-1720-010</b>		
- Schematic Diagram .....	M/P-DIA-1720-010		
- Traction Controller .....	M/P-DIA-1720-011		
- Power Unit Circuit .....	M/P-DIA-1720-013		
- Control Handle Circuit .....	M/P-DIA-1720-014		
- Walkie- / Rider Circuit .....	M/P-DIA-1720-015		
- Tiller Harness .....	M/P-DIA-1720-016		
<b>HYD – HYDRAULIC SCHEMATIC</b>	<b>PAGE</b>	<b>SER-NR. CUT</b>	<b>REV.</b>
Hydraulic Schematic .....	M-HYD-1720-501		

Page intentionally left blank  
Seite absichtlich freigelassen  
Page intentionnellement laissée blanche



---

**CROWN**

***SAFETY***

---

---

Page intentionally left blank  
Seite absichtlich freigelassen  
Page intentionnellement laissée blanche

## Safety Symbols used in the Manual

To help guide you through the manual and to highlight particular danger areas, we have used graphic illustrations:

### **DANGER**



**This symbol indicates life-threatening risks**

- Failure to comply with this notice may result in severe or fatal injuries to yourself or other people.

### **WARNING**



**This symbol indicates the risk of serious injury and/or serious material damage.**

- Failure to comply with this notice may result in severe injuries to yourself or other people and/or serious material damage.

### **CAUTION**



**This symbol indicates the risk of minor injury and/or minor material damage.**

- Failure to comply with this notice may result in minor injuries to yourself or other people and/or minor material damage.

### **INFORMATION**



**Contains additional information with supplementary notes and hints.**

### **OPTION**



**These items relate to optional features not supplied with the standard version.**

## General Maintenance and Repair Safety Notes

### **DANGER**



**Read the safety notices in the truck Maintenance and Operator's Manuals.**

- Failure to do so could result in severe or fatal injuries to maintenance personnel and/or other persons.

Motorised vehicles can be dangerous if maintenance and service are neglected. For this reason maintenance and inspections must be carried out at regular short intervals by trained personnel working to approved company guidelines.

## Maintenance and Repair

1. Maintenance work must only be carried out in accordance with the test and maintenance program contained in the present Maintenance Manual and any applicable service notices.
2. Only qualified and authorised personnel may carry out work on the truck.
3. Always keep fire extinguishers in good working condition. Do not approach fluid levels or leaks with a naked flame.
4. To clean, use a non flammable, non combustible cleaning solution which is groundwater-neutral. Only carry out cleaning with an oil separator. Protect the electrical system from dampness.
5. Keep the service area clean, dry and well-ventilated.
6. Do not allow oil to penetrate the ground or enter the draining system. Used oil must be recycled. Oil filters and desiccants must be treated as special waste products. Relevant applicable regulations must be followed.

7. Neutralise and thoroughly rinse any spilled battery fluid immediately.
8. Keep the truck clean. This will facilitate the location of loose or faulty components.
9. Make sure that capacity and data plates, warnings and labels are legible at all times.
10. Alterations or modifications by the owner or operator are not permitted without the express written authorisation from Crown.
11. Only use original Crown spare parts to ensure the reliability, safety and suitability of the Crown truck.

### Before Leaving the Truck

- Stop the truck.
- Lower the fork carriage fully.
- Apply the parking brake.
- Turn off the travel switch and remove the key.
- Block all wheels when parking on an uneven surface.

### Before Carrying out Work on the Truck

- Raise the truck to free the drive wheel. Press the emergency Stop button and disconnect the battery.
- Prevent the truck from rolling away.
- Before carrying out work on the hoist frame, the lift mast or on the fork carriage: Block these parts according to maintenance instructions in order to prevent them from dropping.
- Only carry out operational testing when there is sufficient room to manoeuvre, to avoid the risk of injury to yourself and others.

### Before Operating the Truck

- Check the safety devices.
- Get into the driver's seat.
- Check the operation of the lifting device, travel direction switch, speed control, steering, warning devices and brakes.

### Warnings and Labels on the Truck

During regular maintenance check that the warnings and labels on the truck are complete and legible.

- Clean any illegible labels.
- Replace any faulty or missing labels.

The order and meaning of the warnings and labels on the truck are described in section 10.9 of the parts manual.

---

**CROWN**

***INTRODUCTION***

---

---

Page intentionally left blank  
Seite absichtlich freigelassen  
Page intentionnellement laissée blanche

**BUY NOW**

**Then Instant Download  
the Complete Manual  
Thank you very much!**