

CROWN



Maintenance Manual



WP2300S Series

Overview of Revisions:

Page A	Rev.1 04/00	General corrections and additions to the text. Reference to authorised service personnel added.
Page 63	Rev.2 05/05	General corrections and additions to text. Additions to Safety Reverse Switch (SAS) Used from serial no. 5A336576, except for 5A337937. Additions to Brake Switch (BRS) Used from serial no. 5A336576, except for 5A337937.
Page 64	Rev.2 05/05	Additions to Platform Control Switches (GCSR, GCSL, PLS) Used from serial no. 5A336576, except for 5A337937.
Page 64_A	Rev.2 05/05	Additions to Platform Logic (PLM) Used from serial no. 5A336576, except for 5A337937.
Page 65_A	Rev.2 05/05	Updated diagram, addition to PLM.
Page 66_A	Rev.2 05/05	WP2340S diagram included.
Page 80_A	Rev.2 05/05	Parameter setting for trucks with folded platform. Parameter setting for trucks with fixed platform.
Page 88_A	Rev.2 05/05	Troubleshooting addition.
from page 102 up to page 112	Rev.2 05/05	General text corrections. Updates and additions: Control handle grip, Switch unit, fast/slow toggle switch, hydraulic PCB, main PCB removal/ installation, potentiometer, safety reverse switch, horn switch, hand grip.
from page 131	Rev.2 05/05	Corrections to diagrams and WP2340S addition.
from page 136	Rev.2 05/05	Wiring diagram updates. WP2340S addition.

Blank Page



TABLE OF CONTENT

Blank Page

Table of Content

REV– OVERVIEW OF REVISIONS	PAGE	SER-NR. CUT	REV.
Overview of Revisions:	A		Rev.2 05/2005
ITD – INTRODUCTION	PAGE	SER-NR. CUT	REV.
Safety Symbols used in the Manual	3		Rev.1 04/00
General Maintenance and Repair Safety Notes	3		
Maintenance and Repair	3		Rev.1 04/00
Before Leaving the Truck	4		
Before Carrying out Work on the Truck	4		
Before Operating the Truck	4		
Warnings and Labels on the Truck	4		
General	7		
Operating Instructions	7		
Service Training	7		
Ordering Spare Parts	7		
Using the Manual	7		
Model-Number	8		
M1 – LUBRICATION AND ADJUSTMENT	PAGE	SER-NR. CUT	REV.
Jacking up the Truck	11		
Raising the Truck with a Crane	11		
Fixed Platform	11		
Folding Platform	12		
Both Platforms	13		
Raising with a Forklift Truck	14		
Component Access and Components	15		
Maintenance	18		
Recommended Lubricants and Oils	18		
Lubricants	18		
Cold Store Trucks	18		
Truck Decommissioning	18		
Restoring the Truck to Service	18		
Check and Maintenance Schedule	20		
Safety Reverse Switch –			
Functional Test	22		
Grease items and grease intervals	30		
Adjusting the Contact Pressure of the Castors			
and the Drive Wheel	32		
Torques	33		
M2 – HYDRAULICS	PAGE	SER-NR. CUT	REV.
Hydraulic Symbols	37		
Hydraulic System	41		
Operation	41		
Removing the Hydraulic Unit	42		
Replacing the Hydraulic Pump	43		
Removal	43		
Installation	43		
Commissioning and Bleeding the System	43		
Filters	45		
Replacing the Pressure Filter	45		
Replacing the Suction and Return Filters	45		
Oil Change	45		
Replacing the Safety Valve	46		
Safety Valve Setting	46		
Safety Valve Test and Setting	46		

Testing and Setting the Load-Dependent Pressure Switch	47
--	----

M3 – DRIVE UNIT	PAGE	SER-NR. CUT	REV.
Gear Unit	51		
Preparatory Measures	51		
Removal	51		
Maintenance	51		
General	51		
Gear Unit Disassembly / Assembly	53		
Disassembly	53		
Assembly	53		
Preparing the Gear Unit	53		
Flange Shaft Assembly	53		
Pinion Shaft Assembly	54		
Adjusting the Bevel Gear Assembly	54		
Final Assembly	54		
Assembly	55		

M4 – ELECTRICS	PAGE	SER-NR. CUT	REV.
Electrics - General	59		
Wire Colour Codes	59		
Abbreviations	60		
Electrical Symbols	62		
Electrical Components	63		
Travel Switch (POT, FS, RS)	63		
Fast/Slow Switch (HSS)	63		
Safety Reverse Switch (SAS)	63		
Safety Reverse Switch (SAS)	63	Used from serial no. 5A336576, except for 5A337937.	Rev.2 05/2005
Brake Switch (BRS)	63		
Brake Switch (BRS)	63	Used from serial no. 5A336576, except for 5A337937.	Rev.2 05/2005
Raise/Lower Switch (RAS, LOS)	64		
Pressure Switch (PS)	64		
Platform Control Switches (GCSR, GCSL, PLS)	64		
Platform Control Switches (GCSR, GCSL, PLS)	64	Used from serial no. 5A336576, except for 5A337937.	Rev.2 05/2005
Lift Limit Switch (LMS)	64		
Horn Switch (HNS)	64		
Foot Switch (FTS)	64		
Key Switch (KYS)	64		
Emergency Disconnect (BD)	64		
Fuses (FU)	64		
OPTION Thermal Switch (THS)	64		
Filter (WP2340S only)	64		Rev.2 05/2005
Diode D4	64		Rev.2 05/2005
Diode block (DB)	64		Rev.2 05/2005
Platform Logic (PLM)	64_A	Used from serial no. 5A336576, except for 5A337937.	Rev.2 05/2005
WP2330S	65		
WP2330S	65_A		Rev.2 05/2005
WP2335S	66_A		Rev.2 05/2005
WP2340S	66_A		Rev.2 05/2005
Battery	67		

General	67	
Replacing the battery	67	
Battery Discharge Indicator (BDI)	67	
General	67	
Battery Discharge Indicator Setting (BDI)	68	
Calibration	68	
SEM1 Traction Controller	69	
General	69	
Precautionary Measures	69	
Operational Features	69	
Speed Control	69	
Reduced Speed Ranges	69	
Downhill Speed Control	69	
Regenerative Braking	69	
Anti - Roll Down Function	69	
Hourmeter	70	
Self Test	70	
Monitored Circuits	70	
Protective Devices	70	
Polarity Protection	70	
Wiring Errors	70	
Temperature	70	
Start Sequence	71	
Safety Class	71	
Maintenance	71	
Replacing the SEM1 Traction Controller	72	
Parameter Setting after Replacing the Traction Controller	72	
Preparatory Measures	72	
Setting	72	
Status LED	74	
Programmer	75	
General	75	
Operating SEM1 Controller Menu	76	
General	76	
Menu Functions	76	
PARAMETER CHANGE	76	
Menu Structure for Folded Platform	77	
Menu Structure for Fixed Platform	78	
Parameter Setting, Folded Platform	79	
Parameter Setting, Fixed Platform	80	
Parameter Setting, Folded or Fixed Platform	80_A	Rev.2 05/2005
Parameter Setting, Fixed Platform	80	
TESTER Menu	82	
ALARMS Menu	83	
Calibrating the Traction Pod Potentiometer, PROGRAM VACC menu	86	
Preparatory Measures	86	
Calibration	86	
CONFIG Menu	87	
SET MODEL	87	
SET OPTIONS	87	
Adjustments	87	
Traction Controller Safety Test	88	
Troubleshooting Platform Logic, Controller PN 815144	88_A	Rev.2 05/2005
Electric Motors	89	
General Maintenance Instructions	89	
Preparation	89	
Important Maintenance Instructions	89	
Traction Motor Maintenance	90	
Access to Brushes	90	

Maintenance	90
Armature	90
Bearings	90
Pump Motor Maintenance	91
Access to brushes	91
Maintenance	91
Armature	91

M5 – BRAKE	PAGE	SER-NR. CUT	REV.
Brake	95		
Removal	95		
Disassembly	96		
Test and Inspection	96		
Assembly	96		
Assembly	97		
Air Gap Setting	97		
Brake Moment Setting	98		
Testing the Brakes	98		

M6 – STEERING	PAGE	SER-NR. CUT	REV.
Multitask Handle - Springs for			
Return Function	101		
Adjustment	101		
Removal	101		
Assembly	101		
Tiller Handle	103		
Main Components	103		
Tiller Handle Component			
Removal / Installation	104		
Tiller Handle Shells	104		
Removing the Upper and Lower Shells	104		
Fitting the Upper and Lower Shells	105		
Switch Unit	106		
Removal	106		
Switch Unit Installation	106		
"Fast/Slow" Toggle Switch	107		
Removal	107		
Installation	107		
Hydraulic Board	107		
Removal	107		
Installation	107		
Main PC Board Removal/Installation	107_B		Rev.2 05/2005
Potentiometer	108		
Removal	108		
Installation	108		
Safety Reverse Switch	109		
Removal	109		
Installation	109		
Horn Switch	110		
Removal	110		
Installation	110		
Handle	111		
Removal	111		
Installation	111		

M7 – LIFTING MECHANISM	PAGE	SER-NR. CUT	REV.
Lift Linkage	115		
Fork Height Setting	115		
Lift Limit Cutout	117		
Lift Limit Cutout Setting	117		

M8 – CYLINDERS	PAGE	SER-NR. CUT	REV.
Lift Cylinders	121		
Operation	121		
Removal	121		
Inspection	123		
Replacing the Piston Seal	123		
M9 – PLATFORM	PAGE	SER-NR. CUT	REV.
Folding Platform	127		
Mechanical Setting	127		
Platform Switch Setting (PLS)	128		
Platform Suspension	129		
Plate Spring Layers	129		
Side Gates, Mechanical Setting	130		
Fixed Platform WP2335S	131		
Replacing the Savety Switch	131		
Fixed Platform WP2340S	131_A		Rev.2 05/2005
Replacing the Savety Switch	131_A		Rev.2 05/2005
Fixed Platform WP2340S	132_A		Rev.2 05/2005
Replacing Switches below the Entry Bars (FPS 1 & FPS 2)	132_A		Rev.2 05/2005
DIA – ELECTRICAL DIAGRAMS	PAGE	SER-NR. CUT	REV.
Notes to overall wiring diagram, standard version, folded platform, WP2330S	136		Rev.2 05/2005
Overall Wiring Diagram, Standard, Folded Platform, WP2330S	137		Rev.2 05/2005
SCHEMATIC DIAGRAM	138		Rev.2 05/2005
TRACTION CONTROLLER - SEM1 LOGIC CIRCUIT	138		Rev.2 05/2005
TRACTION CONTROLLER - SEM1 POWER CIRCUIT ...	139		Rev.2 05/2005
PLATFORM CIRCUIT	139		Rev.2 05/2005
POWER UNIT CIRCUIT	140		Rev.2 05/2005
CONTROL HANDLE CIRCUIT	140		Rev.2 05/2005
PLATFORM LOGIC	141		Rev.2 05/2005
Notes to overall wiring diagram, with Options, folded platform, WP2330S	142		Rev.2 05/2005
Overall Wiring Diagram, with Options, Folded Platform, WP2330S	143		Rev.2 05/2005
SCHEMATIC DIAGRAM	144		Rev.2 05/2005
TRACTION CONTROLLER - SEM1 LOGIC CIRCUIT	144		Rev.2 05/2005
TRACTION CONTROLLER - SEM1 POWER CIRCUIT ...	145		Rev.2 05/2005
PLATFORM CIRCUIT	145		Rev.2 05/2005
POWER UNIT CIRCUIT	146		Rev.2 05/2005
CONTROL HANDLE CIRCUIT	146		Rev.2 05/2005
PLATFORM LOGIC	147		Rev.2 05/2005
Notes to overall wiring diagram, standard version, fixed platform, WP2335S	148		Rev.2 05/2005
Overall Wiring Diagram, Standard Version, Fixed Platform, WP2335S	149		Rev.2 05/2005
Notes to overall wiring diagram, with Options, fixed platform, WP2335S	150		Rev.2 05/2005
Overall Wiring Diagram, with Options, Fixed Platform, WP2335S	151		Rev.2 05/2005
Diagrams, Standard Version, Fixed Platform, WP2340S ...	152		Rev.2 05/2005
SCHEMATIC DIAGRAM	152		Rev.2 05/2005
TRACTION CONTROLLER - SEM1 LOGIC CIRCUIT	152		Rev.2 05/2005
POWER CIRCUIT - TRACTION & PUMP MOTOR	153		Rev.2 05/2005
PLATFORM CIRCUIT	153		Rev.2 05/2005
POWER UNIT CIRCUIT	154		Rev.2 05/2005
CONTROL HANDLE CIRCUIT	154		Rev.2 05/2005
Diagrams, with Options, Fixed Platform, WP2340S	155		Rev.2 05/2005

SCHMATIC DIAGRAM	155	Rev.2 05/2005
TRACTION CONTROLLER - SEM1 LOGIC CIRCUIT	155	Rev.2 05/2005
POWER CIRCUIT - TRACTION & PUMP MOTOR	156	Rev.2 05/2005
PLATFORM CIRCUIT	156	Rev.2 05/2005
POWER UNIT CIRCUIT	157	Rev.2 05/2005
CONTROL HANDLE CIRCUIT	157	Rev.2 05/2005
Wire harness overview, folded platform,		
WP2330S all versions	158	Rev.2 05/2005
Main Harness, Folded Platform, WP2330S, All Versions ..	159	Rev.2 05/2005
Control Handle - Wire Harness Folded Platform,		
WP2330S, All Versions	160	Rev.2 05/2005
Horn Switch - Wire Harness, Folded Platform,		
WP2330S, All Versions	161	Rev.2 05/2005
Wire harness overview, Fixed Platform,		
WP2340S, All Versions	162	Rev.2 05/2005
Wire harness overview, Fixed Platform,		
WP2340S, All Versions	163	Rev.2 05/2005
Control Handle - Wire Harness FFixed Platform,		
WP2340S, All Versions	164	Rev.2 05/2005
Horn Switch - Wire Harness Fixed Platform,		
WP2340S, All Versions	165	Rev.2 05/2005
Cables, Platform, Fixed Platform, WP2340S,		
All Versions	166	Rev.2 05/2005
Power Cables	167	
HYD – HYDRAULIC SCHEMATIC	PAGE	SER-NR. CUT
Hydraulic Schematic	171	REV.

CROWN



SAFETY

Blank Page

Safety Symbols used in the Manual

To help guide you through the manual and to highlight particular danger areas, we have used graphic illustrations:

DANGER



This symbol indicates life-threatening risks

- Failure to comply with this notice may result in severe or fatal injuries to yourself or other people.

WARNING



This symbol indicates the risk of serious injury and/or serious material damage.

- Failure to comply with this notice may result in severe injuries to yourself or other people and/or serious material damage.

CAUTION



This symbol indicates the risk of minor injury and/or minor material damage.

- Failure to comply with this notice may result in minor injuries to yourself or other people and/or minor material damage.

INFORMATION



Contains additional information with supplementary notes and hints.

OPTION



These items relate to optional features not supplied with the standard version.

General Maintenance and Repair Safety Notes

DANGER



Read the safety notices in the truck Maintenance and Operator's Manuals.

- Failure to do so could result in severe or fatal injuries to maintenance personnel and/or other persons.

Motorised vehicles can be dangerous if maintenance and service are neglected. For this reason maintenance and inspections must be carried out at regular short intervals by trained personnel working to approved company guidelines.

DANGER



Follow all national/local safety regulations applicable for maintenance work, e.g. for work on higher levels.

- Failure to do so could result in severe or fatal injuries to maintenance personnel and/or other persons.

Maintenance and Repair

1. Maintenance work must only be carried out in accordance with the test and maintenance program contained in the present Maintenance Manual and any applicable service notices.
2. Only qualified and authorised personnel may carry out work on the truck.
3. Always keep fire extinguishers in good working condition. Do not approach fluid levels or leaks with a naked flame.
4. To clean, use a non flammable, non combustible cleaning solution which is groundwater-neutral. Only carry out cleaning with an oil separator. Protect the electrical system from dampness.
5. Keep the service area clean, dry and well-ventilated.
6. Do not allow oil to penetrate the ground or enter the draining system. Used oil must be recycled. Oil filters and desiccants must be treated as special waste products. Relevant applicable regulations must be followed.
7. Neutralise and thoroughly rinse any spilled battery fluid immediately.

8. Keep the truck clean. This will facilitate the location of loose or faulty components.
9. Make sure that capacity and data plates, warnings and labels are legible at all times.
10. Alterations or modifications by the owner or operator are not permitted without the express written authorisation from Crown.
11. Only use original Crown spare parts to ensure the reliability, safety and suitability of the Crown truck.

Warnings and Labels on the Truck

During regular maintenance check that the warnings and labels on the truck are complete and legible.

- Clean any illegible labels.
- Replace any faulty or missing labels.

The order and meaning of the warnings and labels on the truck are described in section 10.9 of the parts manual.

Before Leaving the Truck

- Stop the truck.
- Lower the fork carriage fully.
- Apply the parking brake.
- Turn off the truck and remove the key.
- Block all wheels when parking on an uneven surface.

Before Carrying out Work on the Truck

- Raise the truck to free the drive wheel. Press the emergency Stop button and disconnect the battery.
- Prevent the truck from rolling away.
- Before carrying out work on the hoist frame, the lift mast or on the fork carriage: Block these parts according to maintenance instructions in order to prevent them from dropping.
- Only carry out operational testing when there is sufficient room to manoeuvre, to avoid the risk of injury to yourself and others.

Before Operating the Truck

- Check the safety devices.
- Get into the driver's seat.
- Check the operation of the lifting device, travel direction switch, speed control, steering, warning devices and brakes.



INTRODUCTION


Blank Page

General

The present manual is designed for Customer Service engineers who wish to familiarise themselves with the maintenance work required for the various truck components.

It also contains troubleshooting sections which can be used to identify and remedy truck faults.

INFORMATION

 *This book is not an operating manual. It is designed solely for specialist personnel who have been trained and authorised to carry out the work described in the manual.*

This manual therefore contains fewer and less detailed warnings than the Operator's Manual, as the latter is aimed at persons who have very little or no prior experience at all.

Operating Instructions

This manual contains no operating instructions. An operating instructions manual is supplied with the vehicle. Additional copies can be ordered as required.

With the help of this manual you and your personnel will be able to ensure the long service life, operational safety and error free functioning of your CROWN vehicle.

Service Training

CROWN offers the appropriate vehicle related training for service personnel. Details on this training can be obtained from CROWN on request.

Ordering Spare Parts

The maintenance manual does not cover spare parts. These are listed in a separate manual.

Spare parts can be ordered by quoting:

- The truck specification number
- The truck model number
- The truck serial number

This information can be found on the truck's data plate. Only if this information is provided can the order be processed quickly, correctly and reliably.

Please refer to the Technical Specifications Sheet for the utilisable loads, technical data and dimensions for this series. Brochures can be obtained from your CROWN dealer or from the following address:

CROWN Gabelstapler GmbH & Co.KG
Moosacher Str. 52
80809 Munich
GERMANY
Tel.: +49 (0)89 / 93 002 -0
Fax: +49 (0)89 / 93 002 -175 oder 133

Using the Manual


The manual is divided into sections. The following table shows how the manual is structured.

Sections Maintenance	
Section	Description
IDX	Table of Content
MA	Safety
ITD	Introduction
M1	Lubrication and Adjustment
M2	Hydraulics
M3	Drive Unit
M4	Electrical
M5	Brake
M6	Steering
M7	Mast / Lifting Mechanism
M8	Cylinder
DIA	Electrical Diagrams
HYD	Hydraulic Schematic

A01M-gb

Model-Number

This manual describes the maintenance and repairs for the following truck versions:

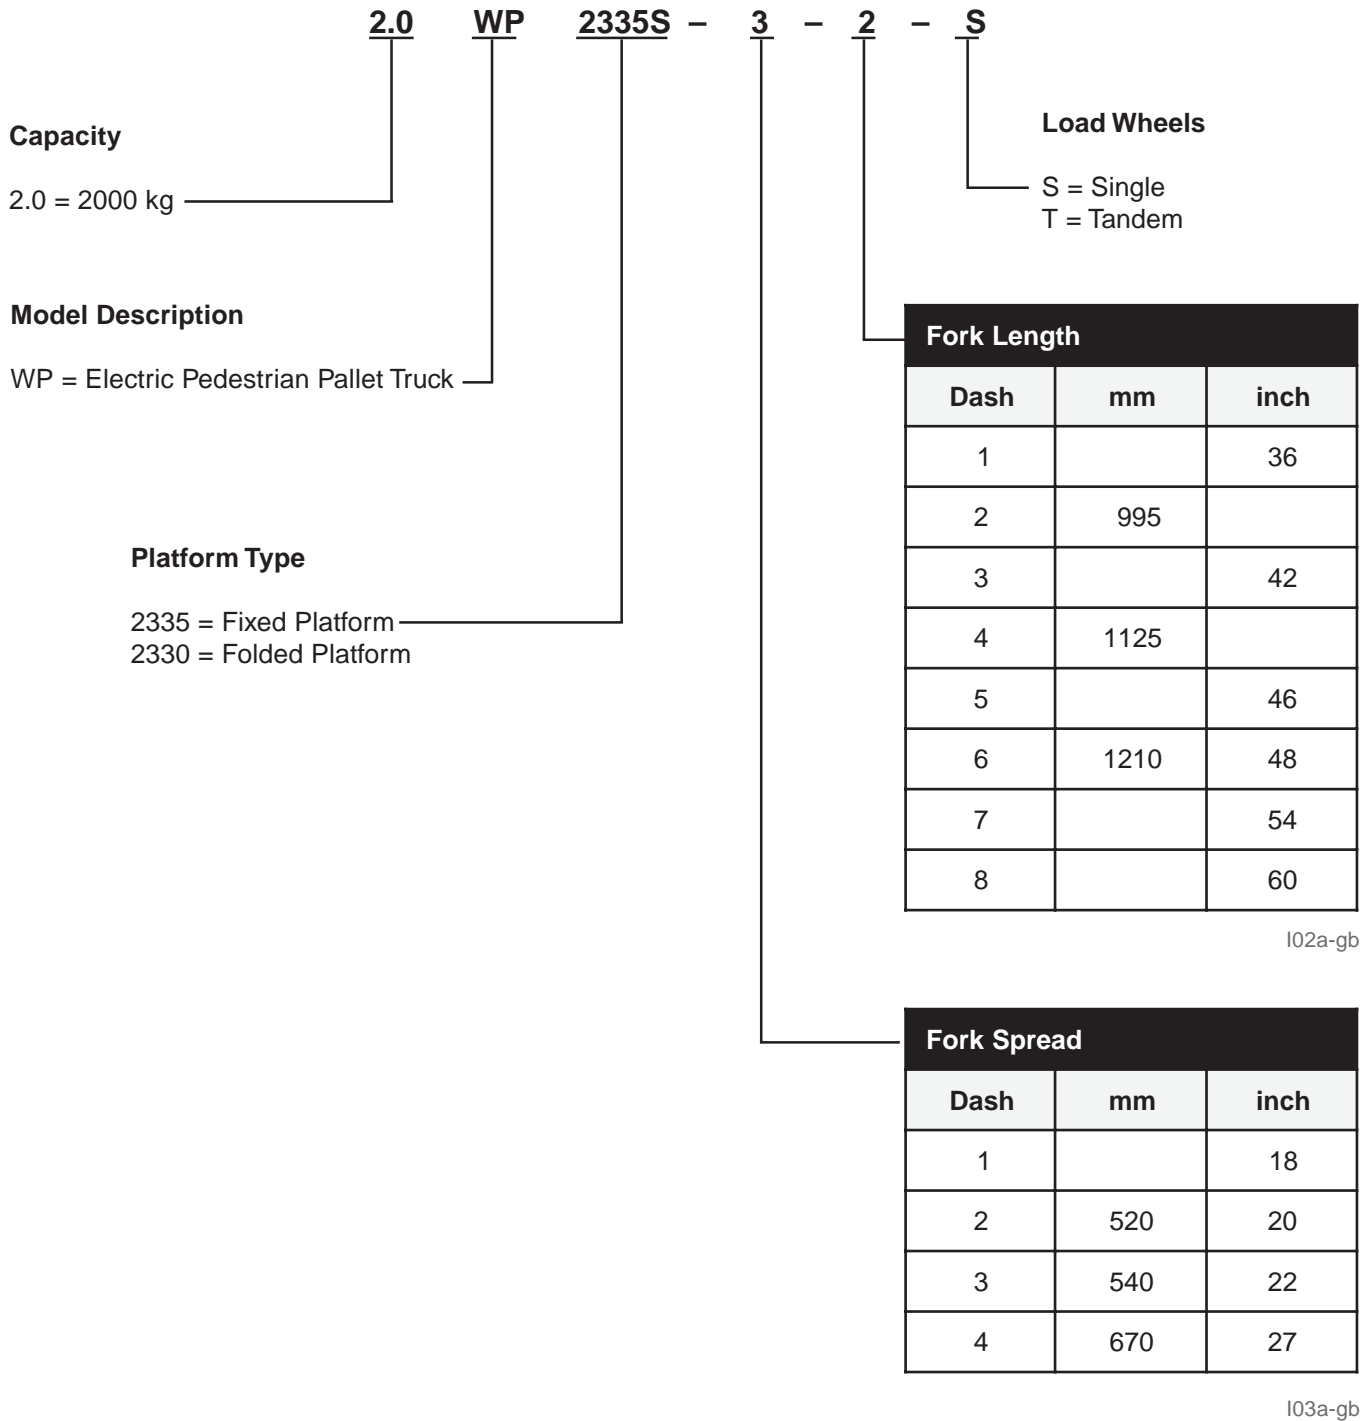

BUY NOW

**Then Instant Download
the Complete Manual
Thank you very much!**