



# Service Manual

**Our energy working for you.™**



**Power  
Generation**

## **Transfer Switch** **1600–3000 Amps**

BTPCF (Spec C)

BTPCG (Spec C)

BTPCH (Spec C)

# Table of Contents

---

| SECTION   | TITLE                                                      | PAGE       |
|-----------|------------------------------------------------------------|------------|
|           | <b>SAFETY PRECAUTIONS</b> .....                            | <b>vi</b>  |
| <b>1.</b> | <b>INTRODUCTION</b> .....                                  | <b>1-1</b> |
|           | About This Manual .....                                    | 1-1        |
|           | Transfer Switch Application .....                          | 1-1        |
|           | Bypass Switch Function .....                               | 1-2        |
|           | Drawout Isolation Mechanism .....                          | 1-2        |
|           | Utility-to-Genset Operation .....                          | 1-2        |
|           | Utility-to-Utility Operation .....                         | 1-2        |
|           | Genset-to-Genset Operation .....                           | 1-2        |
|           | Preferred Source Selection .....                           | 1-2        |
|           | Prime Power (Plant to Plant) Operation .....               | 1-2        |
|           | Dual Stand-By Operation .....                              | 1-5        |
|           | Removing and Replacing Electronic Control Components ..... | 1-7        |
|           | Model Identification .....                                 | 1-7        |
|           | How to Obtain Service .....                                | 1-7        |
| <b>2.</b> | <b>COMPONENT DESCRIPTION</b> .....                         | <b>2-1</b> |
|           | Cabinet .....                                              | 2-1        |
|           | Control Panel .....                                        | 2-1        |
|           | Bar Graph Meter Panel .....                                | 2-2        |
|           | Switch Panel .....                                         | 2-2        |
|           | Indicators .....                                           | 2-2        |
|           | Pushbuttons .....                                          | 2-2        |
|           | Digital Display .....                                      | 2-2        |
|           | Bypass Switch .....                                        | 2-3        |
|           | Contact Assemblies .....                                   | 2-3        |
|           | Auxillary Contacts .....                                   | 2-3        |
|           | Bypass Switch Controls .....                               | 2-3        |
|           | Indicators .....                                           | 2-3        |
|           | Drawout-Isolation Mechanism .....                          | 2-4        |
|           | Drawout Cranking Handle .....                              | 2-4        |
|           | Automatic Transfer Switch .....                            | 2-4        |
|           | Contact Assemblies .....                                   | 2-4        |
|           | Solenoids .....                                            | 2-5        |
|           | Motor Disconnect Switch .....                              | 2-5        |
|           | Auxiliary Contacts .....                                   | 2-5        |
|           | Electronic Control System .....                            | 2-5        |
|           | Electronic Control Circuit Modules .....                   | 2-6        |

| SECTION   | TITLE                                        | PAGE       |
|-----------|----------------------------------------------|------------|
|           | Digital Module .....                         | 2-6        |
|           | Power Module .....                           | 2-6        |
|           | Time Delays .....                            | 2-7        |
|           | System Sensors .....                         | 2-8        |
|           | Two-Wire Starting .....                      | 2-10       |
|           | Transfer Times .....                         | 2-10       |
|           | Testing With or Without Load .....           | 2-10       |
|           | Generator Exercise Programs .....            | 2-10       |
|           | Change Over Clock .....                      | 2-10       |
|           | Real-Time Clock .....                        | 2-10       |
|           | Control Options .....                        | 2-10       |
|           | Relay Module .....                           | 2-10       |
|           | Load Monitoring .....                        | 2-12       |
|           | Remote Test Transfer .....                   | 2-12       |
|           | Auxiliary Relays .....                       | 2-12       |
|           | Battery Charger Options .....                | 2-12       |
|           | Float Battery Charger Options .....          | 2-12       |
|           | 2-Amp Battery Charger .....                  | 2-13       |
|           | 15/12-Amp Battery Charger .....              | 2-13       |
|           | Load Shed .....                              | 2-16       |
|           | Security Key Switch .....                    | 2-16       |
|           | PowerCommand Network Interface Module .....  | 2-16       |
| <b>3.</b> | <b>OPERATION .....</b>                       | <b>3-1</b> |
|           | Automatic Operation .....                    | 3-1        |
|           | Bypassing the Transfer Switch .....          | 3-2        |
|           | Bypassing Load to Normal (Source 1) .....    | 3-2        |
|           | Bypassing Load to Emergency (Source 2) ..... | 3-2        |
|           | Isolating the Transfer Switch .....          | 3-3        |
|           | Reconnecting the Transfer Switch .....       | 3-4        |
|           | Manual Operation .....                       | 3-5        |
|           | Manual Transfer to Source 2 .....            | 3-5        |
|           | Manual Transfer to Source 1 .....            | 3-5        |
|           | System Testing .....                         | 3-6        |
|           | Generator Set Start Test .....               | 3-6        |
|           | With Load Standby Test .....                 | 3-6        |
|           | Non-Load Break Transfer Switch Test .....    | 3-7        |
|           | Generator Set Exercise .....                 | 3-8        |
| <b>4.</b> | <b>DIGITAL DISPLAY MENU SYSTEM .....</b>     | <b>4-1</b> |
|           | Main Menus .....                             | 4-1        |
|           | Setup Menus .....                            | 4-1        |
|           | Navigation .....                             | 4-1        |

| SECTION   | TITLE                                                             | PAGE       |
|-----------|-------------------------------------------------------------------|------------|
|           | Main Menu Navigation .....                                        | 4-2        |
|           | Using the Previous Menu Button .....                              | 4-2        |
|           | Main Menu Descriptions .....                                      | 4-3        |
|           | Source 1 and Source 2 Submenus .....                              | 4-4        |
|           | Load Submenus .....                                               | 4-5        |
|           | Events Submenus .....                                             | 4-7        |
|           | Setup Submenus .....                                              | 4-8        |
|           | Setup Menu Navigation and Description .....                       | 4-9        |
|           | Sync Check Submenus .....                                         | 4-13       |
|           | Test Submenus .....                                               | 4-15       |
|           | Clock Submenus .....                                              | 4-21       |
|           | Sequencer Submenus .....                                          | 4-22       |
|           | System Submenus .....                                             | 4-25       |
| <b>5.</b> | <b>TROUBLESHOOTING .....</b>                                      | <b>5-1</b> |
|           | InPower Service Tool .....                                        | 5-1        |
|           | About Network Applications and Customer Inputs .....              | 5-1        |
|           | Digital Module .....                                              | 5-2        |
|           | Power Module .....                                                | 5-2        |
|           | Control LED Indicators and Switch .....                           | 5-2        |
|           | LED Indicators .....                                              | 5-2        |
|           | Exerciser Enable/Disable Switch .....                             | 5-2        |
|           | Sequence of Events .....                                          | 5-3        |
|           | Transfer from Source 1 to Source 2 in Programmed Transition ..... | 5-3        |
|           | Transfer from Source 2 to Source 1 .....                          | 5-4        |
|           | Troubleshooting Using Fault Codes .....                           | 5-5        |
|           | Fault Events .....                                                | 5-5        |
|           | Fault Flash-Out .....                                             | 5-5        |
| <b>6.</b> | <b>AUTOMATIC TRANSFER SWITCH SERVICE .....</b>                    | <b>6-1</b> |
|           | General .....                                                     | 6-1        |
|           | Membrane Switch Test .....                                        | 6-1        |
|           | Power Module Test .....                                           | 6-2        |
|           | Digital Board Replacement .....                                   | 6-3        |
|           | Initial Calibration .....                                         | 6-3        |
|           | Setup with a Capture File .....                                   | 6-3        |
|           | Setup Without a Capture File .....                                | 6-3        |
|           | After the Setup is Completed .....                                | 6-3        |
|           | Removing the Automatic Transfer Switch .....                      | 6-6        |
|           | Bypass, Isolate, and Remove the Automatic Transfer Switch .....   | 6-6        |
|           | To Bypass and Isolate the Automatic Transfer Switch .....         | 6-6        |

| SECTION   | TITLE                                                                             | PAGE       |
|-----------|-----------------------------------------------------------------------------------|------------|
|           | To Remove the Automatic Transfer Switch .....                                     | 6-9        |
|           | Install and Reconnect the Automatic Transfer Switch (When Finished) .....         | 6-10       |
|           | To Install the Automatic Transfer Switch (1600- to 3000-Amp Bypass) ....          | 6-10       |
|           | To Reconnect the Automatic Transfer Switch .....                                  | 6-12       |
|           | Operator Solenoid Removal and Replacement .....                                   | 6-12       |
|           | Removing Actuator Solenoid .....                                                  | 6-12       |
|           | Replacing Actuator Solenoid .....                                                 | 6-13       |
|           | Movable Contact Assembly Removal and Replacement<br>(1600 – 2000 Amperes) .....   | 6-14       |
|           | Removing the Contact Assembly .....                                               | 6-14       |
|           | Replacing the Contact Assembly .....                                              | 6-14       |
|           | Movable Contact Assembly Removal and Replacement (3000 Amperes) .....             | 6-17       |
|           | Removing the Contact Assembly .....                                               | 6-17       |
|           | Replacing the Contact Assembly .....                                              | 6-20       |
|           | Auxiliary Switch Removal and Replacement .....                                    | 6-21       |
|           | Removing and Replacing an Auxiliary Switch Assembly. ....                         | 6-21       |
|           | Mis-Wired Current Transformers .....                                              | 6-22       |
| <b>7.</b> | <b>BYPASS SWITCH SERVICE .....</b>                                                | <b>7-1</b> |
|           | General .....                                                                     | 7-1        |
|           | Disconnect AC Power .....                                                         | 7-1        |
|           | Reconnecting AC Power (When Finished) .....                                       | 7-1        |
|           | Movable Contact Assembly Removable and Replacement (1600 – 2000 Amperes) .<br>7-1 |            |
|           | Removing the Contact Assembly .....                                               | 7-1        |
|           | Replacing the Contact Assembly .....                                              | 7-1        |
|           | Movable Contact Assembly Removal and Replacement (3000 Amperes) .....             | 7-5        |
|           | Removing the Contact Assembly .....                                               | 7-5        |
|           | Replacing the Contact Assembly .....                                              | 7-8        |
| <b>8.</b> | <b>SCHEMATICS .....</b>                                                           | <b>8-1</b> |

**BUY NOW**

**Then Instant Download  
the Complete Manual  
Thank you very much!**



