



# Service Manual

Our energy working for you.™



## Generator Set with PowerCommand® 1302 Controller

C275 D5/C250 D6  
C300 D5/C275 D6  
C330 D5/C300 D6

# Table of Contents

---

SECTION	TITLE	PAGE
	<b>IMPORTANT SAFETY INSTRUCTIONS</b> .....	iii
<b>1</b>	<b>INTRODUCTION</b>	
	About this Manual .....	1-1
	Generator Set .....	1-1
	System Overview .....	1-1
	Test Equipment .....	1-1
	How to Obtain Service .....	1-2
<b>2</b>	<b>CONTROL OPERATION</b>	
	General .....	2-1
	Control Panel Power On/Off Modes .....	2-1
	Front Panel .....	2-2
	Control Panel .....	2-3
	System Messages .....	2-6
	Selecting Auto, Manual Run and Off Modes .....	2-9
	Operator Menus .....	2-12
	Service Menus .....	2-16
	History/About Menu .....	2-18
	Screen Adjust Menu .....	2-20
	Fault History Menu .....	2-22
<b>3</b>	<b>CIRCUIT BOARD</b>	
	General .....	3-1
	Control System Overview .....	3-3
	Base Board .....	3-4
<b>4</b>	<b>TROUBLESHOOTING</b>	
	General .....	4-1
	InPower Service Tool .....	4-1
	Network Applications and Customer Inputs .....	4-1
	Safety Consideration .....	4-2
	Reading Fault Codes .....	4-2
	Troubleshooting Procedure .....	4-3

<b>SECTION</b>	<b>TITLE</b>	<b>PAGE</b>
<b>5</b>	<b>CONTROL ADJUSTMENT AND SERVICE</b>	
	General .....	5-1
	Circuit Board Removal/Replacement .....	5-2
	Setup Menu .....	5-3
	Genset Service Menus .....	5-6
	Genset Service Submenus .....	5-6
	Automatic Voltage Regulator Submenus .....	5-14
	Electronic Governor Submenus .....	5-16
	Customer I/O Submenus .....	5-18
	Metering Submenus .....	5-24
	Annunciator Submenus .....	5-26
	Genset Setup Submenus .....	5-33
	Genset Submenus .....	5-36
	Voltage Protection Submenus .....	5-42
	Current Protection Submenus .....	5-44
	Engine Protection Submenus .....	5-46
	TB1 Base Board Customer Connections .....	5-52
	Auxiliary I/O Module (Optional) .....	5-53
	Optional Relays (K10, K11) .....	5-53
	Current Transformer (CT) Installation .....	5-54
<b>6</b>	<b>SERVICING THE GENERATOR</b>	
	General .....	6-1
	Generator/Base Board Isolation Procedure .....	6-2
	Testing the Generator .....	6-3
	Testing the PMG .....	6-9
	Bearing Removal/Replacement .....	6-10
	Generator Disassembly .....	6-11
	Generator Reassembly .....	6-20
<b>7</b>	<b>WIRING DIAGRAMS</b>	
	General .....	7-1
<b>A</b>	<b>MENU SEQUENCE DIAGRAMS</b>	
	General .....	A-1

**BUY NOW**

**Then Instant Download  
the Complete Manual  
Thank you very much!**

