


Service Manual

Detector[™] Control Generator Sets

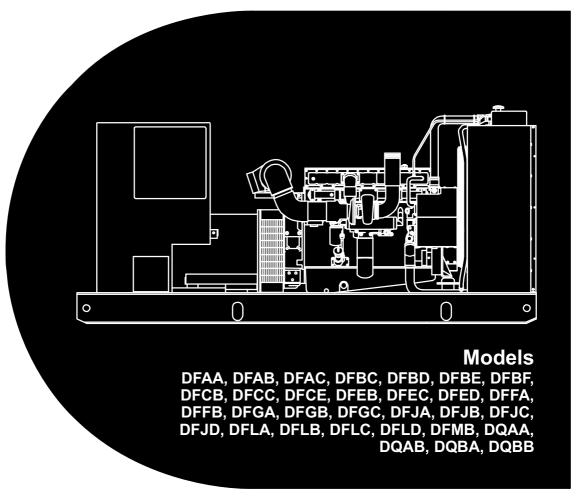

Printed in U.S.A. 960-0504 5-2001



Table of Contents

SECTION	TITLE	PAGE
	IMPORTANT SAFETY INSTRUCTIONS	iii, iv
1	INTRODUCTION	
	About this Manual	1-1
	Test Equipment	1-1
	How To Obtain Service	1-2
	Control and Generator Overview	1-2
2	AC CONTROL	2-1
	General	2-1
	Standard Control Panel Components	
	Optional Control Panel Components	2-1
	Principle Of Generator Operation	
	Automatic Voltage Regulator (AVR) Adjustments	2-2
	Optional Circuit Breaker	2-6
3	ENGINE CONTROL	3-1
	General	3-1
	Standard Control Components	3-1
	Optional Control Components	3-2
	Control Box Interior	3-4
	Engine Control Monitor (A11)	
	Engine Sensors	
	Auxiliary Control Components	
	Sequence Of Operation	3-16
4	TROUBLESHOOTING	
	The Engine Does Not Crank In Run Mode	
	The Engine Does Not Crank In Remote Mode	
	The Engine Cranks But Does Not Start	
	The Engine Runs Until Fault Shutdown	
	The Engine Lacks Power Or Stable Speed	
	Engine Condition Warnings	
	There Is No Output Voltage (Engine Speed Is Stable)	
	Output Voltage Is Too High Or Too Low	
	Output Voltage Is Unstable	
	The Flence Comparts Are Unbelleged	
	The Phase Currents Are Unbalanced	4-15

California

Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.



SECTION	TITLE	PAGE
5	SERVICING THE GENERATOR	
	Testing the Generator	5-1
	Insulation Resistance (Megger) & Polarization Index (PI) Testing	5-2
	Drying the Windings	
	Exciter Stator	
	Exciter Rectifier Bridge (Rotating Rectifier Assembly)	
	Exciter Rotor	
	Main Rotor (Generator Field)	
	Main Stator	
	Testing the PMG	
	Generator Disassembly	
	Generator Assembly	5-21
6	GOVERNOR	
	Electronic Governor	6-1
7	OPTIONS	
	Testing Optional AC Load Circuit Breaker	7-1
	Day Tank Fuel Transfer Pump and Control	7-3
8	WIRING DIAGRAMS	
	General	8-1



BUY NOW

Then Instant Download the Complete Manual Thank you very much!