



Service Manual

Our energy working for you.™



Generator Set with PowerCommand® 3201 Controller

DFEG (Spec C-H)
DFEH (Spec C-H)
DFEJ (Spec C-H)
DFEK (Spec C-F)
DQCA (Spec A-F)
DQCB (Spec A-F)
DQCC (Spec A-F)

Table of Contents

SECTION	TITLE	PAGE
1	INTRODUCTION	
	System Overview	1-1
	Test Equipment	1-1
	How To Obtain Service	1-1
2	CONTROL OPERATION	
	General	2-1
	Control Panel Power On/Off Modes	2-1
	Front Panel	2-3
	Menu Display and Buttons	2-5
	Main Menus	2-7
	Controller Configuration Menu	2-8
	Engine Menu	2-10
	Alternator Menu	2-12
	Adjust Menu	2-14
	Faults Menu	2-16
	System Menu	2-18
	History Menu	2-20
	About Menu	2-22
	Power Transfer Menu	2-24
3	CIRCUIT BOARDS AND MODULES	
	General	3-1
	Base Board	3-3
4	TROUBLESHOOTING	
	General	4-1
	InPower Service Tool	4-1
	Network Application and Customer Inputs	4-1
	Safety Considerations	4-2
	Troubleshooting Procedure	4-3

SECTION	TITLE	PAGE
5	POWER TRANSFER CONTROL (PTC) TROUBLESHOOTING	
	General	5-1
	PTC Module	5-1
	Sequence of Events	5-1
	Troubleshooting using Fault Codes	5-3
	PTC Fault Code Troubleshooting Procedure	5-3
	Troubleshooting with Symptoms	5-7
	Source 1 Power Fails, But Genset Does Not Start	5-9
	Genset Starts, But Does Not Assume Load	5-11
	PTC Module Does Not Retransfer When Source 1 Utility Power Is Restored After A Power Failure Or On Initial Installation	5-13
	Genset Continues To Run After Retransfer Of Load To S1 Utility	5-15
	Genset Starts During Normal Power Service	5-15
	Generator Test Runs But Genset Does Not Assume Load	5-15
6	CONTROL ADJUSTMENT AND SERVICE	
	General	6-1
	Circuit Board Removal/Replacement	6-2
	Modifying Setup Submenus	6-3
	Password Submenu	6-4
	Crank/Idle Setup Menu	6-6
	Governor/Regulator Setup Menu	6-8
	Power Transfer Setup Menu	6-10
	PCC Control Panel Box Components (Standard/Optional)	6-12
	Engine Sensors	6-16
	Magnetic Speed Pickup Unit (MPU)	6-17
	Current Transformer (CT) Installation	6-18
7	SERVICING THE GENERATOR	
	Testing the Generator	7-1
	Generator Disassembly	7-10
	Generator Reassembly	7-12
	Servicing the PMG	7-12
8	GOVERNORS	
	Electric Governor Throttle Lever/Linkage Adjustment	8-1
	Mechanical Governor Throttle Lever/Linkage Adjustment	8-2
9	FUEL TRANSFER PUMP AND CONTROL	
	General	9-1
	Operation	9-2
	Wiring Connections	9-4
	Fuel Transfer Pump Motor Connections	9-6
	Testing the Float Switch Assembly	9-7
10	WIRING DIAGRAMS	
	General	10-1

BUY NOW

**Then Instant Download
the Complete Manual
Thank you very much!**

