



# **Service Manual**

## **Generator Set with PowerCommand<sup>®</sup> 3200 Controller**

DFEG (Spec A–B)

DFEH (Spec A–B)

DFEJ (Spec A–B)

DFEK (Spec A–B)

# Table of Contents

---

SECTION	TITLE	PAGE
	<b>SAFETY PRECAUTIONS</b> .....	iii
<b>1</b>	<b>INTRODUCTION</b>	
	About this Manual .....	1-1
	Test Equipment .....	1-1
	How To Obtain Service .....	1-1
<b>2</b>	<b>CONTROL OPERATION</b> .....	2-1
	General .....	2-1
	Sequence of Operation .....	2-1
	Control Panel Power On/Off Modes .....	2-1
	Control Panel Assembly .....	2-4
	Reading Fault Codes .....	2-6
	Menu Display and Switches .....	2-7
	Menu Units Selection .....	2-8
	Main Menu .....	2-9
	Engine Submenus .....	2-10
	Alternator Submenus .....	2-11
	Control Submenu .....	2-12
	History/About Submenus .....	2-13
	Bus Data Submenu .....	2-15
<b>3</b>	<b>CONTROL CALIBRATION AND ADJUSTMENT</b>	
	General .....	3-1
	Modifying Setup/Adjust Submenus .....	3-1
	Setup Menus .....	3-3
	Adjust Submenu .....	3-12
	Calibration Procedure .....	3-13
	Electronics Box Control Wiring .....	3-15

<b>SECTION</b>	<b>TITLE</b>	<b>PAGE</b>
<b>4</b>	<b>SERVICING THE GENERATOR</b>	
	Testing the Generator .....	4-1
	Generator/PCC Control Isolation Procedure .....	4-2
	Exciter Stator .....	4-3
	Exciter Rectifier Bridge (Rotating Rectifier Assembly) .....	4-4
	Exciter Rotor .....	4-5
	Main Rotor (Generator Field) .....	4-6
	Main Stator .....	4-7
	Test the PMG .....	4-8
	Generator Disassembly .....	4-9
	Generator Reassembly .....	4-16
	Generator Mount Pre-Load Adjustment .....	4-19
	Aligning Generator with Engine .....	4-21
<b>5</b>	<b>WIRING DIAGRAMS</b>	
	General .....	5-1

**BUY NOW**

**Then Instant Download  
the Complete Manual  
Thank you very much!**

