



**Our energy working for you.™**



## **Generator Set with PowerCommand® 3100 Controller**

DFHA (Spec A–H)  
DFHB (Spec A–H)  
DFHC (Spec A–G)  
DFHD (Spec A–G)

# Table of Contents

---

SECTION	TITLE	PAGE
	<b>IMPORTANT SAFETY INSTRUCTIONS</b> .....	iii
<b>1</b>	<b>INTRODUCTION</b>	
	About this Manual .....	1-1
	Test Equipment .....	1-1
	How To Obtain Service .....	1-1
	System Overview .....	1-2
	Generator Set Control Function .....	1-2
<b>2</b>	<b>CONTROL OPERATION</b>	
	General .....	2-1
	Safety Considerations .....	2-1
	Sequence of Operation .....	2-2
	PCC Power On/Standby Mode .....	2-2
	Front Panel .....	2-4
	Menu Display and Switches .....	2-6
	Main Menu .....	2-6
	Engine Menu .....	2-8
	Gen Menu .....	2-10
<b>3</b>	<b>CIRCUIT BOARDS AND MODULES</b>	
	General .....	3-1
	Digital Board (A32) .....	3-3
	Engine Interface Board (A31) .....	3-4
	Analog Board (A33) .....	3-6
	Digital Display Board (A35) .....	3-7
	Customer Interface Board (A34) .....	3-8
	PT/CT Board (A36) .....	3-10
	Bus PT Board (A39) .....	3-11
	Genset Communications Module (A41) .....	3-12
	Voltage Regulator Output Module (A37) .....	3-13
	Governor Output Module (A38) .....	3-14
	Master First Start Sensor .....	3-15
<b>4</b>	<b>TROUBLESHOOTING</b>	
	General .....	4-1
	Safety Considerations .....	4-1
	Status Indicators .....	4-2
	Resetting the Control .....	4-2
	Warning and Shutdown Codes .....	4-3
	PCC Oil Pressure Warning and Shutdown Limits .....	4-12
	Troubleshooting Procedure .....	4-13
	PCC Fuses .....	4-57
	Rack Position Fault/Test Procedure .....	4-58
	Load Sharing Controls Troubleshoot Procedure .....	4-59

<b>SECTION</b>	<b>TITLE</b>	<b>PAGE</b>
<b>5</b>	<b>CONTROL SERVICE AND CALIBRATION</b>	
	General . . . . .	5-1
	Circuit Board Removal/Replacement . . . . .	5-1
	Initial Start Setup Menu . . . . .	5-4
	Adjust Menu . . . . .	5-6
	Setup and Calibration Menus . . . . .	5-8
	Calibration Procedure . . . . .	5-28
	Engine Torque Adjustment . . . . .	5-30
	Accessory Box Control Components . . . . .	5-31
	Engine Sensors . . . . .	5-44
	Magnetic Speed Pickup Unit (MPU) Installation . . . . .	5-45
	Current Transformer (CT) Installation . . . . .	5-46
	Digital Board (A32) Calibration . . . . .	5-47
<b>6</b>	<b>SERVICING THE GENERATOR</b>	
	General . . . . .	6-1
	Generator/PCC Control Isolation Procedure . . . . .	6-2
	Testing the Generator . . . . .	6-3
	Exciter Stator . . . . .	6-5
	Exciter Rectifier Bridge (Rotating Rectifier Assembly) . . . . .	6-6
	Exciter Rotor . . . . .	6-7
	Main Rotor (Generator Field) . . . . .	6-8
	Main Stator . . . . .	6-9
	Testing the PMG . . . . .	6-10
	Bearing Inspection/Removal/Replacement . . . . .	6-11
	Generator Disassembly . . . . .	6-13
	Generator Reassembly . . . . .	6-22
	Aligning Generator with Engine . . . . .	6-25
<b>7</b>	<b>DAY TANK FUEL TRANSFER PUMP AND CONTROL</b>	
	Operation . . . . .	7-2
	Wiring Connections . . . . .	7-4
	Fuel Transfer Pump Motor Connections . . . . .	7-6
	Testing the Float Switch Assembly . . . . .	7-7
<b>8</b>	<b>INITIAL SYSTEM STARTUP</b>	
	General . . . . .	8-1
	The Startup Process . . . . .	8-1
	Equipment Application Review . . . . .	8-1
	Individual Generator Set Startup . . . . .	8-2
	Manual System Operation . . . . .	8-4
	Automatic System Operation . . . . .	8-7
	Black Start Testing . . . . .	8-8
	Test Reports and Acceptance . . . . .	8-8
	On Site Power System Application Review (Diesel/600VAC and Lower) . . . . .	8-9
<b>9</b>	<b>WIRING DIAGRAMS</b>	
	General . . . . .	9-1

**BUY NOW**

**Then Instant Download  
the Complete Manual  
Thank you very much!**