




Operation/Service Manual

**PowerCommand® Control
3100 Series
Digital Parallelizing
Generator Sets**

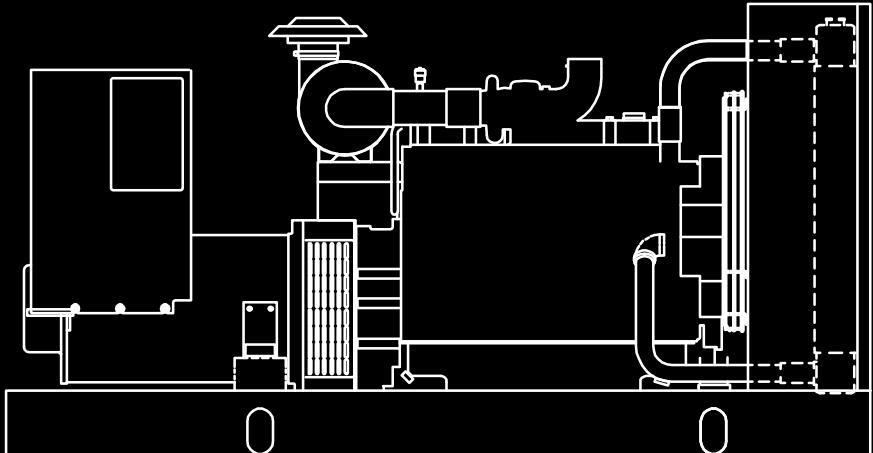

Models
**DGBB, DGBC, DGCA, DGDB, DGCC,
DGDA, DGDB, DGEA, DGFA, DGFC**

Table of Contents

| SECTION | TITLE | PAGE |
|----------|---|------|
| | IMPORTANT SAFETY INSTRUCTIONS | iii |
| 1 | INTRODUCTION | |
| | About this Manual | 1-1 |
| | Test Equipment | 1-1 |
| | How To Obtain Service | 1-1 |
| | System Overview | 1-2 |
| | Generator Set Control Function | 1-2 |
| 2 | CONTROL OPERATION | 2-1 |
| | General | 2-1 |
| | Safety Considerations | 2-1 |
| | Sequence of Operation | 2-2 |
| | PCC Power On/Standy Mode | 2-2 |
| | Front Panel | 2-4 |
| | Menu Display and Switches | 2-6 |
| | Main Menu | 2-6 |
| | Engine Menu | 2-8 |
| | Gen Menu | 2-10 |
| 3 | CIRCUIT BOARDS AND MODULES | |
| | General | 3-1 |
| | Digital Board (A32) | 3-3 |
| | Engine Interface Board (A31) | 3-4 |
| | Analog Board (A33) | 3-6 |
| | Digital Display Board (A35) | 3-7 |
| | Customer Interface Board (A34) | 3-8 |
| | PT/CT Board (A36) | 3-10 |
| | Bus PT Board (A39) | 3-11 |
| | Genset Communications Module (A41) | 3-12 |
| | Voltage Regulator Output Module (A37) | 3-13 |
| | Governor Output Module (A38) | 3-14 |
| | Master First Start Sensor | 3-15 |
| 4 | TROUBLESHOOTING | |
| | General | 4-1 |
| | Safety Considerations | 4-1 |
| | Status Indicators | 4-2 |
| | Resetting the Control | 4-2 |
| | Warning and Shutdown Codes | 4-3 |
| | PCC Oil Pressure Warning and Shutdown Limits | 4-12 |
| | Troubleshooting Procedure | 4-13 |
| | PCC Fuses | 4-54 |
| | Load Sharing Controls Troubleshooting Procedure | 4-55 |

| SECTION | TITLE | PAGE |
|----------------|--|-------------|
| 5 | CONTROL SERVICE AND CALIBRATION | |
| | General | 5-1 |
| | Circuit Board Removal/Replacement | 5-1 |
| | Initial Start Setup Menu | 5-4 |
| | Adjust Menu | 5-6 |
| | Setup and Calibration Menus | 5-8 |
| | Calibration Procedure | 5-26 |
| | Accessory Box Control Components | 5-29 |
| | Engine Sensors | 5-40 |
| | Magnetic Speed Pickup Unit (MPU) Installation | 5-42 |
| | Current Transformer (CT) Installation | 5-43 |
| 6 | SERVICING THE GENERATOR | |
| | Testing the Generator | 6-1 |
| | Generator Disassembly | 6-9 |
| | Generator Reassembly | 6-11 |
| | Servicing the PMG | 6-11 |
| 7 | DAY TANK FUEL TRANSFER PUMP AND CONTROL | |
| | Operation | 7-2 |
| | Wiring Connections | 7-4 |
| | Fuel Transfer Pump Motor Connections | 7-6 |
| | Testing the Float Switch Assembly | 7-7 |
| 8 | INITIAL SYSTEM STARTUP | |
| | General | 8-1 |
| | The Startup Process | 8-1 |
| | Equipment Application Review | 8-1 |
| | Individual Generator Set Startup | 8-2 |
| | Manual System Operation | 8-4 |
| | Automatic System Operation | 8-7 |
| | Black Start Testing | 8-8 |
| | Test Reports and Acceptance | 8-8 |
| | On Site Power System Application Review (Diesel/600VAC and Lower) | 8-9 |
| 9 | WIRING DIAGRAMS | |
| | General | 9-1 |

BUY NOW

**Then Instant Download
the Complete Manual**

Thank you very much!