

Onan

Auxiliary Power Unit

Service Manual

DKX

AUX™ Series



Printed in U.S.A.

981-0513

8/95

Specs A & B

Table of Contents

SECTION	TITLE	PAGE
	SAFETY PRECAUTIONS	iii, iv
1	INTRODUCTION	1-1
	About This Manual	1-1
	Model Identification	1-1
2	SPECIFICATIONS	2-1
3	PREPARING FOR SERVICE	3-1
	Troubleshooting	3-1
	Special Tools	3-1
	Safety Considerations	3-1
4	TROUBLESHOOTING	4-1
	Introduction	4-1
	Sleeper Control Panel	4-2
	Preheat Mode	4-4
	Start – Cranking Mode	4-6
	Start – Ignition Mode	4-8
	Run Mode	4-10
	Battery Charge Mode	4-11
	Stop Mode	4-12
	Sleeper - Heat Mode	4-14
	Sleeper - Air Conditioning Mode	4-21
5	CONTROL COMPONENTS	5-1
	Introduction	5-1
	Sleeper Control Panel	5-3
	Control Assembly (A1)	5-6
	Thermistor	5-7
	Coolant Solenoid	5-7
	Fuel Pump	5-8
	Relays K2, K3, K5 and K6	5-9
	Fuel Solenoid	5-9
6	POWER UNIT COMPONENTS	6-1
	Introduction	6-1
	Power Unit Service	6-2
	Compressor Belt Tension	6-4
	Mag Pickup	6-5
	Fuel Injection Timing	6-5
	Bypass Thermostat	6-6
	Radiator/Condenser Removal	6-7
	Alternator	6-8

7	MAINTENANCE	7-1
	Periodic Maintenance	7-1
	Inspection	7-2
	Air Filter	7-3
	Spark Arrestor	7-3
	Fuel System	7-4
	Drive Belts	7-6
	Oil and Oil Filter Change	7-7
	Cooling System	7-8
8	WIRING DIAGRAMS	8-1
	Aux System Wiring Diagram (Spec A)	8-1
	Aux System Wiring Diagram (Spec B)	8-2
	Power Unit Wiring Diagram (Specs A And B)	8-3
APPENDIX A	FILLING REFRIGERANT AND COOLING SYSTEMS	A-1

BUY NOW

**Then Instant Download
the Complete Manual**

Thank you very much!