

Onan

**Service
Manual**

DL4

DL6

DL6T

**Generator and
Controls**

Safety Precautions

The following symbols in this manual highlight conditions potentially dangerous to service personnel, or equipment. Read this manual carefully. Know when these conditions can exist. Then take necessary steps to protect personnel as well as equipment.

WARNING *This symbol is used throughout the manual to warn of possible serious personal injury.*

CAUTION *This symbol refers to possible equipment damage.*

PROTECT AGAINST MOVING PARTS

Avoid moving parts of the unit. Avoid use of loose jackets, shirts or sleeves due to danger of becoming caught in moving parts.

Make sure all nuts and bolts are secure. Keep power shields and guards in position.

If you must make adjustments while the unit is running, use extreme caution around hot manifolds,

moving parts, etc.

Do not work on this equipment when mentally or physically fatigued.

GUARD AGAINST ELECTRIC SHOCK

Disconnect electric power before removing protective shields or touching electrical equipment. Use rubber insulative mats placed on dry wood platforms over floors that are metal or concrete when around electrical equipment. Do not wear damp clothing (particularly wet shoes) or allow skin surfaces to be damp when handling electrical equipment.

Disconnect batteries to prevent accidental engine start. Jewelry is a good conductor of electricity and should be removed before working on electrical equipment.

Use extreme caution when working on electrical components. High voltages cause injury or death.

Follow all state and local codes. To avoid possible personal injury or equipment damage, a qualified electrician or an authorized service representative must perform installation and all service.

WARNING

EXHAUST GAS IS DEADLY!

Exhaust gases contain carbon monoxide, a poisonous gas that might cause unconsciousness and death. It is an odorless and colorless gas formed during combustion of hydrocarbon fuels. Symptoms of carbon monoxide poisoning are:

- Dizziness
- Headache
- Weakness and Sleepiness
- Vomiting
- Muscular Twitching
- Throbbing in Temples

If you experience any of these symptoms, get out into fresh air immediately, shut down the unit and do not use until it has been inspected.

The best protection against carbon monoxide inhalation is proper installation and regular, frequent inspections of the complete exhaust system. If you notice a change in the sound or appearance of exhaust system, shut the unit down immediately and have it inspected and repaired at once by a competent mechanic.

Table of Contents

| TITLE | PAGE |
|--|---------------------------|
| SAFETY PRECAUTIONS | Inside Front Cover |
| TABLE OF CONTENTS | 1 |
| INTRODUCTION | 2 |
| About This Manual | 2 |
| Test Equipment | 2 |
| GENERATOR AND VOLTAGE REGULATOR | 3 |
| Generator Description | 3 |
| Generator Operation | 4 |
| Standard Voltage Regulator | 5 |
| Switching Voltage Regulator | 7 |
| Generator Service | 10 |
| GENERATOR/REGULATOR TROUBLESHOOTING | 13 |
| Preparation | 13 |
| Troubleshooting Procedures | 13 |
| GENERATOR/REGULATOR TESTS | 23 |
| General | 23 |
| A - Testing AC Residual Voltage | 23 |
| B - Testing L21 Reactor | 23 |
| C - Testing Rectifier Bridge Assembly | 23 |
| D - Flashing the Field | 23 |
| E - Testing Reference Transformer T21 | 24 |
| F - VR21 Replacement | 25 |
| G - Testing Rotating Rectifiers | 25 |
| H - Testing Exciter Stator | 25 |
| J - Testing Exciter Rotor | 26 |
| K - Testing Generator Stator | 26 |
| L - Testing Generator Rotor | 27 |
| M - Wiring Harness Check | 27 |
| N - Sensitivity Reference Circuit | 28 |
| P - Voltage Adjustment | 28 |
| Q - Reconnection | 29 |
| R - Testing Q1 Capacitors | 29 |
| S - Testing Standard Regulator | 29 |
| T - Testing Switching Regulator | 32 |
| ENGINE CONTROL | 34 |
| General | 34 |
| Control Panel | 34 |
| Control Components | 35 |
| Engine Sensors | 36 |
| Operation | 38 |
| ENGINE CONTROL TROUBLESHOOTING | 41 |
| General | 41 |
| Flow Chart A - Engine Does Not Crank | 41 |
| Flow Chart B - Engine Cranks But Does Not Start | 42 |
| Flow Chart C - Engine Starts But Stops After Running Several Seconds | 42 |
| ENGINE CONTROL ADJUSTMENTS/TESTS | 43 |
| General | 43 |
| A - Battery Checkout | 43 |
| B - Battery Cable Checkout | 43 |
| C - Alternator Checkout | 43 |
| D - Solenoid Checkout | 44 |
| E - Relay Checkout | 44 |
| F - Fuel Solenoid Checkout | 44 |
| G - Switch Checkout | 44 |
| WIRING DIAGRAMS | 45 |

BUY NOW

**Then Instant Download
the Complete Manual**

Thank you very much!