



Service Manual

Generator Set with PowerCommand[®] 3100 Controller

DQAD (Spec A–B)

DQAE (Spec A–B)

DQAF (Spec A–B)

Table of Contents

SECTION	TITLE	PAGE
	IMPORTANT SAFETY INSTRUCTIONS	iii
1	INTRODUCTION	
	About this Manual	1-1
	Test Equipment	1-1
	How To Obtain Service	1-1
	System Overview	1-2
	Generator Set Control Function	1-2
2	CONTROL OPERATION	2-1
	General	2-1
	Safety Considerations	2-1
	PCC Power On/Standby Mode	2-1
	Front Panel	2-3
	Menu Display and Switches	2-4
	Main Menu	2-4
	Engine Menu	2-6
	Gen Menu	2-8
3	CIRCUIT BOARDS AND MODULES	
	General	3-1
	Digital Board (A32)	3-4
	Engine Interface Board (A31)	3-5
	Analog Board (A33)	3-7
	Digital Display Board (A35)	3-8
	Customer Interface Board (A34)	3-9
	PT/CT Board (A36)	3-11
	Voltage Regulator Output Module (A37)	3-12
	Relay Assembly	3-13
4	TROUBLESHOOTING	
	General	4-1
	Safety Considerations	4-1
	Status Indicators	4-2
	Resetting the Control	4-2
	Warning and Shutdown Codes	4-3
	PCC Oil Pressure Warning and Shutdown Limits	4-9
	Troubleshooting Procedure	4-10

SECTION	TITLE	PAGE
5	CONTROL SERVICE AND CALIBRATION	
	General	5-1
	Circuit Board Removal/Replacement	5-1
	Initial Start Setup Menu	5-4
	Adjust Menu	5-6
	Setup and Calibration Menus	5-8
	Calibration Procedure	5-18
	Accessory Box Control Components	5-20
	Engine Sensors	5-24
	Magnetic Speed Pickup Unit (MPU) Installation	5-25
	Current Transformer (CT) Installation	5-26
6	SERVICING THE GENERATOR	
	Testing the Generator	6-1
	Generator/PCC Control Isolation Procedure	6-2
	Exciter Stator	6-3
	Exciter Rectifier Bridge (Rotating Rectifier Assembly)	6-4
	Exciter Rotor	6-5
	Main Rotor (Generator Field)	6-6
	Main Stator	6-7
	Testing the PMG	6-9
	Generator Disassembly	6-10
	Generator Reassembly	6-19
7	DAY TANK FUEL TRANSFER PUMP AND CONTROL	
	General	7-1
	Operation	7-2
	Wiring Connections	7-4
	Fuel Transfer Pump Motor Connections	7-6
	Testing the Float Switch Assembly	7-7
8	OPTIONAL ENCLOSURE FUEL TANK SYSTEM	
	General	8-1
	Wiring Connections	8-1
	Fuel Transfer Pump	8-2
	External Fuel Fill box	8-4
	External Alarm Panel	8-5
	Rupture Basin Leak Detect Switch	8-6
9	WIRING DIAGRAMS	
	General	9-1

BUY NOW

**Then Instant Download
the Complete Manual
Thank you very much!**