



# Service Manual

Our energy working for you.™



## Generator Set with QSK23G3 engine and PowerCommand® 2100 Controller

DQCA (Spec A–F)  
DQCB (Spec A–F)  
DQCC (Spec A–F)

# Table of Contents

---

SECTION	TITLE	PAGE
	<b>IMPORTANT SAFETY INSTRUCTIONS</b> .....	iii
<b>1</b>	<b>INTRODUCTION</b>	
	About this Manual .....	1-1
	System Overview .....	1-1
	Test Equipment .....	1-1
	How To Obtain Service .....	1-2
<b>2</b>	<b>CONTROL OPERATION</b>	
	General .....	2-1
	Control Panel Power On/Off Modes .....	2-1
	Front Panel .....	2-3
	Menu Display and Buttons .....	2-5
	Main Menus .....	2-7
	Controller Configuration Menu .....	2-8
	Engine Menu .....	2-10
	Alternator Menu .....	2-12
	Adjust Menu .....	2-14
	Faults Menu .....	2-16
	System Menu .....	2-18
	History Menu .....	2-20
	About Menu .....	2-22
<b>3</b>	<b>CIRCUIT BOARDS AND MODULES</b>	
	General .....	3-1
	Base Board .....	3-3
<b>4</b>	<b>TROUBLESHOOTING</b>	
	General .....	4-1
	InPower Service Tool .....	4-1
	Network Application and Customer Inputs .....	4-1
	Safety Considerations .....	4-2
	Troubleshooting Procedure .....	4-3

<b>SECTION</b>	<b>TITLE</b>	<b>PAGE</b>
<b>5</b>	<b>CONTROL ADJUSTMENT AND SERVICE</b>	
	General .....	5-1
	Circuit Board Removal/Replacement .....	5-2
	Modifying Setup Submenus .....	5-3
	Password Submenu .....	5-4
	Crank/Idle Setup Menu .....	5-6
	Governor/Regulator Setup Menu .....	5-8
	PCC Control Panel Box Components (Standard/Optional) .....	5-12
	Engine Sensors .....	5-16
	Magnetic Speed Pickup Unit (MPU) .....	5-17
	Current Transformer (CT) Installation .....	5-18
<b>6</b>	<b>SERVICING THE GENERATOR</b>	
	General .....	6-1
	Generator/Base Board Isolation Procedure .....	6-2
	Testing the Generator .....	6-3
	Testing the PMG .....	6-9
	Bearing Removal/Replacement .....	6-10
	Generator Disassembly .....	6-11
	Generator Reassembly .....	6-19
	Aligning Generator with Engine .....	6-22
<b>7</b>	<b>OPTIONAL ENCLOSURE FUEL TANK SYSTEM</b>	
	General .....	7-1
	Wiring Connections .....	7-1
	Fuel Transfer Pump .....	7-2
	External/Internal Alarm Panels .....	7-3
	Rupture Basin Leak Detect Switch Test .....	7-4
<b>8</b>	<b>WIRING DIAGRAMS</b>	
	General .....	8-1

**BUY NOW**

**Then Instant Download  
the Complete Manual  
Thank you very much!**

