



Service Manual

Generator Set with PowerCommand[®] 3201 Controller

DQKB (Spec G)

DQKC (Spec G)

DQKD (Spec A)

DQKH (Spec A-B)

Table of Contents

SECTION	TITLE	PAGE
	IMPORTANT SAFETY INSTRUCTIONS	iii
1	INTRODUCTION	
	About this Manual	1-1
	Test Equipment	1-1
	How To Obtain Service	1-1
2	CONTROL OPERATION	2-1
	General	2-1
	Sequence of Operation	2-1
	Control Panel Power On/Off Modes	2-1
	Control Panel Assembly	2-4
	Reading Fault Codes	2-6
	Menu Display and Switches	2-7
	Language/Units Selection Menu	2-8
	Main Menu	2-9
	Engine Submenus	2-11
	Alternator Submenus	2-12
	Control Submenu	2-13
	History/About Submenus	2-14
	Parallel Data Submenu	2-16
	Power Transfer Main/Submenus	2-17
	Utility (PWR TRAN) Submenus	2-19
	Status (PWR TRAN) Submenus	2-20
	Transfer Control (PWR TRAN) Submenu	2-21
	Genset (PWR TRAN) Submenus	2-22

SECTION	TITLE	PAGE
3	CONTROL CALIBRATION AND ADJUSTMENT	
	General	3-1
	Modifying Setup/Adjust Submenus	3-1
	Setup Menus	3-3
	
	Customer Faults Submenus	3-5
	Calibration Submenus	3-6
	Isolated Bus/Utility Submenus (Paralleling Application)	3-7
	Isolated Bus Submenus	3-8
	Utility Submenus	3-11
	Power Transfer Control Main Menus	3-12
	Utility Sensors Submenus	3-13
	Genset Sensors Submenus	3-15
	Timers Submenu	3-17
	Test/Exercise Submenu	3-18
	Adjust Submenu	3-19
	Calibration Procedure	3-20
	Control Box Wiring	3-22
	Run Relays (K11, K12, K13)	3-24
	Alarm Relay (K16)	3-25
	Magnetic Speed Pickup Unit (MPU) Installation	3-26
4	SERVICING THE GENERATOR	
	Testing the Generator	4-1
	Insulation Resistance (Megger) & Polarization Index (PI) Testing	4-2
	Drying the Windings	4-4
	Generator/PCC Control Isolation Procedure	4-5
	Exciter Stator	4-6
	Exciter Rectifier Bridge (Rotating Rectifier Assembly)	4-7
	Exciter Rotor	4-8
	Main Rotor (Generator Field)	4-9
	Main Stator	4-10
	Testing the PMG	4-13
	P7 Bearing Inspection/Removal	4-14
	P7 Generator Disassembly/Reassembly	4-15
	P80 Bearing Inspection/Removal	4-22
	P80 Generator Disassembly/Reassembly	4-24
	Aligning Generator with Engine	4-28
5	WIRING DIAGRAMS	
	General	5-1

BUY NOW

**Then Instant Download
the Complete Manual
Thank you very much!**