



Service Manual

Our energy working for you.™



**Power
Generation**

Generator Set

DQMAA

Table of Contents

IMPORTANT SAFETY INSTRUCTIONS	III
1. INTRODUCTION	1-1
About this manual	1-1
Wiring Diagrams	1-1
Test equipment	1-1
How to obtain service	1-1
2. SERVICING THE GENERATOR	2-1
General	2-1
Generator / PowerCommand Control Isolation Procedure	2-2
Testing the Generator	2-3
Insulation Resistance Testing	2-3
Exciter Stator	2-4
Exciter Rectifier Bridge (Rotating Rectifier Assembly)	2-5
Exciter Rotor	2-6
Main Rotor (Wheatstone bridge)	2-7
Main Stator	2-8
Testing the PMG	2-9
Bearing Removal/Replacement	2-9
Bearing Removal	2-9
Bearing Replacement	2-9
Bearing Lubrication	2-9
Generator Disassembly	2-10
Permanent Magnet (PMG) Removal	2-10
Permanent Magnet (PMG) Installation	2-10
Main Stator and Rotor Removal	2-11
Control Housing Removal	2-12
Generator Assembly Removal	2-14
Generator Reassembly	2-15
Aligning Generator with Engine	2-17
Angular Alignment Procedure	2-18
Sample Generator Run Out Readings	2-19
Axial Alignment Procedure	2-20

3. ENCLOSURE FUEL TANK SYSTEM	3-1
General	3-1
Wiring connections	3-1
Fuel Transfer Control Customer Outputs	3-1
PCC Customer Inputs	3-1
Fuel Transfer Pump	3-2
Control Panel Switches and Indicators	3-2
Indicators:	3-2
Switches:	3-2
Operation	3-2
External/Internal Alarm Panels	3-3
Overfill Indicator/Horn/Silence Button	3-3
Fuel Gauge	3-3
Test Button	3-3
Rupture Basin Leak Detect Switch Test	3-4
4. WIRING DIAGRAMS	4-1
General	4-1

California

Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

BUY NOW

**Then Instant Download
the Complete Manual
Thank you very much!**