



Service Manual

Our energy working for you.™



Generator Set with PowerCommand® 1.1 Controller

DSGAA (Spec A–F)

DSGAB (Spec A–F)

DSGAC (Spec A–F)

Table of Contents

SECTION	TITLE	PAGE
	IMPORTANT SAFETY INSTRUCTIONS	v
1.	INTRODUCTION	1-1
	About this Manual	1-1
	System Overview	1-1
	Test Equipment	1-1
	How to Obtain Service	1-2
2.	CONTROL OPERATION	2-1
	General	2-1
	Control Panel Power On/Off Modes	2-1
	Front Panel	2-2
	Analog AC Metering Panel (Optional)	2-2
	Control Panel	2-3
	System Messages	2-6
	Selecting Auto, Manual Run and Off Modes	2-9
	Operator Menus	2-12
	Service Menus	2-16
	History / About Menu	2-18
	Screen Adjust Menu	2-20
	Fault History Menu	2-22
3.	CIRCUIT BOARD	3-1
	General	3-1
	Control System Overview	3-3
	Base Board	3-4

California
Proposition 65 Warning
 Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

SECTION	TITLE	PAGE
4.	TROUBLESHOOTING	4-1
	General	4-1
	InPower Service Tool	4-1
	Network Applicatins and Customer Inputs	4-1
	Safety Consideration	4-2
	Reading Fault Codes	4-2
	Troubleshooting Procedure	4-3
	PCC Control Components (Spec A)	4-4
	PCC Control Components (Begin Spec B)	4-5
	Table 4-1. Engine Control Module Fault Codes	4-6
	Table 4-2 Engine does not Crank in Manual Mode (No Fault Message)	4-7
	Table 4-3. Engine does not Crank in Remote Mode (No Fault Message)	4-8
	Table 4-4. Warning and Shutdown Codes	4-9
	Code 359 - Fail to Start (Shutdown)	4-15
	Code 427 - CAN Datalink Lost Messages (Warning)	4-16
	Code 441 - Low Battery voltage (Warning)	4-17
	Code 442 - High Battery Voltage (Warning)	4-17
	Code 781 - CAN Link Lost (Shutdown))	4-17
	Code 1311, 1312 - Customer (Config) Input Warning/Shutdown)	4-18
	Code 1435 - Low Coolant Temperature (Warning)	4-19
	Code 1438 - Fail to Crank (Shutdown)	4-20
	Code 1442 - Low Battery (Warning)	4-21
	Code 1446 - High AC Voltage (Shutdown)	4-21
	Code 1447 - Low AC Voltage (Shutdown)	4-22
	Code 1448 - Under Frequency (Shutdown)	4-22
	Code 1449 - Over Frequency (Warning)	4-23
	Code 1471 - High AC Current (Warning)	4-23
	Code 1472 - High AC Current (Shutdown)	4-23
	Code 1992 - Overspeed (Shutdown)	4-24
	Code 2545 - Keyswitch Reset Required (Shutdown)	4-25
	Code 2972 - Field Overload (Shutdown)	4-26

SECTION	TITLE	PAGE
5.	CONTROL ADJUSTMENT AND SERVICE	5-1
	General	5-1
	Circuit Board Removal/Replacement	5-1
	Setup Menu	5-3
	Genset Service Menus	5-3
	Genset Service Submenus	5-6
	Automatic Voltage Regulator Submenus	5-14
	Electronic Governor Submenus	5-16
	Customer I/O Submenus	5-18
	Metering Submenus	5-24
	Annunciator Submenus	5-26
	Genset Setup Submenus	5-33
	Genset Submenus	5-36
	Voltage Protection Submenus	5-42
	Current Protection Submenus	5-44
	Engine Protection Submenus	5-46
	TB1 Base Board Customer Connections	5-52
	Auxiliary I/O Module (Optional)	5-53
	Optional Relays (K10, K11)	5-53
	Current Transformer (CT) Installation	5-54
6.	SERVICING THE GENERATOR	6-1
	General	6-1
	Generator/Base Board Isolation Procedure	6-2
	Testing the Generator	6-3
	Generator Disassembly	6-11
	Generator Assembly	6-15
7.	WIRING DIAGRAMS	7-1
	General	7-1
A.	1302 MENU SYSTEM MAPS	A-1

BUY NOW

**Then Instant Download
the Complete Manual
Thank you very much!**

