



Service Manual

Our energy working for you.™



Generator Set with PowerCommand® 2100 Controller

DSHAA (Spec A-C)
DSHAB (Spec A-E)
DSHAC (Spec A-E)
DSHAD (Spec A-E)
DSHAE (Spec A-C)
DSHAF (Spec A-B)

Table of Contents

SECTION	TITLE	PAGE
	IMPORTANT SAFETY INSTRUCTIONS	iii
1.	INTRODUCTION	1-1
	About this Manual	1-1
	SYSTEM OVERVIEW	1-1
	TEST EQUIPMENT	1-1
2.	CONTROL OPERATION	2-1
	General	2-1
	Control Power ON/Off Modes	2-1
	Front Panel	2-3
	Menu Display And Buttons	2-4
	Main Menus	2-6
	CONTROLLER CONFIGURATION MENU	2-7
	Engine Menu	2-9
	Alternator Menu	2-11
	Adjust Menu	2-13
	Faults Menu	2-15
	System Menu	2-17
	History Menu	2-19
	About Menu	2-21
3.	CIRCUIT BOARDS	3-1
	GENERAL	3-1
	Control System Overview	3-3
	Base Board	3-4
4.	TROUBLESHOOTING	4-1
	GENERAL	4-1
	InPower service tool	4-1
	Network Applications and customer inputs	4-1
	SAFETY CONSIDERATIONS	4-1
	TROUBLESHOOTING PROCEDURE	4-2
	TABLE 4-1. ENGINE DOES NOT CRANK IN MANUAL MODE (NO FAULT MESSAGE)	4-4
	TABLE 4-2. ENGINE DOES NOT CRANK IN REMOTE MODE (NO FAULT MESSAGE)	4-5
	TABLE 4-4. WARNING AND SHUTDOWN CODES	4-8
	CODE 197/235 – LOW COOLANT LEVEL (WARNING/SHUTDOWN)	4-12
	CODE 427 – CAN DATALINK LOST MESSAGES (WARNING)	4-12
	CODE 441 – LOW BATTERY VOLTAGE (WARNING)	4-14

SECTION	TITLE	PAGE
	CODE 442 – HIGH BATTERY VOLTAGE (WARNING)	4-14
	CODE 781 – CAN DATALINK FAILED (SHUTDOWN)	4-15
	CODE 1245 – CAN ENGINE SHUTDOWN (SHUTDOWN)	4-15
	CODE 1311, 1312, 1317, 1318 – customer input (WARNING/shutdown)	4-16
	CODE 1438 – FAIL TO CRANK (SHUTDOWN)	4-17
	CODE 1442 – WEAK BATTERY (WARNING)	4-18
	CODE 1443 – BATTERY FAILED (SHUTDOWN)	4-18
	CODE 1444 – KW OVERLOAD (WARNING)	4-19
	CODE 1445 – SHORT CIRCUIT (SHUTDOWN)	4-19
	CODE 1446 – HIGH AC VOLTAGE (SHUTDOWN)	4-20
	CODE 1447 – LOW AC VOLTAGE (SHUTDOWN)	4-20
	CODE 1448 – UNDER FREQUENCY (SHUTDOWN)	4-22
	CODE 1449 – over FREQUENCY (warning)	4-22
	CODE 1471/1472 – OVER CURRENT (WARNING/SHUTDOWN) ..	4-23
5.	CONTROL ADJUSTMENT AND SERVICE	5-1
	GENERAL	5-1
	CIRCUIT BOARD REMOVAL/REPLACEMENT	5-1
	MODIFYING SETUP SUBMENUS	5-3
	PASSWORD SUBMENU	5-3
	CRANK/IDLE SETUP MENU	5-6
	GOVERNOR/REGULATOR SETUP MENU	5-8
	GOVERNOR/REGULATOR SETUP MENU (CONT)	5-10
	PCC CONTROL PANEL BOX COMPONENTS (STANDARD/OPTIONAL)	5-12
	CURRENT TRANSFORMER (CT) INSTALLATION	5-15
6.	SERVICING THE GENERATOR	6-1
	GENERAL	6-1
	GENERATOR/BASE BOARD ISOLATION PROCEDURE	6-1
	TESTING THE GENERATOR	6-3
	GENERATOR DISASSEMBLY	6-10
	GENERATOR DISASSEMBLY	6-13
	SERVICING THE PMG	6-13
7.	OPTIONAL ENCLOSURE FUEL TANK SYSTEM	7-1
	GENERAL	7-1
	OPERATION	7-2
	WIRING CONNECTIONS	7-3
	FUEL TRANSFER PUMP MOTOR CONNECTIONS	7-4
	TESTING THE FLOAT SWITCH ASSEMBLY	7-5
8.	WIRING DIAGRAM	8-1
	GENERAL	8-1

BUY NOW

**Then Instant Download
the Complete Manual
Thank you very much!**