


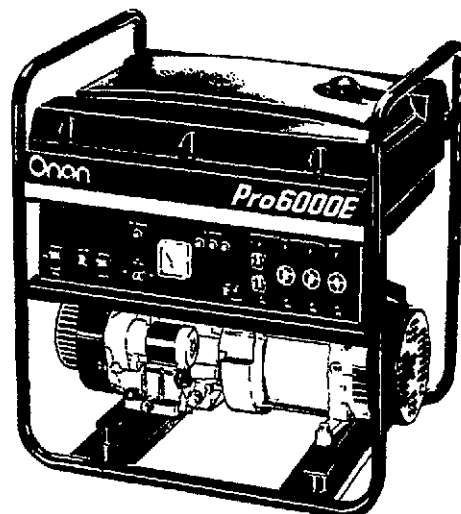

# Onan *Portable GenSets*

## Service Manual

**EGH, EGS**



# Table of Contents

---

SECTION	TITLE	PAGE
	SAFETY PRECAUTIONS .....	Inside Front Cover
1	INTRODUCTION.....	1-1
	About This Manual .....	1-1
	Model Identification .....	1-1
2	SPECIFICATIONS .....	2-1
3	DIMENSIONS AND CLEARANCES .....	3-1
4	TORQUE SPECIFICATIONS .....	4-1
5	PREPARING TO SERVICE .....	5-1
	Troubleshooting .....	5-1
	Special Tools .....	5-1
	Safety Considerations .....	5-1
6	ENGINE-PRIMARY SYSTEMS .....	6-1
	Introduction .....	6-1
	Troubleshooting Engine Primary Systems .....	6-1
	Exhaust System .....	6-5
	Cooling System .....	6-5
	Ignition System .....	6-6
	Crankcase Ventilation System .....	6-9
	Governor .....	6-9
	Fuel System .....	6-11
	Recoil Starter .....	6-14
	Electric Starter .....	6-15
	Oil Pump .....	6-19
	Oil Pressure Relief Valve .....	6-20
	Oil Watch System .....	6-21
7	CONTROL .....	7-1
	Introduction .....	7-1
	Control Panel .....	7-1
	Control Operation .....	7-1
	Control Troubleshooting .....	7-2
	Control Tests .....	7-4
8	GENERATOR .....	8-1
	Introduction .....	8-1
	Generator Description - Capacitor-Type Regulation .....	8-1
	Generator Operation - Capacitor-Type Regulation .....	8-1
	Generator Description - Transistor-Type Regulation .....	8-3
	Generator Operation - Transistor-Type Regulation .....	8-3
	Transistor-Type Voltage Regulator Operation .....	8-5
	Generator Troubleshooting .....	8-5
	Generator Service .....	8-9
	Generator Testing - Capacitor-Type Regulation .....	8-10
	Generator Testing - Transistor-Type Regulation .....	8-12

**Table of Contents - Continued**

<b>SECTION</b>	<b>TITLE</b>	<b>PAGE</b>
<b>9</b>	<b>ENGINE-BLOCK ASSEMBLY</b> .....	<b>9-1</b>
	Introduction .....	9-1
	Side Valve Engine Disassembly .....	9-1
	Over Head Valve Engine Disassembly .....	9-3
	Inspection of Engine Parts .....	9-9
	Valve System .....	9-13
	Side Valve Inspection and Service .....	9-13
	Over Head Valve Inspection and Service .....	9-15
	Compression Release System .....	9-16
<b>10</b>	<b>SERVICE CHECKLIST</b> .....	<b>10-1</b>
	General .....	10-1
	Lubrication .....	10-1
	Initial Start Adjustments .....	10-1
	Output Checks .....	10-1
	Exhaust System .....	10-1
	Fuel System .....	10-2
	Control .....	10-2
	Mechanical Checks .....	10-2
<b>11</b>	<b>WIRING DIAGRAMS</b> .....	<b>11-1</b>

**BUY NOW**

**Then Instant Download  
the Complete Manual  
Thank you very much!**