



# Service Manual

Cummins **Onan**

Performance you rely on.™



## 60 Hz Portable Generator Set

EGMBB, P2220c (Spec A)

EGMBG, P2927 (Spec A)

EGMBG, P2927c (Spec A)

EGMBG, P3027 (Spec A)

# Table of Contents

---

|                                                                      |    |
|----------------------------------------------------------------------|----|
| 1. SAFETY PRECAUTIONS .....                                          | 1  |
| 1.1 Exhaust Gas Is Deadly .....                                      | 1  |
| 1.2 Gasoline is Flammable / Explosive.....                           | 1  |
| 1.3 Generator Voltage is Deadly.....                                 | 2  |
| 1.4 Moving Parts Can Cause Severe Personal Injury or Death .....     | 2  |
| 1.5 Battery Gases Are Explosive .....                                | 2  |
| 1.6 General Precautions .....                                        | 2  |
| 2. INTRODUCTION.....                                                 | 5  |
| 2.1 About This Manual.....                                           | 5  |
| 2.2 Model Identification .....                                       | 5  |
| 2.3 Wheel Kit.....                                                   | 5  |
| 2.4 Fuel Requirements.....                                           | 6  |
| 2.5 Generator Set Assembly Instructions .....                        | 7  |
| 2.6 Wheel Kit Assembly Instructions .....                            | 7  |
| 3. STARTING AND RUNNING THE GENERATOR SET .....                      | 9  |
| 3.1 Control Panel .....                                              | 9  |
| 3.2 Pre-Start Checks.....                                            | 12 |
| 3.3 Starting the Generator Set.....                                  | 14 |
| 3.4 Stopping the Generator Set .....                                 | 16 |
| 3.5 Powering Tools and Appliances .....                              | 16 |
| 3.6 Charging Batteries .....                                         | 18 |
| 3.7 Circuit Breakers .....                                           | 18 |
| 3.8 Grounding .....                                                  | 18 |
| 3.9 Low Oil Shutdown.....                                            | 19 |
| 3.10 Electrical Interference with Communications or Appliances ..... | 19 |
| 3.11 Exercising the Generator Set.....                               | 19 |
| 3.12 Engine Break-In .....                                           | 19 |
| 3.13 Out-of-Service Protection.....                                  | 19 |
| 4. GENERATOR COMPONENTS.....                                         | 21 |
| 5. SPECIFICATIONS .....                                              | 23 |
| 6. DIMENSIONS AND TORQUES .....                                      | 25 |

---

|                                             |    |
|---------------------------------------------|----|
| 6.1 Engine Dimensions .....                 | 25 |
| 6.2 Generator Dimensions .....              | 26 |
| 6.3 Torque Specifications .....             | 27 |
| 6.4 Standard Torque Specifications .....    | 27 |
| 7. MAINTENANCE .....                        | 29 |
| 7.1 Maintenance Schedule .....              | 29 |
| 7.2 General Inspections .....               | 30 |
| 7.3 Engine Oil .....                        | 30 |
| 7.4 Air Filter Maintenance .....            | 32 |
| 7.5 Fuel Sediment Cup Cleaning .....        | 33 |
| 7.6 Cleaning the Spark Arrester .....       | 34 |
| 7.7 Valve Clearance .....                   | 35 |
| 7.8 Governor Adjustments .....              | 36 |
| 8. SERVICING THE GENERATOR SET .....        | 39 |
| 8.1 Preparing for Service .....             | 39 |
| 9. CONTROL PANEL .....                      | 41 |
| 9.1 Control Panel Components .....          | 41 |
| 9.2 Control Panel Service .....             | 42 |
| 10. GENERATOR SERVICE .....                 | 53 |
| 10.1 Generator Disassembly .....            | 53 |
| 10.2 Generator Reassembly .....             | 56 |
| 10.3 Brush Block and Slip Rings .....       | 56 |
| 10.4 Generator Component Testing .....      | 57 |
| 11. ENGINE .....                            | 61 |
| 11.1 Cylinder Head / Valves .....           | 61 |
| 11.2 Camshaft/Crankshaft .....              | 67 |
| 11.3 Piston .....                           | 71 |
| 11.4 Oil Level Switch .....                 | 76 |
| 12. FUEL, START, AND IGNITION SYSTEMS ..... | 77 |
| 12.1 Fuel System .....                      | 77 |
| 12.2 Choke Assembly .....                   | 80 |
| 12.3 Governor Assembly .....                | 81 |
| 12.4 Carburetor .....                       | 83 |
| 12.5 Fuel Cut-Off Solenoid .....            | 85 |

---

---

|                                              |     |
|----------------------------------------------|-----|
| 12.6 Starting System.....                    | 85  |
| 12.7 Ignition System .....                   | 89  |
| 12.8 Cooling Fan and Fan Cover .....         | 95  |
| 12.9 Flywheel.....                           | 96  |
| 13. INTAKE / EXHAUST SYSTEM.....             | 99  |
| 13.1 Muffler .....                           | 100 |
| 13.2 Air Cleaner .....                       | 101 |
| 13.3 Carbon Canister.....                    | 103 |
| 14. TROUBLESHOOTING.....                     | 105 |
| 14.1 Engine Won't Crank (Manual Start) ..... | 105 |
| 14.2 Engine Cranks But Won't Start .....     | 105 |
| 14.3 Engine Starts But Stops Suddenly .....  | 106 |
| 14.4 Unstable Speed .....                    | 106 |
| 14.5 Abnormal Exhaust Color.....             | 107 |
| 14.6 Low Engine Speed.....                   | 108 |
| 14.7 Low Power .....                         | 108 |
| 14.8 No DC Output Voltage .....              | 109 |
| 14.9 No AC Output Voltage .....              | 110 |
| 15. SERVICE CHECKLIST .....                  | 111 |
| 15.1 Mounting .....                          | 112 |
| 15.2 Lubrication .....                       | 112 |
| 15.3 Wiring.....                             | 112 |
| 15.4 Initial Start Adjustments .....         | 112 |
| 15.5 Exhaust System.....                     | 113 |
| 15.6 Fuel System.....                        | 113 |
| 15.7 Output Check.....                       | 113 |
| 15.8 Control .....                           | 113 |
| 15.9 Mechanical.....                         | 113 |
| 16. WIRING DIAGRAMS .....                    | 115 |
| 16.1 Wiring Diagram of EGMBB / P2220c.....   | 115 |
| 16.2 Wiring Diagram of EGMBG / P2927 .....   | 116 |
| 16.3 Wiring Diagram of EGMBG / P2927c .....  | 117 |
| 16.4 Wiring Diagram of EGMBG / P3027 .....   | 118 |
| 17. MAINTENANCE RECORD .....                 | 119 |

---

**BUY NOW**

**Then Instant Download  
the Complete Manual  
Thank you very much!**