



Service Manual

Cummins **Onan**

Performance you rely on.™



Portable Generator Set

EGMBD, P5500 (Spec A)

EGMBE, P6500 (Spec A)

Table of Contents

1. SAFETY PRECAUTIONS	1
1.1 Exhaust Gas Is Deadly	1
1.2 Gasoline is Flammable / Explosive.....	1
1.3 Generator Voltage is Deadly.....	2
1.4 Moving Parts Can Cause Severe Personal Injury or Death	2
1.5 Battery Gases Are Explosive	2
1.6 General Precautions	2
2. INTRODUCTION	5
2.1 About This Manual	5
2.2 Model Identification	5
2.3 Fuel Requirements.....	5
2.4 Generator Set Assembly Instructions	6
2.5 Wheel Kit Assembly Instructions	7
2.6 Engine Oil Recommendations	8
2.7 Starting Battery	9
3. STARTING AND RUNNING THE GENERATOR SET.....	11
3.1 Control Panel	11
3.2 Pre-Start Checks.....	12
3.3 Starting the Generator Set.....	14
3.4 Stopping the Generator Set	16
3.5 Powering Tools and Appliances	16
3.6 Charging Batteries	18
3.7 Circuit Breakers	18
3.8 Grounding	19
3.9 Low Oil Shutdown	19
3.10 Electrical Interference with Communications or Appliances.....	19
3.11 Exercising the Generator Set.....	19
3.12 Engine Break-In	19
3.13 Out-of-Service Protection.....	20
4. GENERATOR COMPONENTS.....	23
5. SPECIFICATIONS	25

6. DIMENSIONS AND TORQUES	27
6.1 Engine Dimensions	27
6.2 Generator Dimensions	30
6.3 Torque Specifications	31
6.4 Standard Torque Specifications	32
7. MAINTENANCE	33
7.1 Maintenance Schedule	33
7.2 General Inspections	34
7.3 Engine Oil	34
7.4 Air Filter Maintenance	36
7.5 Fuel Sediment Cup Cleaning	37
7.6 Cleaning the Spark Arrester	38
7.7 Valve Clearance	39
7.8 Governor Adjustments	40
8. SERVICING THE GENERATOR SET	43
8.1 Preparing for Service	43
8.2 Removal and Replacement of Gaskets	44
9. CONTROL PANEL	47
9.1 Control Panel Components	47
9.2 Control Panel Service	48
10. GENERATOR SERVICE	59
10.1 Charging Coil	59
10.2 Generator Disassembly	61
10.3 Generator Reassembly	63
10.4 Brush Block and Slip Rings	64
10.5 Generator Component Testing	64
11. ENGINE	69
11.1 Cylinder Head / Valves	69
11.2 Camshaft / Crankshaft	75
11.3 Piston	80
11.4 Oil Level Switch	85
12. FUEL, START, AND IGNITION SYSTEMS	87
12.1 Fuel System	87
12.2 Choke Assembly	90

12.3 Governor Assembly	91
12.4 Carburetor	93
12.5 Fuel Cut-Off Solenoid	95
12.6 Starting System.....	95
12.7 Ignition System	103
13. INTAKE / EXHAUST SYSTEM	113
13.1 Muffler	114
13.2 Air Cleaner	115
14. TROUBLESHOOTING	119
14.1 Engine Won't Crank (Manual Start)	119
14.2 Engine Won't Crank (Electric Start)	119
14.3 Engine Cranks But Won't Start	120
14.4 Engine Starts But Stops Suddenly.....	120
14.5 Starting Battery Runs Down	121
14.6 Unstable Speed	121
14.7 Abnormal Exhaust Color	122
14.8 Low Engine Speed.....	123
14.9 Low Power	123
14.10 No DC Output Voltage	124
14.11 No AC Output Voltage	125
15. SERVICE CHECKLIST	127
15.1 Mounting	128
15.2 Lubrication	128
15.3 Wiring.....	128
15.4 Initial Start Adjustments	128
15.5 Exhaust System	129
15.6 Fuel System	129
15.7 Output Check	129
15.8 Control	129
15.9 Mechanical.....	129
16. WIRING DIAGRAMS	131
16.1 Wiring Diagram of EGMBD / P5500	131
16.2 Wiring Diagram of EGMBE / P6500.....	132
17. MAINTENANCE RECORD	133

BUY NOW

**Then Instant Download
the Complete Manual
Thank you very much!**