



Service Manual

Performance you rely on.™



50 Hz Commercial Portable Generator Set

EGMBM / PX6100e

CONTENTS

Section	Title	Page
1.	SPECIFICATIONS	7
2.	PERFORMANCE CURVES	9
3.	FEATURES.....	11
3-1	BRUSHLESS ALTERNATOR	11
3-2	CONDENSER TYPE VOLTAGE REGULATOR	11
3-3	OIL SENSOR	11
3-4	QUIET OPERATION	11
3-5	NO RADIO NOISE	11
3-6	LARGE FUEL TANK	11
3-7	RUGGED TUBULAR FRAME	11
3-8	COMPACT AND LIGHT WEIGHT	11
3-9	MINIMAL MAINTENANCE	12
3-10	LONG-LIFE DURABILITY	12
4.	GENERAL DESCRIPTION	13
4-1	EXTERNAL VIEW	13
4-2	CONTROL PANEL	14
4-3	LOCATION OF SERIAL NUMBER and SPECIFICATION NUMBER	24
5.	CONSTRUCTION AND FUNCTION	25
5-1	CONSTRUCTION	25
5-2	FUNCTION	25
5-3	GENERAL OPERATION	29
5-4	OIL SENSOR	32
6.	SAFETY PRECAUTION	35
7.	RANGE OF APPLICATIONS	36

CONTENTS (cont.)

Section	Title	Page
8.	MEASURING PROCEDURES	39
8-1	MEASURING INSTRUMENTS.....	39
8-2	AC OUTPUT MEASURING	42
8-3	DC OUTPUT MEASURING	42
8-4	MEASURING INSULATION RESISTANCE	43
9.	CHECKING FUNCTIONAL MEMBERS.....	45
9-1	VOLTMETER	45
9-2	AC RECEPTICALS	45
9-3	No-FUSE BREAKER	45
9-4	STATOR	46
9-5	ROTOR ASSEMBLY	47
9-6	CONDENSER	47
9-7	DIODE RECTIFIER	48
9-8	OIL SENSOR	49
10.	DISASSEMBLY AND ASSEMBLY	50
10-1	PREPARATION and PRECAUTIONS	50
10-2	DISASSEMBLY PROCEDURES	51
10-3	ASSEMBLY PROCEDURES	59
10-4	CHECKING, DISASSEMBLY and REASSEMBLY of the FRONT PANEL	64
11.	TROUBLESHOOTING	66
11-1	NO AC OUTPUT	66
11-2	AC VOLTAGE IS TOO HIGH OR TOO LOW	68
11-3	AC VOLTAGE IS NORMAL AT NO-LOAD, BUT THE LOAD CANNOT BE APPLIED	69
11-4	NO DC OUTPUT	70
11-5	IDLE CONTROL (OPTIONAL EQUIPMENT)	71
12.	WIRING DIAGRAM	74

BUY NOW

**Then Instant Download
the Complete Manual
Thank you very much!**