



Service Manual

Performance you rely on.™



Portable Generator Set

EGMBT, P4500 (Spec A)
EGMBU, P5000e (Spec A)

Table of Contents

1. SAFETY PRECAUTIONS	1
1.1 Exhaust Gas Is Deadly	1
1.2 Gasoline is Flammable / Explosive.....	1
1.3 Generator Voltage is Deadly.....	2
1.4 Moving Parts Can Cause Severe Personal Injury or Death	2
1.5 Battery Gases Are Explosive	2
1.6 General Precautions	2
2. INTRODUCTION	5
2.1 About This Manual	5
2.2 Model Identification	5
2.3 Wheel Kit.....	5
2.4 Fuel Requirements.....	6
2.5 Generator Set Assembly Instructions	7
2.6 Wheel Kit Assembly Instructions	8
2.7 Starting Battery	9
3. HOW TO OBTAIN SERVICE	11
3.1 Outside North America.....	11
3.2 Information to Have Ready	11
4. STARTING AND RUNNING THE GENERATOR SET.....	13
4.1 Control Panel	13
4.2 Pre-Start Checks.....	13
4.3 Starting the Generator Set.....	15
4.4 Stopping the Generator Set	17
4.5 Powering Tools and Appliances	18
4.6 Charging Batteries	20
4.7 Circuit Breakers	20
4.8 Grounding	20
4.9 Low Oil Shutdown	20
4.10 Electrical Interference with Communications or Appliances	21
4.11 Exercising the Generator Set.....	21
4.12 Engine Break-In	21
4.13 Out-of-Service Protection.....	21

5. GENERATOR COMPONENTS	24
6. SPECIFICATIONS	27
7. DIMENSIONS AND TORQUES	29
7.1 Engine Dimensions	29
7.2 Generator Dimensions	33
7.3 Torque Specifications	33
7.4 Standard Torque Specifications	34
8. MAINTENANCE	35
8.1 Maintenance Schedule	35
8.2 General Inspections	36
8.3 Engine Oil	36
8.4 Air Filter Maintenance	38
8.5 Fuel Sediment Cup Cleaning	39
8.6 Cleaning the Spark Arrester	40
8.7 Valve Clearance	41
8.8 Governor Adjustments	42
9. SERVICING THE GENERATOR SET	45
9.1 Preparing for Service	45
10. CONTROL PANEL	49
10.1 Control Panel Components	49
10.2 Control Panel Service	50
11. GENERATOR SERVICE	59
11.1 Charging Coil	59
11.2 Generator Disassembly	61
11.3 Generator Reassembly	63
11.4 Brush Block and Slip Rings	64
11.5 Generator Component Testing	64
12. ENGINE	69
12.1 Cylinder Head / Valves	69
12.2 Camshaft / Crankshaft	75
12.3 Piston	80
12.4 Oil Level Switch	85
13. FUEL, START, AND IGNITION SYSTEMS	87
13.1 Fuel System	87

13.2 Choke Assembly	90
13.3 Governor Assembly	91
13.4 Carburetor	93
13.5 Fuel Cut-Off Solenoid	95
13.6 Starting System.....	95
13.7 Ignition System	103
14. INTAKE / EXHAUST SYSTEM	113
14.1 Muffler	114
14.2 Air Cleaner	115
15. TROUBLESHOOTING	119
15.1 Engine Won't Crank (Manual Start)	119
15.2 Engine Won't Crank (Electric Start)	119
15.3 Engine Cranks But Won't Start	120
15.4 Engine Starts But Stops Suddenly.....	120
15.5 Starting Battery Runs Down	121
15.6 Unstable Speed	121
15.7 Abnormal Exhaust Color	122
15.8 Low Engine Speed.....	123
15.9 Low Power	123
15.10 No DC Output Voltage	124
15.11 No AC Output Voltage	125
16. SERVICE CHECKLIST	127
16.1 Mounting	128
16.2 Lubrication	128
16.3 Wiring.....	128
16.4 Initial Start Adjustments	128
16.5 Exhaust System	129
16.6 Fuel System	129
16.7 Output Check	129
16.8 Control	129
16.9 Mechanical.....	129
17. WIRING DIAGRAMS	131
17.1 Wiring Diagram of EGMBT / P4500.....	131
17.2 Wiring Diagram of EGMBU / P5000e	132
18. MAINTENANCE RECORD	133

19. GLOBAL ADDRESSES	135
----------------------------	-----

BUY NOW

**Then Instant Download
the Complete Manual
Thank you very much!**