



Onan

Service Manual

GEA SERIES GENERATOR SETS

FILE COPY
LITERATURE SECTION
RETURN TO FILE
TECH. PUB. DEPT.

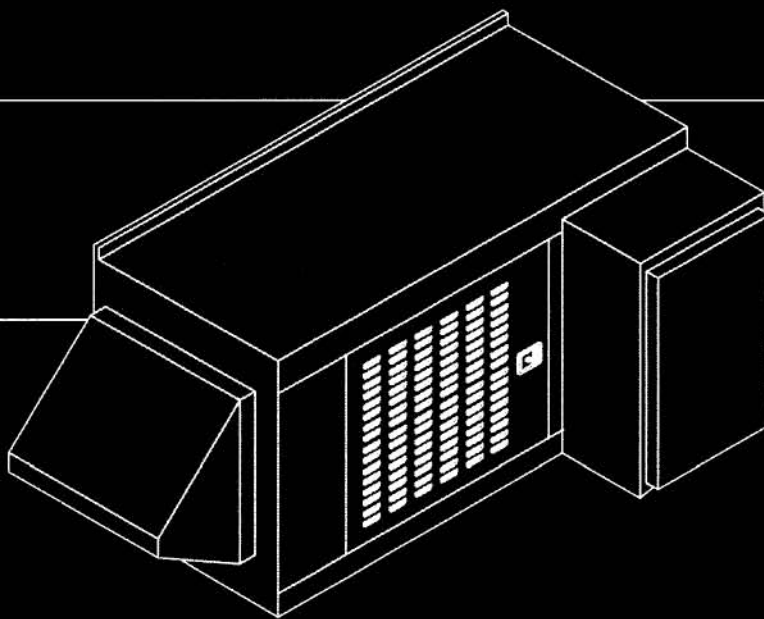


Table of Contents

Safety Precautions	ii
1. Introduction	
ABOUT THIS MANUAL	1-1
TEST EQUIPMENT	1-1
2. AC Control	
AC CONTROL PANEL COMPONENTS	2-1
CONTROL BOX	2-2
AC CONNECTIONS INSIDE MOUNTED AUTOMATIC TRANSFER SWITCH (ATS)	2-3
AC CONNECTIONS WHEN AUTOMATIC TRANSFER SWITCH (ATS) NOT PROVIDED	2-4
VOLTAGE REGULATOR	2-5
PRINCIPLE OF GENERATOR OPERATION	2-8
3. DC Control	
CONTROL PANEL COMPONENTS	3-1
ENGINE ACCESSORIES, SENSORS AND SHUTDOWN SWITCHES	3-4
ENGINE MONITOR (A11)	3-6
AUXILIARY RELAY BOARD (A28)	3-8
EMERGENCY OVERRIDE MODULE (A29)	3-10
ELECTRONIC OVERSPEED/START DISCONNECT MODULE	3-11
COOLANT TEMPERATURE GAUGE ASSEMBLY	3-12
RELAYS K11 AND K12	3-13
MANUAL FUEL SELECTOR SWITCH (S10)	3-14
LOW GAS PRESSURE SWITCH (E4)	3-14
SEQUENCE OF OPERATION	3-14
4. Troubleshooting	
THE ENGINE DOES NOT CRANK IN RUN MODE	4-1
THE ENGINE DOES NOT CRANK IN REMOTE MODE	4-3
THE ENGINE CRANKS BUT DOES NOT START	4-4
THE ENGINE RUNS UNTIL FAULT SHUTDOWN	4-6
THE ENGINE LACKS POWER OR IS UNSTABLE	4-7
AN AMBER WARNING LAMP IS ON	4-8
THE GREEN RUN LAMP STAYS OFF BUT THE SET RUNS NORMALLY	4-9
NO OUTPUT VOLTAGE	4-10
OUTPUT VOLTAGE IS TOO HIGH OR TOO LOW	4-13
OUTPUT VOLTAGE IS UNSTABLE	4-14
THE FIELD CIRCUIT BREAKER KEEPS TRIPPING	4-15
THE PHASE CURRENTS ARE UNBALANCED	4-16
5. Generator	
TESTING THE GENERATOR	5-1
GENERATOR DISASSEMBLY AND REASSEMBLY	5-8
6. Fuel System / Governor	
FUEL SYSTEM	6-1
GAS MIXTURE AND IDLE SPEED STOP ADJUSTMENTS	6-4
ELECTRONIC GOVERNOR	6-6
GOVERNOR LINKAGE	6-7
7. Wiring Diagrams	

BUY NOW

**Then Instant Download
the Complete Manual
Thank you very much!**