


Service Manual

Detector™ Control


Generator Sets

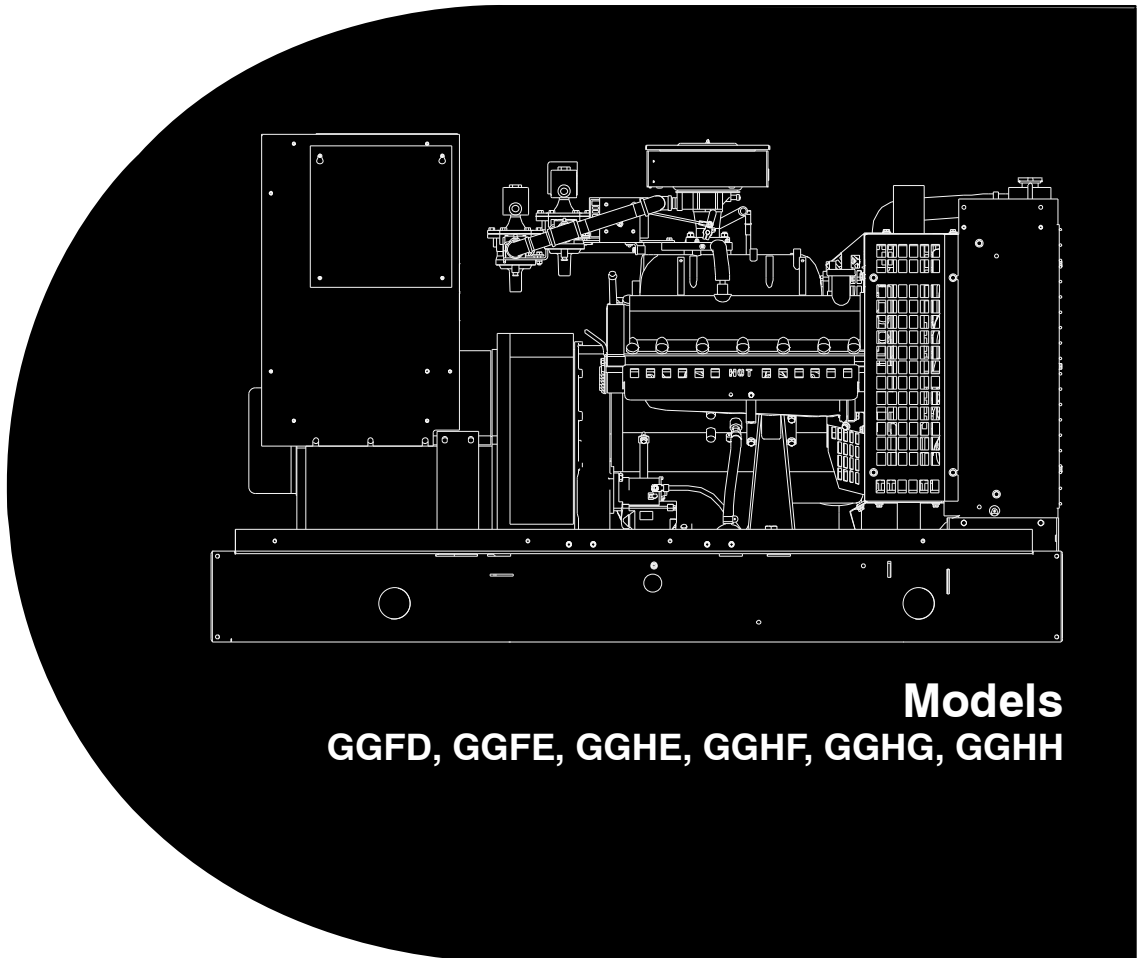

Models
GGFD, GGFE, GGHE, GGHF, GGHG, GGHH

Table of Contents

SECTION	TITLE	PAGE
	IMPORTANT SAFETY INSTRUCTIONS	iii
1	INTRODUCTION	
	About This Manual	1-1
	Test Equipment	1-1
	How To Obtain Service	1-1
2	AC CONTROL	
	General	2-1
	AC Control Panel Components	2-1
	Automatic Voltage Regulator (AVR) Adjustments	2-2
	Principle Of Generator Operation	2-7
	UFRO Frequency Adjustment For Turbo Gensets	2-8
3	ENGINE CONTROL	
	General	3-1
	Control Panel Components	3-1
	Control Box Interior	3-3
	Engine Control Monitor (A11)	3-3
	Engine Sensors	3-6
	MAP Sensor (V10 Turbo Only) (Optional)	3-10
	Ignition Control Module (ICM)	3-11
	Auxiliary Control Components	3-12
	Sequence Of Operation	3-15

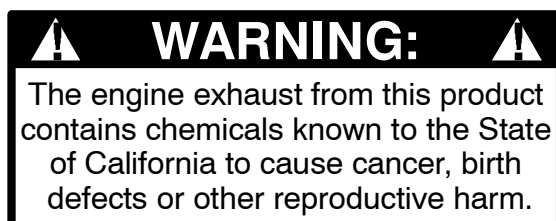

SECTION	TITLE	PAGE
4	TROUBLESHOOTING	
	The Engine Does Not Crank In Run Mode	4-1
	The Engine Does Not Crank In Remote Mode	4-3
	The Engine Cranks But Does Not Start	4-4
	The Engine Runs Until Fault Shutdown	4-7
	The Engine Lacks Power Or Is Unstable	4-10
	An Amber Warning Lamp Is On	4-13
	Low Emissions Genset Only	4-14
	The Green Run Lamp Stays Off But The Set Runs Normally	4-16
	No Output Voltage	4-17
	Output Voltage Is Too High Or Too Low	4-20
	Output Voltage Is Unstable	4-21
	The Field Circuit Breaker Keeps Tripping	4-22
	The Phase Currents Are Unbalanced	4-23
5	SERVICING THE GENERATOR	
	Testing The Generator	5-1
	Removing And Disassembling The Generator	5-9
	Reassembling The Generator	5-11
	Servicing The PMG	5-11
6	GOVERNORS AND FUEL SYSTEMS	
	General	6-1
	Fuel Pressure (Type A & B)	6-1
	Type A Governor/Fuel System Adjustments	6-2
	Type B Governor/Fuel System Adjustments	6-7
	Magnetic Speed Pickup Unit Adjustment	6-9
	Initial Secondary Regulator Adjustment	6-10
	Fuel Conversion (NG to LPV or LPV to NG)	6-11
	Verify Overspeed Fault Detection	6-12
7	WIRING DIAGRAMS	7-1

BUY NOW

**Then Instant Download
the Complete Manual
Thank you very much!**