

Service Manual

GenSet Model GNAA, GNAB, GNAC

**with PowerCommand[®] Control
PCC1301**

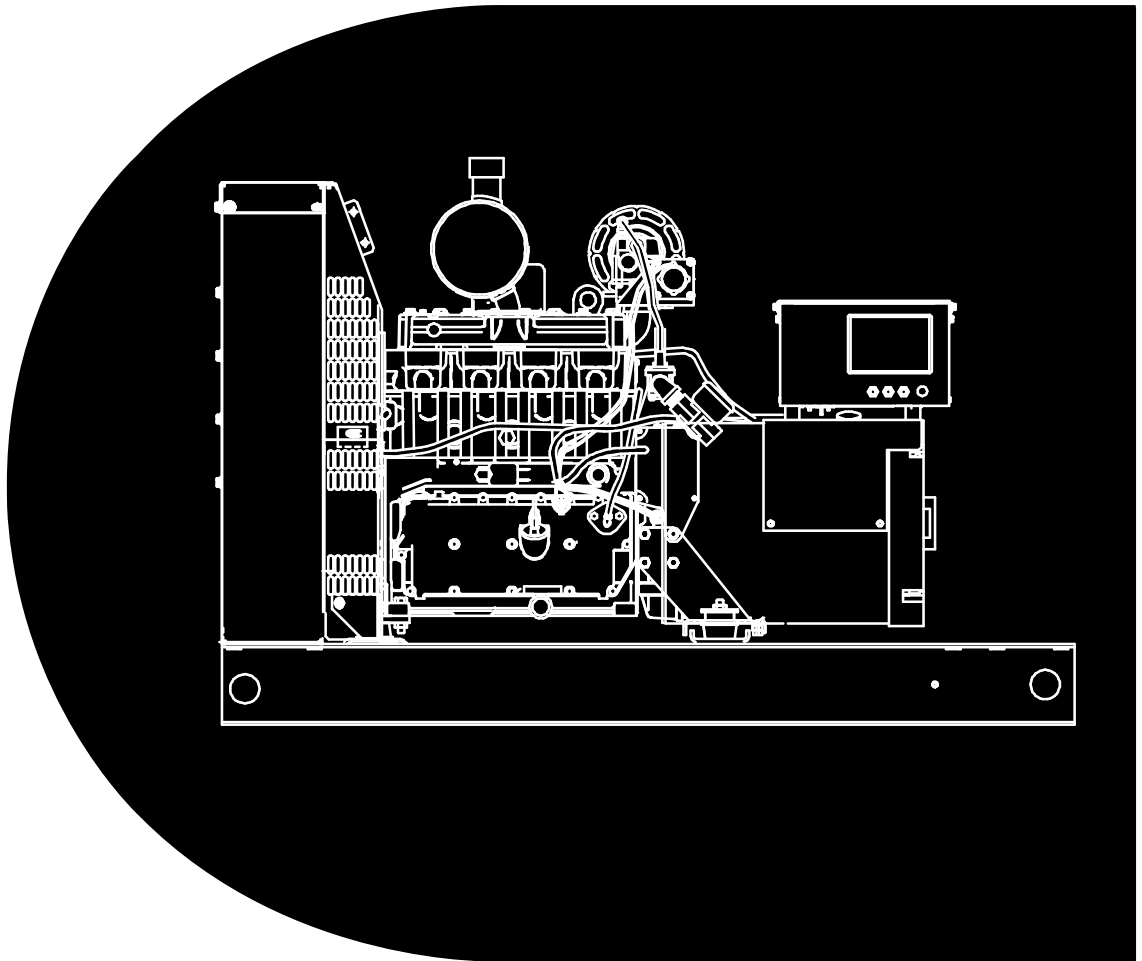


Table of Contents

SECTION	TITLE	PAGE
	IMPORTANT SAFETY INSTRUCTIONS	iii
1	INTRODUCTION	
	About this Manual	1-1
	Generator Set	1-1
	System Overview	1-2
	Test Equipment	1-2
	How to Obtain Service	1-2
2	CONTROL OPERATION (WITHOUT DISPLAY)	
	General	2-1
	Control Panel	2-1
3	CONTROL OPERATION (WITH DISPLAY)	
	General	3-1
	Control Panel Power On/Off Modes	3-1
	Control Panel	3-2
	System Messages	3-5
	Selecting Auto, Manual Run and OFF Modes	3-7
	Operator Menus	3-10
	Service Menus	3-14
	History/About Menu	3-16
	Screen Adjust Menu	3-18
	Fault History Menu	3-20
4	CIRCUIT BOARD	
	General	4-1
	Base Board	4-3
5	TROUBLESHOOTING	
	General	5-1
	InPower Service Tool	5-1
	Network Applications and Customer Inputs	5-1
	Safety Consideration	5-2
	Reading Fault Codes	5-2
	Troubleshooting Procedure	5-3

SECTION	TITLE	PAGE
6	CONTROL ADJUSTMENT AND SERVICE	
	General	6-1
	Circuit Board Removal/Replacement	6-2
	Setup Menu	6-3
	Genset Service Menus	6-4
	Genset Service Submenus	6-6
	Automatic Voltage Regulator Submenus	6-12
	Electronic Governor Submenus	6-14
	Customer I/O Submenus	6-16
	Metering Submenus	6-18
	Annunciator Submenus	6-20
	Genset Setup Submenus	6-25
	Genset Submenus	6-28
	Voltage Protection Submenus	6-34
	Current Protection Submenus	6-36
	Engine Protection Submenus	6-38
	TB1 Base Board Customer Connections	6-44
	Engine Sensors	6-45
	Magnetic Speed Pickup Unit (MPU) Installation	6-46
	Current Transformer (CT) Installation	6-47
7	SERVICING THE GENERATOR	
	General	7-1
	Generator/Base Board Isolation Procedure	7-2
	Testing the Generator	7-3
	Generator Disassembly	7-9
	Generator Reassembly	7-10
8	ENGINE	
	Troubleshooting	8-1
	Engine Disassembly and Reassembly	8-2
	Dimensions of Wearing Parts	8-6
	Engine Block Systems	8-8
	Lubricating System	8-29
	Cooling System	8-31
	Crankcase Breather System	8-33
	Ignition System	8-34
	Fuel System	8-37
	Governor Actuator	8-39
9	WIRING DIAGRAMS	
	General	9-1
A	MENU SEQUENCE DIAGRAMS	
	General	A-1

IMPORTANT SAFETY INSTRUCTIONS

SAVE THESE INSTRUCTIONS – This manual contains important instructions that should be followed during installation and maintenance of the generator and batteries.

Before operating the generator set (genset), read the Operator's Manual and become familiar with it and the equipment. **Safe and efficient operation can be achieved only if the equipment is properly operated and maintained.** Many accidents are caused by failure to follow fundamental rules and precautions.

The following symbols, found throughout this manual, alert you to potentially dangerous conditions to the operator, service personnel, or the equipment.

⚠ DANGER *This symbol warns of immediate hazards which will result in severe personal injury or death.*

⚠ WARNING *This symbol refers to a hazard or unsafe practice which can result in severe personal injury or death.*

⚠ CAUTION *This symbol refers to a hazard or unsafe practice which can result in personal injury or product or property damage.*

FUEL AND FUMES ARE FLAMMABLE

Fire, explosion, and personal injury or death can result from improper practices.

- DO NOT fill fuel tanks while engine is running, unless tanks are outside the engine compartment. Fuel contact with hot engine or exhaust is a potential fire hazard.
- DO NOT permit any flame, cigarette, pilot light, spark, arcing equipment, or other ignition source near the generator set or fuel tank.
- Fuel lines must be adequately secured and free of leaks. Fuel connection at the engine should be made with an approved flexible line. Do not use copper piping on flexible lines as copper will become brittle if continuously vibrated or repeatedly bent.
- Natural gas is lighter than air, and will tend to gather under hoods. Propane is heavier than air, and will

tend to gather in sumps or low areas. NFPA code requires all persons handling propane to be trained and qualified.

- Be sure all fuel supplies have a positive shutoff valve.
- Be sure battery area has been well-ventilated prior to servicing near it. Lead-acid batteries emit a highly explosive hydrogen gas that can be ignited by arcing, sparking, smoking, etc.

EXHAUST GASES ARE DEADLY

- Provide an adequate exhaust system to properly expel discharged gases away from enclosed or sheltered areas and areas where individuals are likely to congregate. Visually and audibly inspect the exhaust daily for leaks per the maintenance schedule. Make sure that exhaust manifolds are secured and not warped. Do not use exhaust gases to heat a compartment.
- Be sure the unit is well ventilated.
- Engine exhaust and some of its constituents are known to the state of California to cause cancer, birth defects, and other reproductive harm.

MOVING PARTS CAN CAUSE SEVERE PERSONAL INJURY OR DEATH

- Keep your hands, clothing, and jewelry away from moving parts.
- Before starting work on the generator set, disconnect battery charger from its AC source, then disconnect starting batteries, negative (-) cable first. This will prevent accidental starting.
- Make sure that fasteners on the generator set are secure. Tighten supports and clamps, keep guards in position over fans, drive belts, etc.
- Do not wear loose clothing or jewelry in the vicinity of moving parts, or while working on electrical equipment. Loose clothing and jewelry can become caught in moving parts. Jewelry can short out electrical contacts and cause shock or burning.
- If adjustment must be made while the unit is running, use extreme caution around hot manifolds, moving parts, etc.

ELECTRICAL SHOCK CAN CAUSE SEVERE PERSONAL INJURY OR DEATH

- Remove electric power before removing protective shields or touching electrical equipment. Use rubber insulative mats placed on dry wood platforms over floors that are metal or concrete when around electrical equipment. Do not wear damp clothing (particularly wet shoes) or allow skin surface to be damp when handling electrical equipment.
- Use extreme caution when working on electrical components. High voltages can cause injury or death. DO NOT tamper with interlocks.
- Follow all applicable state and local electrical codes. Have all electrical installations performed by a qualified licensed electrician. Tag and lock open switches to avoid accidental closure.
- DO NOT CONNECT GENERATOR SET DIRECTLY TO ANY BUILDING ELECTRICAL SYSTEM. Hazardous voltages can flow from the generator set into the utility line. This creates a potential for electrocution or property damage. Connect only through an approved isolation switch or an approved paralleling device.

GENERAL SAFETY PRECAUTIONS

- Coolants under pressure have a higher boiling point than water. DO NOT open a radiator or heat exchanger pressure cap while the engine is running. Allow the generator set to cool and bleed the system pressure first.
- Benzene and lead, found in some gasoline, have been identified by some state and federal agencies as causing cancer or reproductive toxicity. When checking, draining or adding gasoline, take care not to ingest, breathe the fumes, or contact gasoline.
- Used engine oils have been identified by some state or federal agencies as causing cancer or reproductive toxicity. When checking or changing engine oil, take care not to ingest, breathe the fumes, or contact used oil.
- Keep multi-class ABC fire extinguishers handy. Class A fires involve ordinary combustible materials such as wood and cloth; Class B fires, combustible and flammable liquid fuels and gaseous fuels; Class C fires, live electrical equipment. (ref. NFPA No. 10).
- Make sure that rags are not left on or near the engine.
- Make sure generator set is mounted in a manner to prevent combustible materials from accumulating under the unit.
- Remove all unnecessary grease and oil from the unit. Accumulated grease and oil can cause overheating and engine damage which present a potential fire hazard.
- Keep the generator set and the surrounding area clean and free from obstructions. Remove any debris from the set and keep the floor clean and dry.
- Do not work on this equipment when mentally or physically fatigued, or after consuming any alcohol or drug that makes the operation of equipment unsafe.
- Substances in exhaust gases have been identified by some state or federal agencies as causing cancer or reproductive toxicity. Take care not to breathe or ingest or come into contact with exhaust gases.
- Do not store any flammable liquids, such as fuel, cleaners, oil, etc., near the generator set. A fire or explosion could result.
- Wear hearing protection when going near an operating generator set.
- To prevent serious burns, avoid contact with hot metal parts such as radiator, turbo charger and exhaust system.

KEEP THIS MANUAL NEAR THE GENSET FOR EASY REFERENCE

1. Introduction

ABOUT THIS MANUAL

This manual provides troubleshooting and repair information regarding the PowerCommand® 1301 Control (PCC) and generators for the generator sets (gensets) listed on the front cover. Engine service instructions are in the applicable engine service manual. Operating and maintenance instructions are in the applicable Operator's Manual.

This manual does not have instructions for servicing printed circuit board assemblies. After determining that a printed circuit board assembly is faulty, replace it, do not repair it. Attempts to repair a printed circuit board can lead to costly damage to the equipment.

This manual contains basic (generic) wiring diagrams and schematics that are included to help in troubleshooting. Service personnel must use the actual wiring diagram and schematic shipped with each unit. The wiring diagrams and schematics that are maintained with the unit should be updated when modifications are made to the unit.

Read **Important Safety Instructions** and carefully observe all instructions and precautions in this manual.

GENERATOR SET CONTROL

There are two versions of the PCC 1301 that can be configured with this genset. For reference only, they are referred to as PCC 1301 (Without Display) and PCC 1301 (With Display) in this manual (Figure 1-1).

Sections in this manual that are specific to either PCC 1301 control are noted in the section title. All other sections apply to both versions.

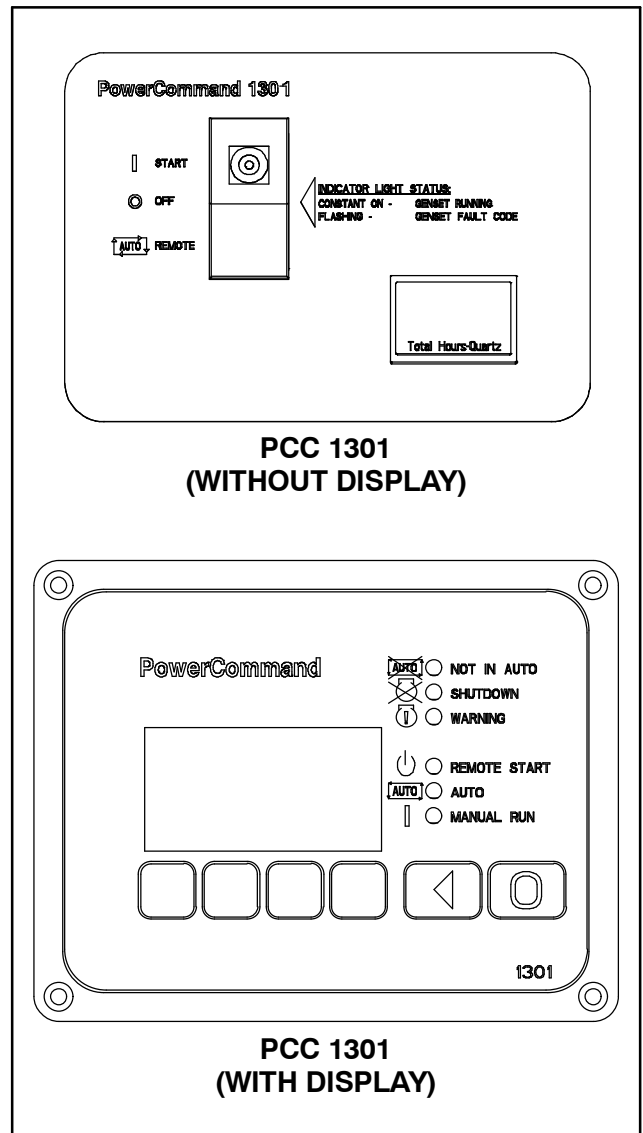


FIGURE 1-1. CONTROL PANEL CONFIGURATIONS

SYSTEM OVERVIEW

The PCC is a microprocessor-based control for Cummins Power Generation generator sets. All generator set control functions are contained on one circuit board (Base board). The Base board provides fuel control, main alternator voltage output regulation and complete generator set control and monitoring.

The operating software provides control of the generator set and its performance characteristics, and displays performance information on a digital display panel. It accepts menu-driven control and set-up input from the push button switches on the front panel.

TEST EQUIPMENT

To perform the test procedures in this manual, the following test equipment must be available

- True RMS meter for accurate measurement of small AC and DC voltages. Fluke models 87 or 8060A are good choices.
- Grounding wrist strap to prevent circuit board damage due to electrostatic discharge (ESD).
- Battery Hydrometer.

- Jumper Leads.
- Tachometer or Frequency Meter.
- Wheatstone Bridge or Digital Ohmmeter.
- Variac.
- Load Test Panel.
- Megger or Insulation Resistance Meter.
- InPower™ Service Tool (PC based genset service tool).

HOW TO OBTAIN SERVICE

Always give the complete Model, Specification and Serial number of the generator set as shown on the nameplate when seeking additional service information or replacement parts. The nameplate is located on the back of the control box.

⚠WARNING *Incorrect service or replacement of parts can result in severe personal injury or death, and/or equipment damage. Service personnel must be trained and experienced to perform electrical and mechanical service. Read and follow Important Safety Instructions on pages iii and iv.*

BUY NOW

**Then Instant Download
the Complete Manual
Thank you very much!**