



Service Manual

Cummins **Onan**

Performance you rely on.™



RV Generator Set

HDKAH (Spec A-M)
HDKAJ (Spec A-M)
HDKAK (Spec A-M)
HDKAT (Spec A-M)
HDKAU (Spec A-M)
HDKAV (Spec A-M)

Table of Contents

SECTION	PAGE
SAFETY PRECAUTIONS	v
1. INTRODUCTION	1-1
About this Manual	1-1
Service Parts and Information	1-1
Typical Genset	1-2
2. SPECIFICATIONS	2-1
3. THREAD TORQUES	3-1
4. OPERATION	4-1
Fuel Recommendations	4-1
Engine Oil Recommendations	4-1
Starting Batteries	4-1
Operator's Console	4-2
Remote Control Panel	4-2
Priming the Fuel System	4-3
Starting	4-3
Stopping	4-3
5. PERIODIC MAINTENANCE	5-1
Periodic Maintenance Schedule	5-1
General Inspection	5-2
Checking Engine Oil Level	5-3
Changing Engine Oil and Oil Filter	5-3
Spark Arrestor	5-5
Batteries	5-6
Air Filter	5-6
Fuel Filter	5-7
Changing Coolant	5-8
Coolant Temperature Input	5-10
6. PREPARATIONS FOR SERVICE	6-1
Special Tools	6-1
Safety	6-1
Removing Genset From Vehicle	6-2

SECTION	PAGE
Test Stand	6-2
Removing Housing Panels	6-3
Installing Housing Panels	6-3
7. ENGINE AIR INTAKE	7-1
Component Layout	7-1
8. MUFFLER	8-1
Removal	8-1
Installation	8-1
9. ENGINE COOLING SYSTEM	9-1
General	9-1
Radiator Removal	9-1
Radiator Installation	9-1
10. CONTROLLER-INVERTER	10-1
General	10-1
Removal	10-1
Installation	10-1
Controller-Inverter Functions	10-3
11. PMA (GENERATOR)	11-1
General	11-1
Stator Tests	11-1
Stator Removal	11-3
Stator Installation	11-3
Rotor Removal	11-3
Rotor Installation	11-3
12. ENGINE	12-1
Engine Service	12-1
Replacing Coolant Pump Belt	12-1
Engine Sensors	12-1
Engine Removal	12-2
Engine Installation	12-2
Replacing Low Oil Pressure Cutoff Switch	12-2
13. GOVERNOR ACTUATOR	13-1
General	13-1
Actuator Removal	13-1

SECTION	PAGE
Actuator Installation	13-1
Actuator Speed Control Lever Stop (Beginning Spec B)	13-4
High-Idle Speed	13-5
High-Idle Stop Screw	13-6
14. FUEL SYSTEM	14-1
General	14-1
Fuel Pump	14-1
Fuel Filter	14-1
Fuel Injection System	14-1
15. BATTERY CHARGER	15-1
Removal	15-1
Installation	15-1
16. STARTER MOTOR	16-1
Removal	16-1
Installation	16-1
Starter Solenoid Replacement	16-2
17. SERVICE CHECKLIST	17-1
18. TROUBLESHOOTING	18-1
Troubleshooting With Table 18-1	18-1
Fault Code Blinking	18-1
Restoring Fault Code Blinking	18-1
Bypassable Faults: Prior to Spec F	18-1
ENGINE WIRING HARNESS	A-1
AC WIRING HARNESS	A-2
BATTERY WIRING HARNESS	A-3
WIRING DIAGRAM	A-4

BUY NOW

**Then Instant Download
the Complete Manual
Thank you very much!**

