



# Service Manual

Cummins **Onan**

Performance you rely on.™



## Generator Set

KY (Spec M)  
KYD (Spec C)

---

# Table of Contents

SECTION	PAGE
SAFETY PRECAUTIONS .....	iv
1. INTRODUCTION .....	1-1
2. SPECIFICATIONS .....	2-1
3. DIMENSIONS AND CLEARANCES .....	3-1
4. TORQUE SPECIFICATIONS .....	4-1
5. PREPARING FOR SERVICE .....	5-1
Troubleshooting .....	5-1
Safety .....	5-1
Special Tools .....	5-2
Removing Genset .....	5-2
Reinstalling Genset .....	5-5
6. CONTROL .....	6-1
Controller A1 .....	6-1
Control Component Tests .....	6-3
7. GENERATOR .....	7-1
Generator Description .....	7-1
Generator Service .....	7-3
Brushes and Slip Rings .....	7-6
Generator Testing .....	7-8
Rotor Bearing Replacement .....	7-10
8. PRIMARY ENGINE SYSTEMS .....	8-1
Introduction .....	8-1
Cooling System .....	8-1
Exhaust System .....	8-3
Ignition System .....	8-4
Crankcase Ventilation System .....	8-6
Governor .....	8-7
Gasoline Fuel System .....	8-9
LPG Fuel System .....	8-15

<b>SECTION</b>	<b>PAGE</b>
Electric Starter .....	8-18
9. ENGINE BLOCK ASSEMBLY .....	9-1
Introduction .....	9-1
Leak Down Test .....	9-2
Oil Pan .....	9-3
Head Cover .....	9-3
Rocker Arms, Push Rods and Cylinder Head .....	9-4
Valve System .....	9-5
Crankcase Cover .....	9-9
Governor .....	9-9
Camshaft, Tappet and Balancer Removal .....	9-10
Piston and Crankshaft .....	9-10
Inspecting Engine Parts .....	9-11
Piston and Crankshaft Installation .....	9-16
Bearings .....	9-17
Oil Seal .....	9-17
10. TROUBLESHOOTING .....	10-1
Genset Starts or Stops Without Command – No Fault Code .....	10-2
No Response – Status Indicator Light Dead .....	10-3
Starting Batteries Run Down .....	10-3
Starter Engages – Disengages .....	10-4
No AC Power – Genset Running, Status LED On Steady .....	10-4
Genset Cranks But Does Not Start – No Fault Code .....	10-5
Genset Runs But Stops When Switch Is Released – No Fault Code .....	10-5
Genset Shuts Down and may restart but shuts down again – No Fault Code ..	10-6
Service Check Fault – Fault Code 3 .....	10-6
Overcrank – Fault Code 4 .....	10-7
OVERVOLTAGE – FAULT CODE 12 .....	10-9
Undervoltage – Fault Code 13 .....	10-10
Overfrequency – Fault Code 14 .....	10-11
Underfrequency – Fault Code 15 .....	10-13
Voltage Sense Lost – Fault Code 27 .....	10-15
High Battery Voltage – Fault Code 29 .....	10-16
Low Cranking Speed Sense – Fault Code 32 .....	10-17

<b>SECTION</b>	<b>PAGE</b>
Fault Code 33 – Fault Code 33 .....	10-18
Control Card Failure – Fault Code 35 .....	10-19
Genset Stopped Without Fault Condition – Fault Code 36 .....	10-19
Field Overload (Overvoltage) – Fault Code 38 .....	10-21
Generator Rotor Fault – Fault Code 41 .....	10-22
Processor Fault – Fault Code 42 .....	10-24
Processor Fault – Fault Code 43 .....	10-24
Speed Sense Fault – Fault Code 45 .....	10-25
Field Sense Fault – Fault Code 48 .....	10-27
Processor Failure – Fault Code 51 .....	10-27
11. SERVICE CHECKLIST .....	11-1
WIRING DIAGRAM—60 HERTZ, 120V/100 .....	A-1
ENGINE WIRING HARNESS—60 HERTZ, 120V .....	A-2
WIRING DIAGRAM—50 HERTZ AND 60 HERTZ, 100V .....	A-3
ENGINE WIRING HARDNESS—50 HERTZ AND 60 HERTZ, 100V .....	A-4
RECONNECTION DIAGRAMS .....	A-5

**BUY NOW**

**Then Instant Download  
the Complete Manual  
Thank you very much!**

