



MARINE

Service Manual

Admiral^{T.M.}

MCGBA MCGDA MDGDA
MCGCA MCGDB MDGDB
MCGGA

Platinum

MDGDC
MDGDD

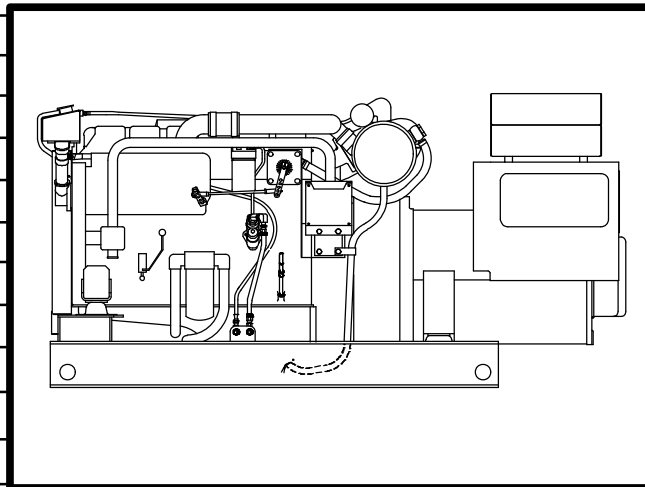
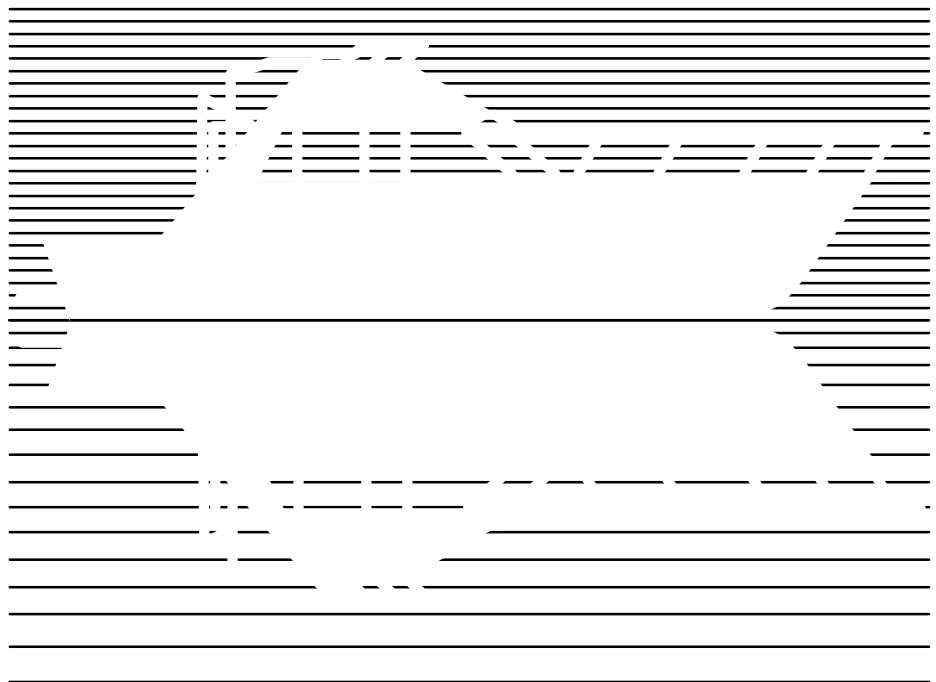


Table of Contents

SECTION	TITLE	PAGE
	SAFETY PRECAUTIONS	iii
1	INTRODUCTION	1-1
	About this Manual	1-1
	Test Equipment	1-1
	How To Obtain Service	1-1
2	AC CONTROL	2-1
	Principle Of Generator Operation	2-1
	Automatic Voltage Regulator	2-2
	Automatic Voltage Regulator Adjustments	2-3
	AC Meter Panel	2-6
3	ENGINE CONTROL	3-1
	General	3-1
	Standard Control Components	3-1
	Optional Control Components	3-1
	Engine Sensor Locations	3-2
	Sequence Of Operation	3-4
4	TROUBLESHOOTING	4-1
	Engine Does Not Crank	4-2
	Engine Cranks But Does Not Start	4-3
	Engine Runs Until Fault Shutdown	4-4
	No Output Voltage At Stable Operating Speed (PMG-Excited Generators)	4-5
	No Output Voltage At Stable Operating Speed (Self-Excited Generators)	4-6
	Unstable Output Voltage At Stable Operating Speed	4-7
	Output Voltage Too High Or Too Low	4-7
	Field Circuit Breaker Keeps Tripping	4-8
	Unbalanced Output Voltage	4-9
	No Output Through Mounted Line Circuit Breaker	4-9

California

Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

SECTION	TITLE	PAGE
5	SERVICING THE GENERATOR	5-1
	Testing The Generator	5-1
	Removing And Disassembling The Generator	5-8
	Reassembling The Generator	5-10
	Servicing The PMG	5-10
6	GOVERNORS	6-1
	Mechanical Governor	6-1
	Electric Governor (Type I)	6-2
	Electric Governor (Type II)	6-7
7	MISCELLANEOUS	7-1
	Heat Exchanger	7-1
	Power Takeoff Unit	7-1
8	WIRING DIAGRAMS	8-1

BUY NOW

**Then Instant Download
the Complete Manual
Thank you very much!**