



Service Manual

Cummins **Onan**

Performance you rely on.™



Generator Set

MDKAV (Specs A–C)
MDKAW (Spec A–C)
MDKAZ (Specs A–C)
MDKBD (Spec A–B)
MDKBE (Spec A–B)
MDKBF (Specs A–B)
MDKBG (Specs A–C)

Table of Contents

SAFETY PRECAUTIONS	iii
1. INTRODUCTION	1-1
About this Manual	1-1
Fuel Recommendations	1-2
Engine Oil Recommendations	1-2
Starting Batteries	1-2
Specifications	1-3
2. OPERATION	2-1
Control Panel	2-1
Starting and Stopping the Genset	2-3
Operation	2-4
3. PERIODIC MAINTENANCE	3-1
General Inspection	3-2
Checking Engine Oil Level	3-3
Changing Engine Oil and Filter	3-3
Draining / Changing Fuel Filter	3-5
Maintaining Battery and Battery Connections	3-6
Engine Cooling System	3-7
4. CONTROL SYSTEM	4-1
Controller A1	4-1
Control Switch S4	4-4
Emergency Stop Switch CB1	4-4
DC Circuit Breaker CB2	4-4
Hour Meter M11	4-4
Engine Oil Pressure Sender E1	4-5
Engine Coolant Temperature Sender E2	4-5
Raw Water Flow Switch S6	4-5
High Exhaust Temperature Switch S5	4-6
Low Coolant Level Switch S3 (Optional)	4-6
Governor Actuator A12	4-7
Glow Plug Relay K3	4-7
Starter Relay K4	4-7
Ground Isolation Relay K9	4-7
Bonding for Electrostatic Discharge Control	4-8

5. GENERATOR	5-1
Overview	5-1
Testing	5-2
Disassembly	5-7
Reassembly	5-7
Reconnecting the Generator	5-8
Line Circuit Breakers	5-8
Adjusting Frequency	5-8
Adjusting Voltage	5-8
6. ENGINE	6-1
Major Engine Service	6-1
Engine Sensors	6-1
Governor Actuator	6-1
Exhaust Manifold	6-1
Fuel System	6-3
Glow Plugs	6-3
Starter	6-5
Ground Isolation Relay K9	6-5
Raw Water Pump	6-5
7. TROUBLESHOOTING	7-1
WIRING DIAGRAM	A-1
WIRING HARNESS—MDKAV, MDKBG, MDKAW, MDKAZ	A-2
WIRING HARNESS—MDKBD, MDKBE, MKDBF	A-3
RECONNECTION DIAGRAMS	A-4

BUY NOW

**Then Instant Download
the Complete Manual
Thank you very much!**