

Service Manual

GenSet Model QSB5G3 C80D2R

with PowerCommand[®] Control
PCC1302

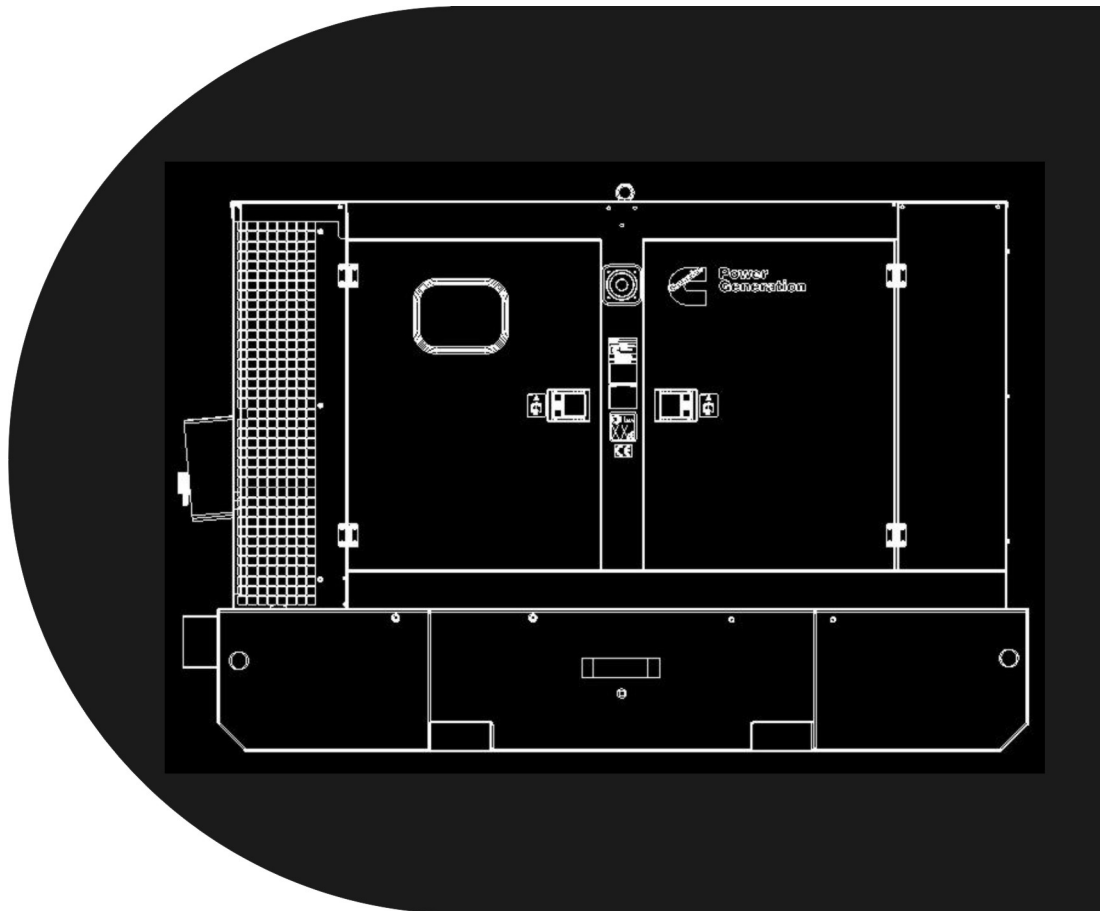


Table of Contents

SECTION	TITLE	PAGE
	IMPORTANT SAFETY INSTRUCTIONS	iii
1	INTRODUCTION	
	About this Manual	1-1
	Generator Set	1-1
	System Overview	1-1
	Test Equipment	1-1
	How to Obtain Service	1-1
2	CONTROL OPERATION	
	General	2-1
	Control Panel Power On/Off Modes	2-1
	Front Panel	2-2
	Analog AC Metering Panel (Optional)	2-2
	Control Panel	2-3
	System Messages	2-6
	Selecting Auto, Manual Run and Off Modes	2-9
	Operator Menus	2-12
	Service Menus	2-16
	History/About Menu	2-18
	Screen Adjust Menu	2-20
	Fault History Menu	2-22
3	CIRCUIT BOARD	
	General	3-1
	Control System Overview	3-3
	Base Board	3-4
4	TROUBLESHOOTING	
	General	4-1
	InPower Service Tool	4-1
	Network Applications and Customer Inputs	4-1
	Safety Consideration	4-2
	Reading Fault Codes	4-2
	Troubleshooting Procedure	4-3

SECTION	TITLE	PAGE
5	CONTROL ADJUSTMENT AND SERVICE	
	General	5-1
	Circuit Board Removal/Replacement	5-2
	Setup Menu	5-3
	Genset Service Menus	5-6
	Genset Service Submenus	5-6
	Automatic Voltage Regulator Submenus	5-14
	Electronic Governor Submenus	5-16
	Customer I/O Submenus	5-18
	Metering Submenus	5-24
	Annunciator Submenus	5-26
	Genset Setup Submenus	5-33
	Genset Submenus	5-36
	Voltage Protection Submenus	5-42
	Current Protection Submenus	5-44
	Engine Protection Submenus	5-46
	TB1 Base Board Customer Connections	5-52
	Auxiliary I/O Module (Optional)	5-53
	Current Transformer (CT) Installation	5-54
6	SERVICING THE GENERATOR	
	General	6-1
	Generator/Base Board Isolation Procedure	6-2
	Testing the Generator	6-3
	Generator Disassembly	6-11
	Generator Reassembly	6-13
7	WIRING DIAGRAMS	
	General	7-1
A	MENU SEQUENCE DIAGRAMS	
	General	A-1

IMPORTANT SAFETY INSTRUCTIONS

SAVE THESE INSTRUCTIONS – This manual contains important instructions that should be followed during installation and maintenance of the generator set and batteries.

Before operating the generator set (genset), read the Operator's Manual and become familiar with it and the equipment. **Safe and efficient operation can be achieved only if the equipment is properly operated and maintained.** Many accidents are caused by failure to follow fundamental rules and precautions.

The following symbols, found throughout this manual, alert you to potentially dangerous conditions to the operator, service personnel, or the equipment.

⚠ DANGER *This symbol warns of immediate hazards which will result in severe personal injury or death.*

⚠ WARNING *This symbol refers to a hazard or unsafe practice which can result in severe personal injury or death.*

⚠ CAUTION *This symbol refers to a hazard or unsafe practice which can result in personal injury or product or property damage.*

FUEL AND FUMES ARE FLAMMABLE

Fire, explosion, and personal injury or death can result from improper practices.

- DO NOT fill fuel tanks while engine is running, unless tanks are outside the engine compartment. Fuel contact with hot engine or exhaust is a potential fire hazard.
- DO NOT permit any flame, cigarette, pilot light, spark, arcing equipment, or other ignition source near the generator set or fuel tank.
- Fuel lines must be adequately secured and free of leaks. Fuel connection at the engine should be made with an approved flexible line. Do not use zinc coated or copper fuel lines with diesel fuel.
- Be sure all fuel supplies have a positive shutoff valve.
- Be sure battery area has been well-ventilated prior to servicing near it. Lead-acid batteries emit a highly explosive hydrogen gas that can be ignited by arcing, sparking, smoking, etc.

EXHAUST GASES ARE DEADLY

- Provide an adequate exhaust system to properly expel discharged gases away from enclosed or sheltered areas and areas where individuals are likely to congregate. Visually and audibly inspect the exhaust daily for leaks per the maintenance schedule. Make sure that exhaust manifolds are secured and not warped. Do not use exhaust gases to heat a compartment.
- Be sure the unit is well ventilated.
- Engine exhaust and some of its constituents are known to the state of California to cause cancer, birth defects, and other reproductive harm.

MOVING PARTS CAN CAUSE SEVERE PERSONAL INJURY OR DEATH

- Keep your hands, clothing, and jewelry away from moving parts.
- Before starting work on the generator set, disconnect battery charger from its AC source, then disconnect starting batteries, negative (-) cable first. This will prevent accidental starting.
- Make sure that fasteners on the generator set are secure. Tighten supports and clamps, keep guards in position over fans, drive belts, etc.
- Do not wear loose clothing or jewelry in the vicinity of moving parts, or while working on electrical equipment. Loose clothing and jewelry can become caught in moving parts.
- If adjustment must be made while the unit is running, use extreme caution around hot manifolds, moving parts, etc.

DO NOT OPERATE IN FLAMMABLE AND EXPLOSIVE ENVIRONMENTS

Flammable vapor can cause an engine to overspeed and become difficult to stop, resulting in possible fire, explosion, severe personal injury and death. Do not operate a genset where a flammable vapor environment can be created by fuel spill, leak, etc., unless the genset is equipped with an automatic safety device to block the air intake and stop the engine. The owners and operators of the genset are solely responsible for operating the genset safely. Contact your authorized Cummins Power Generation distributor for more information.

ELECTRICAL SHOCK CAN CAUSE SEVERE PERSONAL INJURY OR DEATH

- Remove electric power before removing protective shields or touching electrical equipment. Use rubber insulative mats placed on dry wood platforms over floors that are metal or concrete when around electrical equipment. Do not wear damp clothing (particularly wet shoes) or allow skin surface to be damp when handling electrical equipment. Do not wear jewelry. Jewelry can short out electrical contacts and cause shock or burning.
- Use extreme caution when working on electrical components. High voltages can cause injury or death. DO NOT tamper with interlocks.
- Follow all applicable state and local electrical codes. Have all electrical installations performed by a qualified licensed electrician. Tag and lock open switches to avoid accidental closure.
- DO NOT CONNECT GENERATOR SET DIRECTLY TO ANY BUILDING ELECTRICAL SYSTEM. Hazardous voltages can flow from the generator set into the utility line. This creates a potential for electrocution or property damage. Connect only through an approved isolation switch or an approved paralleling device.

GENERAL SAFETY PRECAUTIONS

- Coolants under pressure have a higher boiling point than water. DO NOT open a radiator or heat exchanger pressure cap while the engine is running. To prevent severe scalding, let engine cool down before removing coolant pressure cap. Turn cap slowly, and do not open it fully until the pressure has been relieved.
- Used engine oils have been identified by some state or federal agencies as causing cancer or reproductive toxicity. When checking or changing engine oil, take care not to ingest, breathe the fumes, or contact used oil.
- Keep multi-class ABC fire extinguishers handy. Class A fires involve ordinary combustible materials such as wood and cloth; Class B fires, combustible and flammable liquid fuels and gaseous fuels; Class C fires, live electrical equipment. (ref. NFPA No. 10).
- Make sure that rags or combustible material are not left on or near the generator set.
- Make sure generator set is mounted in a manner to prevent combustible materials from accumulating under or near the unit.
- Remove all unnecessary grease and oil from the unit. Accumulated grease and oil can cause overheating and engine damage which present a potential fire hazard.
- Keep the generator set and the surrounding area clean and free from obstructions. Remove any debris from the set and keep the floor clean and dry.
- Do not work on this equipment when mentally or physically fatigued, or after consuming any alcohol or drug that makes the operation of equipment unsafe.
- Substances in exhaust gases have been identified by some state or federal agencies as causing cancer or reproductive toxicity. Take care not to breath or ingest or come into contact with exhaust gases.
- Do not store any flammable liquids, such as fuel, cleaners, oil, etc., near the generator set. A fire or explosion could result.
- Wear hearing protection when near an operating generator set.
- To prevent serious burns, avoid contact with hot metal parts such as radiator system, turbo charger system and exhaust system.

KEEP THIS MANUAL NEAR THE GENSET FOR EASY REFERENCE

1. Introduction

ABOUT THIS MANUAL

This manual provides troubleshooting and repair information regarding the PowerCommand® 1302 Control (PCC) and generators for the generator sets (gensets) listed on the front cover. Operating and maintenance instructions for the generator set are in the applicable Operator's Manual.

Engine troubleshooting, repair and maintenance information is provided in the applicable engine service manual.

This manual does not have instructions for servicing printed circuit board assemblies. After determining that a printed circuit board assembly is faulty, replace it, do not repair it. Attempts to repair a printed circuit board can lead to costly damage to the equipment.

This manual contains basic (generic) wiring diagrams and schematics that are included to help in troubleshooting. Service personnel must use the actual wiring diagram and schematic shipped with each unit. The wiring diagrams and schematics that are maintained with the unit should be updated when modifications are made to the unit.

Read **Safety Precautions** and carefully observe all instructions and precautions in this manual.

SYSTEM OVERVIEW

The generator set control system consist of the PCC control and the engine control module (ECM).

The PCC is a microprocessor-based control for Cummins Power Generation generator sets. The operating software provides control of the generator set and its performance characteristics, and displays performance information on a digital display panel. It accepts menu-driven control and setup input from the push button switches on the front panel.

The PCC circuit (Base) board provides:

- Voltage regulation,
- Alternator/genset protection and diagnostics,
- Starter control

The Engine Control Module (ECM) provides:

- Fuel system/combustion control,
- Engine protection and diagnostics,
- Speed governing,
- Speed sensor processing

The ECM fault codes and engine status (oil pressure, coolant temperature, etc.) are displayed on the PCC digital display panel.

TEST EQUIPMENT

To perform the test procedures in this manual, the following test equipment must be available

- True RMS meter for accurate measurement of small AC and DC voltages.
- Grounding wrist strap to prevent circuit board damage due to electrostatic discharge (ESD).
- Battery hydrometer
- Jumper leads
- Tachometer or frequency meter
- Wheatstone bridge or digital ohmmeter
- Variac
- Load test panel
- Megger or insulation resistance meter
- InPower™ service tool (PC based genset service tool)
- PCC1302 interface kit (Used with InPower service tool)
- InSite™ service tool (PC based ECM service tool)

BUY NOW

**Then Instant Download
the Complete Manual
Thank you very much!**

