



# Service Manual

Our energy working for you.™



## Transfer Switch 1200–4000 Amperes

WBTPCE (Spec A)  
WBTPCF (Spec A)  
WBTPCG (Spec A)  
WBTPCH (Spec A)  
WBTPCJ (Spec A)

# Table of Contents

---

SECTION	TITLE	PAGE
	<b>SAFETY PRECAUTIONS</b> .....	<b>VII</b>
<b>1.</b>	<b>INTRODUCTION</b> .....	<b>1-1</b>
	About This Manual .....	1-1
	Transfer Switch Application .....	1-1
	Bypass Switch Function .....	1-2
	Drawout Isolation Mechanism .....	1-2
	Utility-to-Genset Operation .....	1-2
	Utility-to-Utility Operation .....	1-2
	Control Level .....	1-2
	Removing and Replacing Electronic Control Components .....	1-3
	Model Identification .....	1-3
	How to Obtain Service .....	1-3
<b>2.</b>	<b>COMPONENT DESCRIPTION</b> .....	<b>2-1</b>
	Cabinet .....	2-1
	Control Panel .....	2-1
	Bar Graph Meter Panel .....	2-2
	Switch Panel .....	2-2
	Indicators .....	2-2
	Pushbuttons .....	2-2
	Digital Display .....	2-2
	Bypass Switch .....	2-3
	Contact Assemblies .....	2-3
	Bypass Switch Controls .....	2-3
	Indicators .....	2-3
	Drawout-Isolation Mechanism .....	2-4
	Drawout Cranking Handle .....	2-4
	Automatic Transfer Switch .....	2-4
	Contact Assemblies .....	2-5
	Linear Actuator .....	2-5
	Motor Disconnect Switch .....	2-5
	Auxiliary Contacts .....	2-6
	Electronic Control System .....	2-6
	Electronic Control Circuit Modules .....	2-6
	Digital Module .....	2-6
	Power Module .....	2-7
	Time Delays .....	2-8
	System Sensors .....	2-9
	Two-Wire Starting .....	2-10

# Table of Contents (Continued)

---

SECTION	TITLE	PAGE
	Transfer Times .....	2-10
	Testing With or Without Load .....	2-10
	Generator Exercise Programs .....	2-11
	Real-Time Clock .....	2-11
	Control Options .....	2-11
	Relay Module .....	2-11
	Load Monitoring Options .....	2-12
	Remote Test Transfer .....	2-13
	Auxiliary Relays Options .....	2-13
	Load Shed Options .....	2-13
	Security Key Switch .....	2-13
	PowerCommand Network Interface Module .....	2-13
<b>3.</b>	<b>OPERATION .....</b>	<b>3-1</b>
	Automatic Operation .....	3-1
	Bypassing the Transfer Switch .....	3-2
	Bypassing Load to Normal (Source 1) .....	3-2
	Bypassing Load to Emergency (Source 2) .....	3-2
	Isolating the Transfer Switch .....	3-3
	Reconnecting the Transfer Switch .....	3-4
	Manual Operation .....	3-5
	Manual Transfer to Source 2 .....	3-5
	Manual Transfer to Source 1 .....	3-6
	System Testing .....	3-6
	Generator Set Start Test .....	3-6
	With Load Standby Test .....	3-6
	Non-Load Break Transfer Switch Test .....	3-7
	Generator Set Exercise .....	3-8
<b>4.</b>	<b>DIGITAL DISPLAY MENU SYSTEM .....</b>	<b>4-1</b>
	Main Menu .....	4-1
	Setup Menus .....	4-1
	Navigation .....	4-1
	Main Menu Navigation .....	4-2
	Using the Previous Menu Button .....	4-2
	Main Menu Descriptions .....	4-3
	Source 1 and Source 2 Submenus .....	4-4
	Load Submenus .....	4-5
	Starting with Software Version 1.12 .....	4-6
	Events Submenus .....	4-7

# Table of Contents (Continued)

---

SECTION	TITLE	PAGE
	Setup Submenus .....	4-8
	Setup Menu Navigation and Description .....	4-9
	Starting with Software Version 1.12 .....	4-10
	Starting with Software Version 1.12 .....	4-11
	Sync Check Submenus .....	4-13
	Starting with Software Version 1.12 .....	4-14
	Test Submenus .....	4-15
	Starting with Software Version 1.5.190 .....	4-16
	Exercise Exceptions Submenus .....	4-18
	Starting with Software Version 1.5.190 .....	4-18
	Starting with Software Version 1.12 .....	4-20
	Starting with Software Version 1.12 .....	4-22
	Starting with Software Version 1.13.244 .....	4-24
	Starting with Software Version 1.13.244 .....	4-26
	Starting with Software Version 1.20.250 .....	4-28
	Clock Submenus .....	4-29
	Sequencer Submenus .....	4-30
	Starting with Software Version 1.20.250 .....	4-31
	System Submenus .....	4-33
	Starting with Software Version 1.12 .....	4-34
<b>5.</b>	<b>TROUBLESHOOTING .....</b>	<b>5-1</b>
	InPower Service Tool .....	5-1
	About Network Applications and Customer Inputs .....	5-1
	Digital Module .....	5-2
	Power Module .....	5-2
	Control LED Indicators and Switch .....	5-2
	LED Indicators .....	5-2
	Exerciser Enable/Disable Switch .....	5-2
	Sequence of Events .....	5-3
	Transfer from Source 1 to Source 2 in Programmed Transition .....	5-3
	Transfer from Source 2 to Source 1 .....	5-4
	Troubleshooting Using Fault Codes .....	5-5
	Fault Events .....	5-5
	Fault Flash-Out .....	5-5
	Fault Event Definitions .....	5-7
	Controller Checksum Error .....	5-7
	Low Controller Battery .....	5-7
	ATS Fail to Close: Transfer .....	5-7
	ATS Fail to Close: Re-Transfer .....	5-7
	Network Communications Error .....	5-7

# Table of Contents (Continued)

---

SECTION	TITLE	PAGE
	Troubleshooting with Symptoms .....	5-8
	Troubleshooting Warnings .....	5-8
<b>6.</b>	<b>AUTOMATIC TRANSFER SWITCH SERVICE .....</b>	<b>6-1</b>
	General .....	6-1
	Membrane Switch Test .....	6-1
	Power Module Test .....	6-2
	Digital Board Replacement .....	6-3
	Initial Calibration .....	6-3
	Setup with a Capture File .....	6-3
	Setup Without a Capture File .....	6-3
	After the Setup is Completed .....	6-3
	Removing the Automatic Transfer Switch .....	6-6
	Bypass, Isolate, and Remove the Automatic Transfer Switch .....	6-6
	To Bypass and Isolate the Automatic Transfer Switch .....	6-6
	To Remove the Automatic Transfer Switch (1200-Amp Bypass) .....	6-10
	To Remove the Automatic Transfer Switch (1600- to 4000-Amp Bypass) ..	6-13
	Install and Reconnect the Automatic Transfer Switch (When Finished) .....	6-13
	To install the Automatic Transfer Switch (1200-Amp Bypass) .....	6-13
	To Install the Automatic Transfer Switch (1600- to 4000-Amp Bypass) ....	6-13
	To Reconnect the Automatic Transfer Switch .....	6-15
	Linear Actuator Solenoid Removal and Replacement .....	6-16
	Removing Actuator Solenoid .....	6-16
	Replacing Actuator Solenoid .....	6-17
	Contact Assembly Removal and Replacement (1200 Amperes) .....	6-17
	Removing the Contact Assemblies .....	6-17
	Replacing the Contact Assemblies .....	6-20
	Movable Contact Assembly Removal and Replacement (1600 – 2000 Amperes) 6-22	
	Removing the Contact Assembly .....	6-22
	Replacing the Contact Assembly .....	6-22
	Movable Contact Assembly Removal and Replacement (3000 Amperes) .....	6-25
	Removing the Contact Assembly .....	6-25
	Replacing the Contact Assembly .....	6-28
	Auxiliary Switch Removal and Replacement .....	6-29
	Removing and Replacing an Auxiliary Switch Assembly. ....	6-29
	Mis-Wired Current Transformers .....	6-30

# Table of Contents (Continued)

---

SECTION	TITLE	PAGE
7.	<b>BYPASS SWITCH SERVICE</b> .....	7-1
	General .....	7-1
	Disconnect AC Power .....	7-1
	Reconnecting AC Power (When Finished) .....	7-1
	Contact Assembly Removal and Replacement (1200 Amperes) .....	7-1
	Removing the Contact Assemblies .....	7-1
	Replacing the Contact Assemblies .....	7-3
	Movable Contact Assembly Removable and Replacement (1600 – 2000 Amperes) .....	7-6
	Removing the Contact Assembly .....	7-6
	Replacing the Contact Assembly .....	7-6
	Movable Contact Assembly Removal and Replacement (3000 Amperes) .....	7-9
	Removing the Contact Assembly .....	7-9
	Replacing the Contact Assembly .....	7-12
8.	<b>SCHEMATICS</b> .....	8-1

**BUY NOW**

**Then Instant Download  
the Complete Manual  
Thank you very much!**