



Service Manual

Our energy working for you.™



Generator Set

HDKAL (Specs A–F)
HDKAQ (Spec A–E)
HDKAR (Spec A–E)
HDKAS (Specs A–F)

Table of Contents

SECTION	TITLE	PAGE
	SAFETY PRECAUTIONS	iii
1	INTRODUCTION	1-1
	About This Manual	1-1
	Assistance	1-1
	Test Equipment	1-1
	Safety Considerations	1-1
	Set Removal	1-3
2	ENGINE CONTROLS	2-1
	General	2-1
	Start Control at Set	2-1
	Control Troubleshooting	2-6
3	ENGINE CONTROL SERVICE	3-1
	General	3-1
	[A] Battery Check (BT1)	3-1
	[B] Battery Cable Check	3-1
	[C] Battery Charging Check	3-1
	[D] Start Solenoid Check (K11)	3-1
	[E] Heater (Glow Plug) Relay Check (K13)	3-2
	[F] Fuel Solenoid Check (K14)	3-2
	[G] Start/Stop Switch Check (S11)	3-2
	[H] Power Relay Check (A11-K12)	3-2
4	GENERATOR/VOLTAGE REGULATOR	4-1
	General Description	4-1
	Generator Operation	4-5
	Electronic Voltage Regulator	4-5
	Generator Service	4-6
	Generator Disassembly/Assembly	4-8
5	GENERATOR/REGULATOR TROUBLESHOOTING	5-1
	General	5-1
	Troubleshooting Procedures	5-1

SECTION	TITLE	PAGE
6	GENERATOR/REGULATOR TESTS	6-1
	General	6-1
	[A] Testing Field Voltage	6-1
	[B] Testing Generator Rotor	6-1
	[C] Testing Generator Stator	6-2
	[D] Dynamic Rotor/Stator Test	6-3
	[E] Voltage Regulator Replacement	6-5
	[F] Wiring Harness Check	6-5
	[G] Voltage Adjustment	6-5
	[H] Reconnection	6-5
7	PERIODIC MAINTENANCE	7-1
	General Inspection	7-2
	Changing Oil and Oil Filter	7-3
	Air Cleaner Maintenance	7-4
	Spark Arrestor Cleaning	7-4
	Batteries	7-4
	Engine Cooling System	7-5
	Fuel System	7-7
	DC CONTROL WIRING DIAGRAMS	A-1
	SINGLE-PHASE GENERATOR DIAGRAMS	A-2
	THREE-PHASE GENERATOR DIAGRAMS	A-3

BUY NOW

**Then Instant Download
the Complete Manual
Thank you very much!**