


STAMFORD[®]

Installation, Service & Maintenance Manual for HC 4, 5 & 6 AC Generators

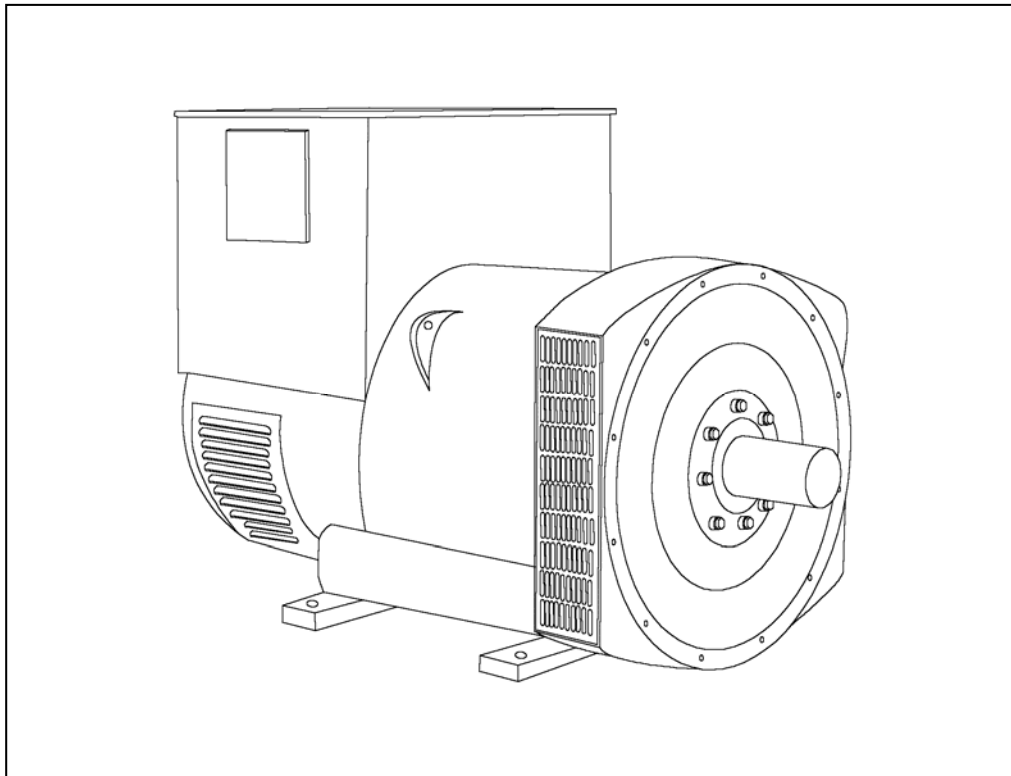

Safety Precautions

First Steps to Safe Operation

Read this manual, obey all Warnings and Cautions, and become familiar with the product.

Warnings & Notices used in this manual

The various warnings are outlined below and appear in the text in this format. Warnings and Cautions appear at the appropriate position in the, to which they refer.

Warning: Information that draws attention to the risk of injury or death.

Caution: Information that draws attention to the risk of damage to the product, process or surroundings.

Note: Used to convey, or draw attention to, additional information or explanations.

Notes appear after the text to which they refer.

Skill requirements of personnel

Service and maintenance procedures should only be carried out by experienced, qualified engineers, familiar with the procedures and the equipment. Before any intrusive procedures are carried out, ensure that the engine is inhibited and the generator is electrically isolated.

Electrical Equipment

All electrical equipment can be dangerous if not operated correctly. Always service and maintain the generator in accordance with this manual. Always use genuine STAMFORD replacement parts.

Warning: Electrical shock can cause injury or death. Ensure that all personnel operating, servicing, maintaining or working near this equipment are fully aware of the emergency procedures in case of accidents.

Before removing the protective covers to carry out service maintenance or repair, ensure that the engine is inhibited and the generator is electrically isolated. The AVR access covers are designed to be removed while the generator is on load.

Lifting

Lift the generator using the points provided with the aid of a spreader and chains. The angle on the chains must be vertical during the lift. Do not lift single bearing generators without the, securely fitted, transit bar. When removing the transit bar just prior to offering the generator up to the engine, be aware that the rotor is not securely held in the generator. Keep the generator in the horizontal plane to when the transit bar is not fitted.

Warning: The lifting points provided are designed for lifting the generator only. Do not lift the Generating Set by the generator's lifting points.

Note: Due to our policy of continuous improvement, details in this manual which were correct at time of going to print and may now be due for amendment. Information included must therefore not be regarded as binding.

Note: The Front Cover drawing is representative of the range of generators. Several variations are available within this range that, are covered by this manual.

Foreword

The Manual

Before operating, the generating set read this manual and all additional documentation supplied with it. Great care has been taken with the design of this product to ensure that it is safe to operate. Misuse and the failure to follow the safety precautions contained in the manual are potential causes of accidents.

Read the manual and make sure that all personnel who work on the equipment have access to the manual. The manual should be considered as part of the product and should remain with the product. Make sure that the manual is available to all users throughout the life of the product.

Scope

This manual contains guidance and instructions for the Installation, Servicing and Maintenance of the generator.

It is not possible, within the scope of the manual, to teach the basic electrical and mechanical skills required to safely carry out the procedures enclosed. The manual is written for skilled electrical and mechanical technicians and engineers, who have prior knowledge and experience of generating equipment of this type.

We offer a range of training courses that cover all aspects of STAMFORD generators.

Generator Designation

HC	(K)	5	3	4	C	2	(eg)
HC	-	Standard range Generators					
HCK	-	Dedicated range (HC5 only)					
I	-	Applications, M = Marine I = Industrial,					
5	-	Frame size, 4, 5, or 6					
3	-	Separate excitation, PMG					
or							
4	-	Self Excited					
4	-	Number of poles, 4 or 6					
C	-	Core Size					
2	-	Number of bearings, 1 or 2					

The Product

The product is an AVR controlled, separately excited (by a shaft driven pilot exciter) synchronous 'ac generator' or a self excited (shunt arrangement). Designed for incorporation into a generating-set. (A generating-set is defined as 'machinery' in European directives).

Serial Number Location

Each generator has a unique serial number stamped into the upper section of the drive end of the frame.

The serial number is also shown on the nameplate.

Two other labels are located inside the terminal box, both fixed inside of the terminal box, one on the sheet metal-work and the other on the main frame of the generator. Neither of these two labels is considered to be permanently fixed.

Rating Plate

The generator has been supplied with a self-adhesive rating plate label to enable fitting after final assembly and painting. Stick the nameplate to the outside of the non-drive end of the terminal box. The surface in the area where a label is to be stuck must be flat, clean, and any paint finish must be fully dry before attempting to attach label. Recommended method for attaching label is peel and fold back sufficient of the backing paper to expose some 20 mm of label adhesive along the edge which is to be located against the sheet metal protrusions. Once this first section of label has been carefully located and stuck into position progressively peel off the backing paper and smooth down with a clean cloth. The adhesive will achieve a permanent bond in 24 hours.

A factory fitted metal nameplate is available for some applications.

Caution. Do not exceed the parameters marked on the rating plate.

Contents

SAFETY PRECAUTIONS	2
FIRST STEPS TO SAFE OPERATION	2
WARNINGS & NOTICES USED IN THIS MANUAL	2
SKILL REQUIREMENTS OF PERSONNEL	2
ELECTRICAL EQUIPMENT	2
LIFTING	2
FOREWORD	3
THE MANUAL	3
SCOPE	3
GENERATOR DESIGNATION	3
THE PRODUCT	3
SERIAL NUMBER LOCATION	3
RATING PLATE	3
CONTENTS	4
INTRODUCTION	8
GENERAL DESCRIPTION WITHOUT PMG – SELF EXCITED	8
AS440 AVR	8
GENERAL DESCRIPTION, WITH PMG – SEPARATELY EXCITED	8
MX341 AVR	8
MX321 AVR	9
STANDARDS	9
EUROPEAN DIRECTIVES	9
Applications for use within the EU	10
Unsuitable Applications	10
Additional information for EMC compliance	10
APPLICATION OF THE GENERATOR	11
ENVIRONMENTAL PROTECTION	11
Air Flow	11
AIRBORNE CONTAMINATES	11
Air Filters	11
HIGH HUMIDITY ENVIRONMENTS	11
Anti-condensation heaters	11
Enclosures	11
VIBRATION	12
Definition of BS5000 – 3	12
Definition of ISO 8528 - 9	12
Vibration Monitoring	12
Excessive Vibration levels	12
BEARINGS	12
Re-greasable Bearings	12
Bearing Life	13
Health Monitoring of the Bearings	13
Bearing 'Service Life' Expectancy	13
INSTALLATION INTO THE GENERATING SET	14
DELIVERY	14
HANDLING THE GENERATOR	14
STORAGE	14
AFTER STORAGE	14
ROTOR BALANCING	14
GENERATOR VIBRATION, FREQUENCY	14
COUPLING ARRANGEMENTS	15
Coupling Single Bearing Generators	15
Single Bearing Coupling Alignment	16
EARTH ARRANGEMENT	16
PAINT FINISH	16
WARNING LABELS	16

PRE-RUNNING CHECKS.....	17
Insulation resistance test.....	17
DIRECTION OF ROTATION.....	17
PHASE ROTATION.....	17
VOLTAGE AND FREQUENCY.....	17
AVR ADJUSTMENT.....	17
ACCESSORIES.....	17
INSTALLATION, ON SITE.....	18
GENERAL.....	18
CUSTOMER CABLE ENTRY.....	18
EARTH CONNECTIONS.....	18
ELECTRICAL PROTECTION.....	18
VOLTAGE SURGES AND MICRO- INTERRUPTIONS.....	18
SYNCHRONISATION NOTES.....	19
AUTOMATIC VOLTAGE REGULATORS.....	20
AS440 AVR.....	20
Initial Start Up.....	20
VOLTAGE SET UP.....	20
Stability Set Up.....	20
AVR ADJUSTMENTS.....	20
UNDER FREQUENCY ROLL OFF (UFRO).....	21
MX341 AVR.....	22
Initial Checks.....	22
Initial Start Up.....	22
VOLTAGE SET UP.....	22
Stability Set Up.....	22
AVR ADJUSTMENTS.....	22
UNDER FREQUENCY ROLL OFF (UFRO).....	23
EXC TRIP (Excitation Trip).....	23
Transient Load Switching.....	23
DIP.....	23
SUMMARY OF CONTROLS, MX341.....	24
AVR MX321.....	24
INITIAL CHECKS.....	24
INITIAL START UP.....	24
Voltage Set Up.....	24
Stability Set Up.....	25
RAMP ADJUSTMENT.....	25
AVR ADJUSTMENTS.....	25
UNDER FREQUENCY ROLL OFF (UFRO).....	25
EXC TRIP (Excitation Trip).....	25
OVER/V (Over Voltage).....	26
Transient Load Switching.....	26
DIP.....	26
DWELL.....	26
OVERVOLTAGE DE-EXCITATION CIRCUIT BREAKER.....	26
Resetting The Excitation Breaker.....	26
CURRENT LIMITING.....	27
Setting Procedure.....	27
SUMMARY OF CONTROLS, MX321.....	27
FAULT FINDING, AS440, MX321 & MX341 AVRS.....	28
SEPARATE EXCITATION TEST PROCEDURE.....	28
Checking the Permanent Magnet Generator (PMG).....	28
Checking Generator Windings and Rotating Diodes.....	28
Check Rectifier Diodes.....	29
Replacement of Faulty Diodes.....	29
Surge Suppressor.....	29
Main Excitation Windings.....	29
Unbalanced Main Terminal Voltages.....	29
EXCITATION CONTROL TEST.....	29
AVR Function Test.....	29

ACCESSORIES.....	31
Remote Voltage Adjustment.....	31
PARALLEL OPERATION	31
Load Sharing	31
Droop.....	31
Droop Setting Procedure.....	32
MANUAL VOLTAGE REGULATOR (MVR).....	33
POWER FACTOR CONTROLLER (PFC3).....	33
SERVICE	34
WINDING CONDITION.....	34
New Machines.....	34
At Generating Set Assembler's Works.....	34
Generators in Service.....	34
Winding Condition Assessment	34
PROCEDURE FOR INSULATION TESTING.....	35
METHODS OF DRYING OUT GENERATORS	35
Cold Run.....	35
Blown Air Drying.....	35
Short Circuit Method.....	35
TYPICAL DRYING OUT CURVE.....	36
AIR FILTERS	37
Air Filter Cleaning Procedure	37
MAINTENANCE	38
ANTI-CONDENSATION HEATERS.....	38
REMOVAL OF PERMANENT MAGNET GENERATOR (PMG).....	38
Re-assembly.....	38
REMOVAL OF BEARINGS	38
REMOVAL OF THE NON DRIVE END BEARING.....	39
DRIVE END BEARING REMOVAL	39
REMOVAL OF THE MAIN ROTOR	39
REFITTING BEARINGS.....	40
Equipment	40
Preparation.....	40
Bearing preparation.....	40
Bearing Cartridge	40
Assemble Bearing into Cartridge	41
Assemble Bearing onto Shaft.....	41
BEARING CAP & FLINGER.....	41
Re-lubrication pipe	41
Returning To Service.....	41
BEARING MAINTENANCE.....	41
Re-lubrication	41
PARTS IDENTIFICATION HC6	45
SINGLE BEARING GENERATOR.....	45
TWO BEARING GENERATOR.....	46
SPARES AND AFTER SALES SERVICE	47
RECOMMENDED SPARES.....	47
AFTER SALES SERVICE	47
KLUBER ASONIC GHY72 GREASE	47
TECHNICAL DATA.....	48
Air Flow requirements	48
Winding Resistances.....	48
Main Stator Winding Resistances	49
Guide to lifting gear requirements (kgms).....	49
Coupling disc Torque setting.....	51
Bending Moments	51
Customer output cables	51
Generator internal connections.....	51
Re-lubrication Details for Regreasable Bearings.....	51

Initial fill for Regreasable Bearings.....	51
Recommended Service Parts	52
A.C. GENERATOR WARRANTY	53
WARRANTY PERIOD	53
Defects, After Delivery	53
EXTENSIONS TO THE WARRANTY PERIOD.....	53
END OF LIFE DISPOSAL.....	54
RECYCLABLE MATERIAL.....	54
ITEMS REQUIRING SPECIALIST TREATMENT.	54
WASTE MATERIAL	54

BUY NOW

**Then Instant Download
the Complete Manual
Thank you very much!**