

330 / 430 LOG LOADER

S/N – CB1066 – CE1313

S/N – 961314 – 961314

TECHNICAL MANUAL

330 / 430 LOG LOADER

TMF278359

CALIFORNIA Proposition 65 Warning

**Diesel engine exhaust and some of its constituents
are known to the State of California to cause cancer,
birth defects and other reproductive harm.**




WARNING

**The engine exhaust from this product contains
chemicals known to the State of California to cause
cancer, birth defects or other reproductive harm.**

Worldwide Construction and Forestry Division

English

Service Manual

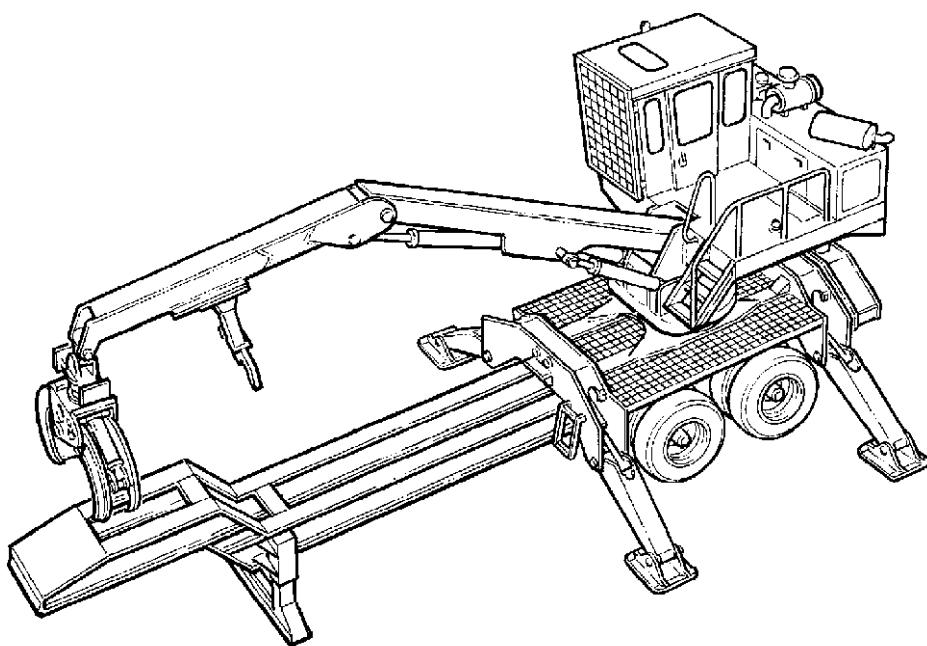

Model 330 and 430 Loaders

Timberjack Inc.
P.O. Box 160
925 Devonshire Avenue
Woodstock, Ontario, Canada
N4S 7X1

Telephone:	519-537-6271
Service Dept. Fax:	519-537-2664
Parts Dept. Fax:	

Table of Contents

Section Description

- 1 Introduction
- 2 Safety Rules
- 3 Theory of Operation
- 4 Specifications
- 5 Test Procedures
- 6 Hydraulic System
- 7 Electrical System
- 8 Troubleshooting
- 9 Maintenance and Repair
- 10 OEM Documentation

Table of Contents

Section 1 - Introduction

1.1 Foreword	1 - 2
1.2 Non-approved Field Product Changes	1 - 3
1.3 Warranty Certificate	1 - 4
1.4 Items Not Covered by Warranty	1 - 5

Section 2 - Safety Rules

2.1 General	2 - 2
2.2 Safety Symbol	2 - 2
2.3 Understanding Signal Words	2 - 2
2.4 General Safety Precautions	2 - 3
2.5 Operating Safety Precautions	2 - 6
2.6 Servicing Safety Precautions	2 - 9
2.7 Transporting on Public Roads	2 - 15
2.8 Fire Prevention	2 - 15
2.9 What to Do if the Machine Catches Fire	2 - 16

Section 3 - Theory of Operation	Not Available
--	---------------

Section 4 - Specifications

4.1 Machine Dimensions - 330 Log Loader	4 - 2
4.2 Machine Dimensions - 430 Log Loader	4 - 3
4.3 Equipment Specifications	4 - 3
4.4 Fluid and Lubricants	4 - 7
4.4.1 Fluid and Lubricant Specifications	4 - 7
4.4.2 Engine Oil Viscosity - Cummins	4 - 9
4.4.3 Engine Oil Viscosity - John Deere	4 - 9
4.4.4 Gear Oil Viscosity - Swing Drive Gearbox	4 - 10
4.4.5 Hydraulic Lubrication and Fluid Recommendation	4 - 11
4.4.6 Recommended Hydraulic Fluid Brands	4 - 13
4.5 Torque Values	4 - 14
4.5.1 Steel Fasteners	4 - 14
4.5.2 Hydraulic Fittings	4 - 18

Table of Contents

Section 5 - Test Procedures and Adjustments

5.1 General Information	5 - 3
5.1.1 Hydraulic Tests	5 - 3
5.1.2 Electrical Tests	5 - 3
5.2 Hydraulic Systems	5 - 4
5.2.1 Main Control Valve	5 - 4
5.2.2 Jib Valve - Boom Section	5 - 7
5.2.3 Jib Valve - Swing Section	5 - 8
5.2.4 Pilot Relief	5 - 12
5.2.5 Delimber Valve Pressure Relief (Swivel Machines)	5 - 13
5.2.6 SPI Bar Saw Valve Main Relief	5 - 14
5.2.7 SPI Pilot Priority Flow	5 - 15
5.2.8 SPI Pilot Priority Relief	5 - 16
5.3 Electrical System	Not Available

Section 6 - Hydraulic Systems

6.1 Hydraulic System Schematic - SPI	6 - 2
6.2 Hydraulic System Schematic - Swivel	6 - 4

Section 7 - Electrical Systems

7.1 Electrical Schematic - SPI	7 - 2
7.2 Electrical Schematic - Swivel, Joysticks	7 - 4
7.3 Electrical Schematic - Swivel, Lever Controls	7 - 6

Section 8 - Troubleshooting

8.1 General	8 - 2
8.2 Engine	8 - 2
8.3 Electrical System	8 - 8
8.4 Hydraulic System	8 - 9

Section 9 - Maintenance and Repair

Group 10 - Power Unit and Auxiliary Systems	9 - 10 - 1
10.1 Engine Rubber Mounts	9 - 10 - 2
10.1.1 General Information	9 - 10 - 3
10.1.2 Removal	9 - 10 - 3
10.1.3 Installation	9 - 10 - 3

Table of Contents

10.2 Engine Fan	9 - 10 - 4
10.2.1 General Information	9 - 10 - 5
10.2.2 Removal	9 - 10 - 5
10.2.3 Installation	9 - 10 - 5
10.3 Pump Adapter and Drive Plate	9 - 10 - 6
10.3.1 General Information	9 - 10 - 6
10.3.2 Removal	9 - 10 - 6
10.3.3 Installation	9 - 10 - 6
10.4 Engine Removal/Installation	9 - 10 - 7
10.4.1 Removal	9 - 10 - 7
10.4.2 Installation	9 - 10 - 9
10.5 Swing Gearbox	9 - 10 - 10
10.5.1 General Information	9 - 10 - 10
10.5.2 Removal	9 - 10 - 10
10.5.3 Installation	9 - 10 - 11
10.6 Swing Gearbox Repair	9 - 10 - 12
10.6.1 Swing Gearbox Components	9 - 10 - 12
10.6.2 Hub Disassembly	9 - 10 - 13
10.6.3 First Stage Planetary Carrier Disassembly	9 - 10 - 19
10.6.4 First Stage Planetary Carrier Assembly	9 - 10 - 20
10.6.5 Second Stage Planetary Carrier Disassembly	9 - 10 - 21
10.6.6 Second Stage Planetary Carrier Assembly	9 - 10 - 22
10.6.7 Hub Assembly	9 - 10 - 23
10.7 Swing Gearbox Special Tools	9 - 10 - 29
10.8 Air Intake System	9 - 10 - 32
10.8.1 General Information	9 - 10 - 32
10.8.2 Removal/Installation - Cummins Engine	9 - 10 - 33
10.8.3 Removal/Installation - John Deere Engine	9 - 10 - 34
10.9 Hydraulic Fluid Cooler	9 - 10 - 35
10.9.1 General Information	9 - 10 - 35
10.9.2 Removal/Installation	9 - 10 - 35
10.10 Engine Cooling System	9 - 10 - 36
10.10.1 General Information	9 - 10 - 36
10.10.2 Removal	9 - 10 - 38
10.10.3 Installation	9 - 10 - 38
10.11 Exhaust System	9 - 10 - 39
10.11.1 General Information	9 - 10 - 40
10.11.2 Removal/Installation	9 - 10 - 40
10.12 Fuel System	9 - 10 - 41
10.12.1 General Information	9 - 10 - 42
10.12.2 Removal/Installation	9 - 10 - 42

Table of Contents

Group 20 - Hydraulic Systems	9 - 20 - 1
20.1 Triple Section Main Pump	9 - 20 - 3
20.1.1 General Information	9 - 20 - 3
20.1.2 Removal	9 - 20 - 3
20.1.3 Installation	9 - 20 - 5
20.2 Triple Section Main Pump Repair	9 - 20 - 7
20.2.1 General Information	9 - 20 - 7
20.2.2 Triple Section Main Pump Components	9 - 20 - 8
20.2.3 Pump Disassembly	9 - 20 - 10
20.2.4 Pump Assembly	9 - 20 - 14
20.3 Dual Section SPI Pump	9 - 20 - 23
20.3.1 General Information	9 - 20 - 23
20.3.2 Removal	9 - 20 - 23
20.3.3 Installation	9 - 20 - 26
20.4 Dual Section SPI Pump Repair	9 - 20 - 28
20.4.1 General Information	9 - 20 - 28
20.4.2 Dual Section SPI Pump Components	9 - 20 - 28
20.4.3 Pump Disassembly	9 - 20 - 30
20.4.4 Pump Assembly	9 - 20 - 34
20.4.5 Priority Valve Disassembly	9 - 20 - 41
20.4.6 Priority Valve Assembly	9 - 20 - 42
20.5 Inspection and Parts Replacement	9 - 20 - 43
20.6 Recommended Start-up Procedure	9 - 20 - 46
20.7 Special Tools	9 - 20 - 47
20.8 Pilot Pump	9 - 20 - 49
20.8.1 General Information	9 - 20 - 49
20.8.2 Removal/Installation - Engine Mounted Pump (Cummins)	9 - 20 - 49
20.8.3 Removal/Installation - Belt Driven Pump (John Deere)	9 - 20 - 51
20.9 Pilot Pump Repair	9 - 20 - 54
20.10 Swing Gear Motor	9 - 20 - 55
20.10.1 General Information	9 - 20 - 55
20.10.2 Removal	9 - 20 - 55
20.10.3 Installation	9 - 20 - 56
20.11 Swing Gear Motor Repair	9 - 20 - 57
20.11.1 General Information	9 - 20 - 57
20.11.2 Swing Gear Motor Components	9 - 20 - 58
20.11.3 Motor Disassembly	9 - 20 - 59
20.11.4 Motor Assembly	9 - 20 - 61

Table of Contents

20.12	SPI Motor	9 - 20 - 65
20.12.1	General Information	9 - 20 - 65
20.12.2	Removal	9 - 20 - 66
20.12.3	Installation	9 - 20 - 67
20.13	SPI Motor Repair	9 - 20 - 69
20.13.1	General Information	9 - 20 - 69
20.13.2	SPI Motor Components	9 - 20 - 70
20.13.3	Disassembly	9 - 20 - 71
20.13.4	Assembly	9 - 20 - 73
20.14	Inspection and Parts Replacement	9 - 20 - 77
20.15	Special Tools	9 - 20 - 78
20.16	Control Valves	9 - 20 - 79
20.16.1	General Information	9 - 20 - 65
20.16.2	Removal	9 - 20 - 66
20.16.3	Installation	9 - 20 - 67
20.17	Control Valve Repair	9 - 20 - 81
20.17.3	Disassembly	9 - 20 - 81
20.17.4	Assembly	9 - 20 - 84
20.18	Control Valve Section Repair	9 - 20 - 85
20.18.1	Lever Operated Spool Section	9 - 20 - 85
20.18.2	Pilot Operated Spool Section	9 - 20 - 87
20.18.3	Solenoid Operated Spool Section	9 - 20 - 90
20.18.4	Inspection and Repair	9 - 20 - 93
20.19	Relief Valve Repair	9 - 20 - 94
20.20	Pilot Solenoid Repair	9 - 20 - 95
20.21	On-Machine Control Valve Repair	9 - 20 - 96
20.22	Joystick Control	9 - 20 - 97
20.22.1	General Information	9 - 20 - 97
20.22.2	Removal/Installation	9 - 20 - 97
20.23	Joystick Control Repair	9 - 20 - 98
20.23.1	Off-Machine Joystick Repair	9 - 20 - 98
20.23.2	On-Machine Joystick Repair	9 - 20 - 99
20.24	Detent Valve	9 - 20 - 101
20.24.1	General Information	9 - 20 - 101
20.24.2	Removal/Installation	9 - 20 - 101
20.25	Detent Valve Repair	9 - 20 - 102
20.26	Main Hydraulic Filter Assembly (SPI)	9 - 20 - 103
20.26.1	General Information	9 - 20 - 103
20.26.2	Removal/Installation	9 - 20 - 103

Table of Contents

20.27	Pilot In-line Filter Assembly	9 - 20 - 104
20.27.1	General Information	9 - 20 - 104
20.27.2	Removal/Installation	9 - 20 - 104
20.28	Main Hydraulic Tank	9 - 20 - 105
20.28.1	General Information	9 - 20 - 105
20.28.2	Removal	9 - 20 - 105
20.28.3	Installation	9 - 20 - 106
20.29	Hydraulic Tank Repair	9 - 20 - 107
20.30	Lower Hydraulic Tank	9 - 20 - 109
20.30.1	General Information	9 - 20 - 109
20.30.2	Removal	9 - 20 - 109
20.30.3	Installation	9 - 20 - 110
20.31	Lower Hydraulic Tank Repair	9 - 20 - 111
20.32	Hydraulic Cylinders	9 - 20 - 112
20.32.1	General Information	9 - 20 - 112
20.32.2	Cylinder Repair	9 - 20 - 113
20.33	Hydraulic Swivel	9 - 20 - 115
20.33.1	General Information	9 - 20 - 115
20.33.2	Removal	9 - 20 - 115
20.33.3	Installation	9 - 20 - 116
20.34	Hydraulic Swivel Repair	9 - 20 - 117
20.34.1	Disassembly	9 - 20 - 117
20.35.2	Assembly	9 - 20 - 118

BUY NOW

**Then Instant Download
the Complete Manual**

Thank you very much!