 


444C Loader

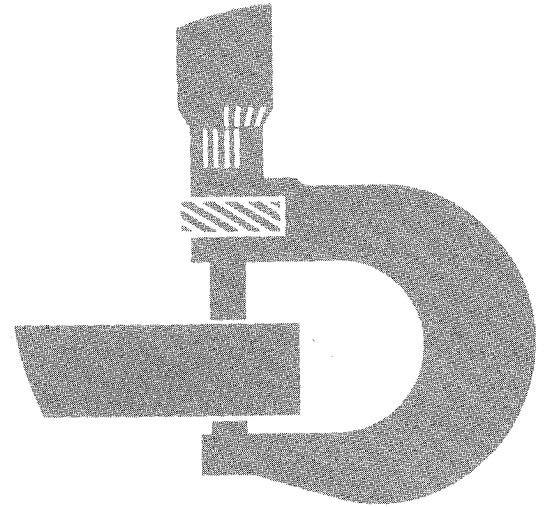

TECHNICAL MANUAL

444C LOADER TECHNICAL MANUAL TM-1227 (FEB-84)

SECTION AND GROUP CONTENTS

SECTION I—GENERAL INFORMATION

- Group I—Contents and Index
- Group II—Introduction and Safety Information
- Group III—General Specifications
- Group IV—Lubrication

SECTION 01 - WHEELS

- Group 0110—Powered Wheels and Fastenings

SECTION 02—AXLES AND SUSPENSION SYSTEMS

- Group 0200—Removal and Installation
- Group 0210—Differential or Bevel Drive
- Group 0225—Input Drive Shafts and U-Joints
- Group 0250—Axle Shafts, Bearings and Reduction Gears
- Group 0260—Hydraulic System

SECTION 03—TRANSMISSION

- Group 0300—Removal and Installation
- Group 0315—Controls
- Group 0325—Input Drive Shafts and U-Joints
- Group 0350—Gears, Shafts, Bearings and Power Shift Clutch
- Group 0360—Hydraulic System

SECTION 04—ENGINE

- Group 0400—Removal and Installation
- Group 0401—Crankshaft and Main Bearings
- Group 0402—Camshaft and Valve Actuating Means
- Group 0403—Connecting Rods and Pistons
- Group 0404—Cylinder Block

SECTION 04—ENGINE—Continued

- Group 0407—Oiling System
- Group 0408—Ventilating System
- Group 0409—Cylinder Head and Valves
- Group 0410—Exhaust Manifold
- Group 0413—Fuel Injection System
- Group 0414—Intake Manifold
- Group 0416—Turbocharger
- Group 0417—Water Pump
- Group 0419—Oil Cooler
- Group 0420—Fuel Filter
- Group 0421—Fuel Transfer Pump
- Group 0422—Starting Motor and Fastenings
- Group 0433—Flywheel, Housing and Fastenings

SECTION 05—ENGINE AUXILIARY SYSTEMS

- Group 0505—Cold Weather Starting Aids
- Group 0510—Cooling Systems
- Group 0515—Speed Controls
- Group 0520—Intake System
- Group 0530—External Exhaust Systems
- Group 0540—Mounting Frame
- Group 0560—External Fuel Supply Systems

SECTION 06—TORQUE CONVERTER

- Group 0651—Turbine, Gears, Shafts and Bearings

Continued on next page

All information, illustrations and specifications contained in this technical manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice. Wherever applicable, specifications and design information are in accordance with SAE and ICED standards.

Copyright© 1984
DEERE & COMPANY
Moline, Illinois
All Rights Reserved
A JOHN DEERE ILLUSTRATION
Previous Edition
Copyright© 1983 Deere & Company
Copyright© 1982 Deere & Company
Copyright© 1980 Deere & Company

T09:1227 01 230982

SECTION AND GROUP CONTENTS—Continued

SECTION 09—STEERING SYSTEM

- Group 0930—Emergency Steering
- Group 0960—Hydraulic System

SECTION 10—SERVICE BRAKES

- Group 1011—Active Elements
- Group 1015—Controls Linkage
- Group 1060—Hydraulic System

SECTION 11—PARKING-EMERGENCY BRAKES

- Group 1111—Active Elements
- Group 1115—Controls Linkage

SECTION 16—ELECTRICAL SYSTEMS

- Group 1671—Batteries, Support and Cables
- Group 1672—Alternator, Regulator and Charging System Wiring
- Group 1673—Lighting System
- Group 1674—Wiring Harness and Switches
- Group 1675—System Controls
- Group 1676—Instruments and Indicators

SECTION 17—FRAME, CHASSIS, OR SUPPORTING STRUCTURE

- Group 1740—Frame Installation
- Group 1746—Frame Bottom Guards
- Group 1749—Chassis Weights

SECTION 18—OPERATOR'S STATION

- Group 1800—Removal and Installation
- Group 1810—Operator Enclosure
- Group 1821—Seat and Seat Belt
- Group 1830—Heating and Air Conditioning

SECTION 19—SHEET METAL AND STYLING

- Group 1910—Hood or Engine Enclosure
- Group 1921—Grille and Grille Housing
- Group 1927—Fenders

SECTION 20—SAFETY, CONVENIENCE AND MISCELLANEOUS

- Group 2002—Mirror
- Group 2004—Horn and Warning Devices
- Group 2006—Cigar Lighter

SECTION 21—MAIN HYDRAULIC SYSTEM

- Group 2160—Hydraulic System

SECTION 31—LOADER

- Group 3102—Buckets
- Group 3115—Controls Linkage
- Group 3140—Frames
- Group 3160—Hydraulic System

SECTION 33—BACKHOE

- Group 3300—Removal and Installation
- Group 3301—Blades, Teeth and Shanks
- Group 3302—Buckets
- Group 3315—Controls Linkage
- Group 3340—Frames
- Group 3360—Hydraulic System

SECTION 90—SYSTEM TESTING

- Group 9005—General Information - Seven Basic Steps of Diagnosis and Testing
- Group 9010—Engine
- Group 9015—Electrical System
- Group 9020—Power Train
- Group 9025—Hydraulic System
- Group 9031—Heating and Air Conditioning

SECTION 99—SPECIAL TOOLS

INDEX

SAFETY AND YOU



 
CAUTION: This safety symbol followed by the word "caution" identifies important safety messages in this manual and on the loader or compactor. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.



T27999N

02A:T27999 N T09:1102 160181


Be prepared if an accident or fire should occur. Know where the first aid kit and the fire extinguishers are located - know how to use them.

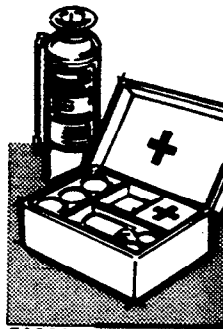

T27504N

02A:T27504 N T09:1103 160181

 Wear safety equipment.

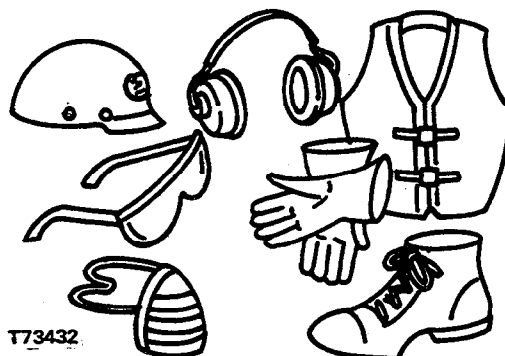

T73432

02A:T73432 T09:1104 160181

Introduction and Safety Information

Wear fairly tight clothing.



 
T23672

02A:T45672 R T09:1105 160181



CAUTION: Escaping fluid under pressure can have sufficient force to penetrate the skin, causing serious injury. Before disconnecting lines, be sure to relieve pressure. Before applying pressure, be sure connections are tight and lines, pipes and hoses are not damaged. Use a piece of cardboard or wood, rather than hands, to search for leaks.

If injured by escaping fluid, see a doctor at once. Serious infection or reaction can develop if proper medical treatment is not administered immediately.

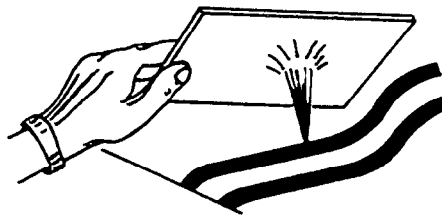


02A:T45794 T09:1117 090281

KEEP SHOP AND STORAGE AREA CLEAN

Maintenance area should be adequately vented.

Keep maintenance area clean and dry.

 Store flammable materials in a cool and well-vented area out of reach of unauthorized personnel.

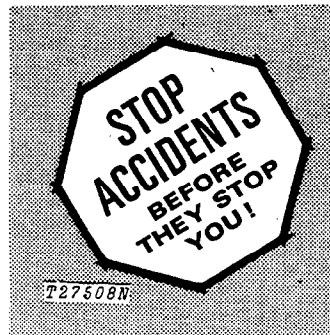

02A:T27508 N T09:1107 160181

FOLLOW SAFE WORKING CONDITIONS

Perform work on equipment only if authorized to do so.

Follow recommended procedures.

Do not service equipment while it is being operated or engine is running.

Always use two service technicians - one, the operator at the controls, the other checking within sight of the operator.

Keep hands away from moving parts.

Support all raised equipment.

Do not work under raised bucket.

 
Always lower bucket before working on it.

If machine is on an incline, block it securely.

Use hoisting equipment for lifting heavy parts.

Wear safety glasses when drilling, grinding or hammering metal.

Do not use open flame around machine.

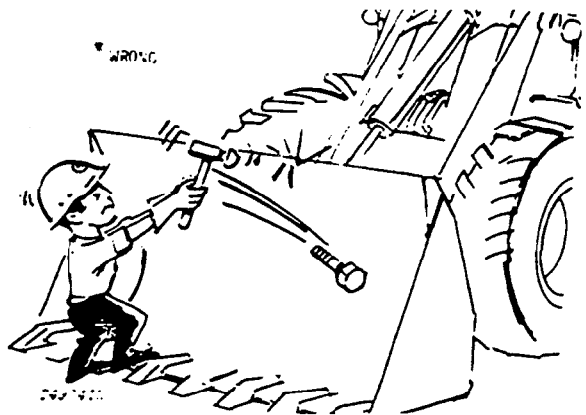

OBSERVE SERVICE PRECAUTIONS

Keep all equipment free of dirt and oil.

Remove oil, grease, mud, ice, or snow from floor of operator's compartment or steps.

 
Do not remove radiator filler cap until coolant temperature is below the boiling point. Then loosen cap slowly to relieve pressure before removing.

Check exhaust system periodically for excessive leakage.

Relieve hydraulic pressure before working on hydraulic system.

Use the correct test group when checking hydraulic pressure.

Discharge accumulators completely before recharging or servicing.

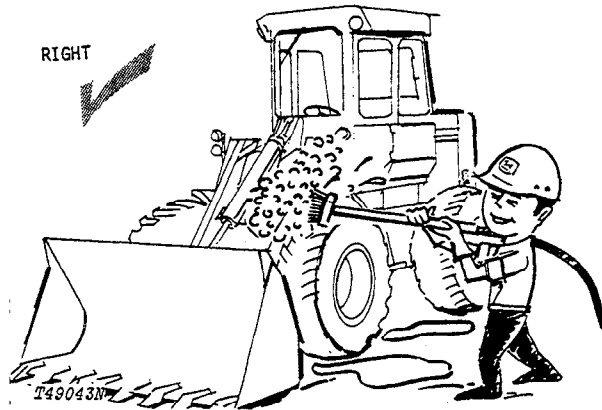


02A:T49043N T09:III14 090281

OBSERVE REPAIR PRECAUTIONS

Relieve hydraulic pressure before working on hydraulic system.

Disconnect batteries before repairing the electrical system or performing a major overhaul.

 Securely block bucket before changing cutting edges. Wear gloves when working with sharp edges.

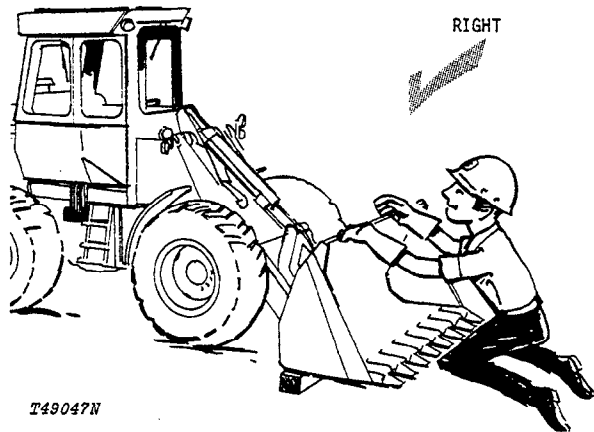

02A:T49047 N T08:III15 090281

CHECK SAFETY EQUIPMENT ON MACHINE

Check that all protective devices (guards, canopies, shields, ROPS, seat belts, etc.) are installed and secured on machine.

Inspect machine carefully for leakage from lines, hoses and fittings.

X WRONG



T32708N

02A:T32708 N T09:III11 190181

AVOID EXPLOSIONS OR FIRE

Do not smoke while refueling.

 
Do not smoke while handling highly flammable materials.

Shut off engine when refueling.

Use care in refueling if engine is hot.

Use good commercial, nonflammable solvents for cleaning parts.

WRONG

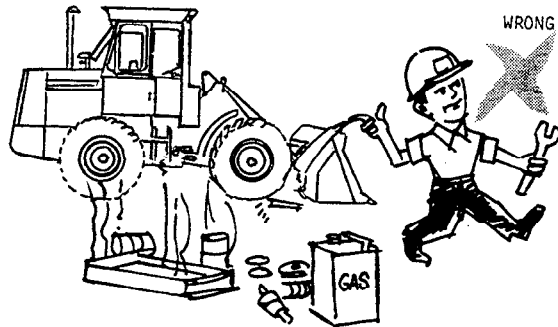

02A:T49038 N T09:III12 190181

OBSERVE BATTERY PRECAUTIONS

 
Provide adequate ventilation when charging batteries.

Do not place metal objects across posts to check charge.

Do not smoke near battery.

Do not allow sparks or open flame near battery.

WRONG

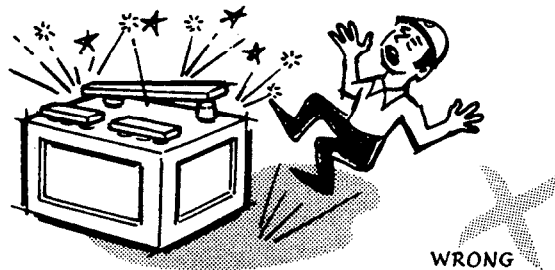

02A:T27505 N T09:III13 190181

General Specifications

Hydraulic Cylinders:	Bore	Stroke
Boom, two	5.25 in. (133 mm)	22.5 in. (571 mm)
Bucket, one	5.25 in. (133 mm)	25.30 in. (643 mm)
Cylinder rods	.Ground, heat-treated, chrome plated, polished.	
Boom and bucket cylinder rods 2.25 in. (57 mm) dia.	

Tires:

15.5-25, 8-ply-rating, L2 loader tread
 15.5-25, 12-ply-rating, L2 loader tread
 13.00-24, 8 ply-rating, G2 grader tread
 17.50-25, 12-ply rating, L2 loader tread

Wheel Treads:

Front and rear 70 in. (1.78 m)

Capacities	U.S.	Imp.	Liters
Cooling system	.. 25 qt.	20.8 qt.	23.7
Fuel tank 40 gal.	33.3 gal.	151.4
Crankcase 11 qt.	9.2 qt.	10.4
Crankcase, in- cluding filter 12 qt.	10.0 qt.	11.4
Transmission case and filters	.. 40 qt.	33.3 qt.	37.9
Front and Rear differential	.. 17 qt.	14.2 qt.	16.1
Loader hydraulic sump 56 qt.	46.7 qt.	53.0

Additional Standard Equipment:

Adjustable cushioned seat with belt
 Engine side shields
 Front fenders
 Gauges
 Transmission oil temperature
 Transmission oil pressure
 Fuel
 Coolant temperature
 Engine oil pressure
 Electric hourmeter
 Voltmeter
 Instrument panel warning lights
 Parking brake
 Hydraulic filter bypass
 Loader hydraulic system indicator light

 
Key switch
 Pushbutton safety start
 Cigar lighter
 Transistorized voltage regulator
 Engine side shields w/locks
 Transmission disconnect
 Work lights, front flood, rear
 combination tail and brake lights
 ROPS cab
 Heater/defroster or heater/defroster and pressurizer
 Front and rear windshield wipers
 Windshield washer
 Dome light
 Instrument panel cover w/lock
 Horn
 Fuel filter
 Automatic return to dig
 Rear bottom guard
 Hand grips
 Fixed drawbar
 Antifreeze
 Precleaner
 Cold weather starting aid
 Articulation transport lock
 Low-maintenance batteries

Special Equipment:


ROPS canopy
 Adjustable suspension seat, vinyl or cloth
 Heater for canopy
 For ROPS cab:
 Air conditioner
 Radio—AM
 Mirrors
 Reverse warning alarm
 Triple hydraulic valve for loader
 Bucket teeth
 Auxiliary bottom guard
 License plate bracket
 Automatic boom height control
 SMV emblem
 Auxiliary cutting edges
 Flashing and turn signal lights
 Rear-axle disconnect
 Hydraulic front differential lock
 Auxiliary spill guard
 Altitude-compensating turbocharger
 Emergency steering

T09:III122 290782

General Specifications

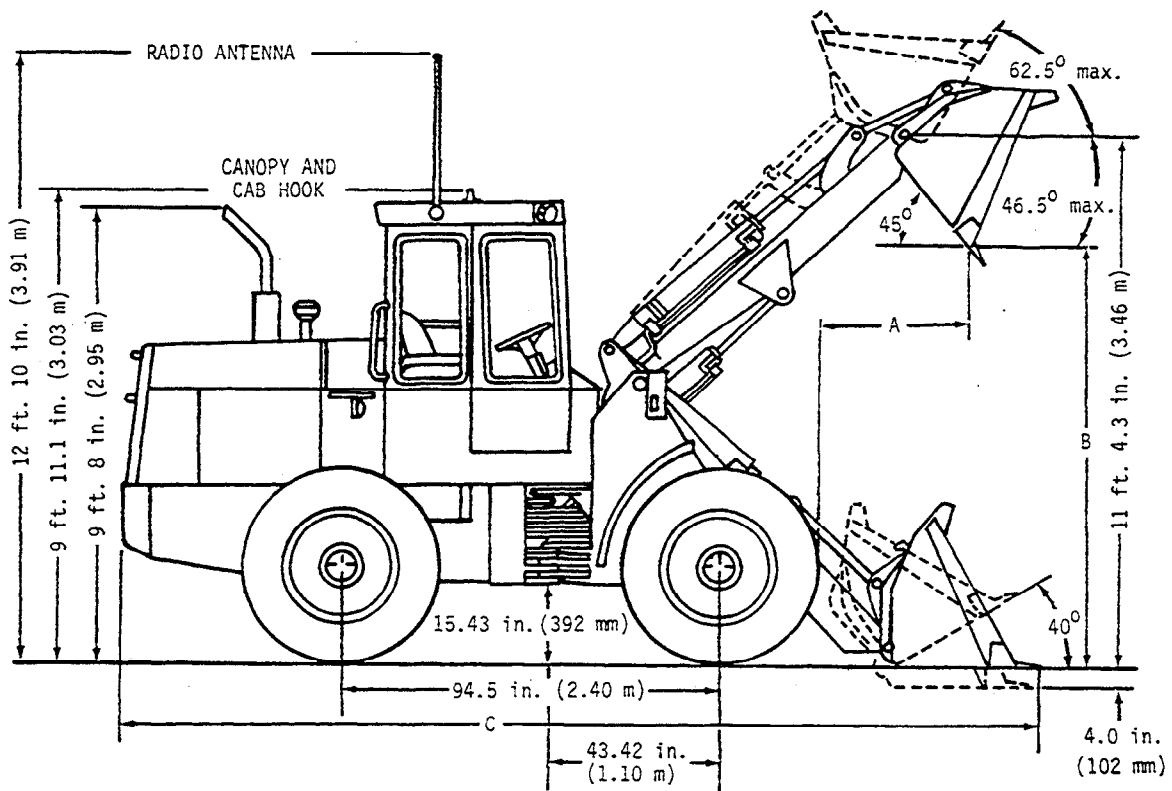

BUCKETS	DIMENSIONS		
	A	B	C
1-1/2 cu. yd. (1.15 m ³)	32.9 in. (836 mm)	9 ft. 1.2 in. (2.77 m)	19 ft. (5.80 m)
1-3/4 cu. yd. (1.34 m ³)	34.33 in. (872 mm)	8 ft. 11.6 in. (2.73 m)	19 ft. 2.4 in. (5.85 m)
3 cu. yd. (2.29 m ³)	41.83 in. (1062 mm)	8 ft. 4.1 in. (2.54 m)	20 ft. 1 in. (6.12 m)
1-1/2 cu. yd. multipurpose (1.15 m ³)	33.5 in. (847 mm)	8 ft. 5.7 in. (2.58 m)	19 ft. 11.0 in. (6.07 m)

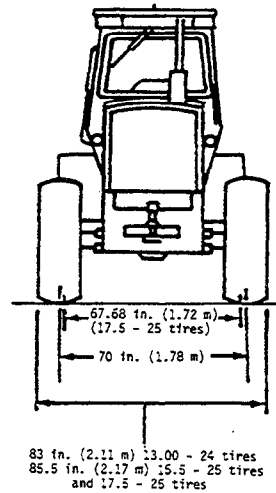 

02A:779070 77907109JH03 B 200181

BUY NOW

**Then Instant Download
the Complete Manual
Thank you very much!**