

4500, 4600 and 4700 Compact Utility Tractors

TECHNICAL MANUAL

**John Deere
Commercial and Consumer
Equipment Division**

**TM1679 (Jun00)
Replaces TM1679 (Oct99)**

Safety**Specifications and
Information****Diesel Engine****Electrical****Gear Power Train****Hydrostatic Power Train****PowrReverser™ Power Train****Final Drive Power Train****Steering****Brakes****Hydraulics****Miscellaneous**



RECOGNIZE SAFETY INFORMATION



This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe servicing practices.

Understand Signal Words

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.


REPLACE SAFETY SIGNS



Replace missing or damaged safety signs. See the machine operator's manual for correct safety sign placement.

HANDLE FLUIDS SAFELY-AVOID FIRES

Be Prepared For Emergencies

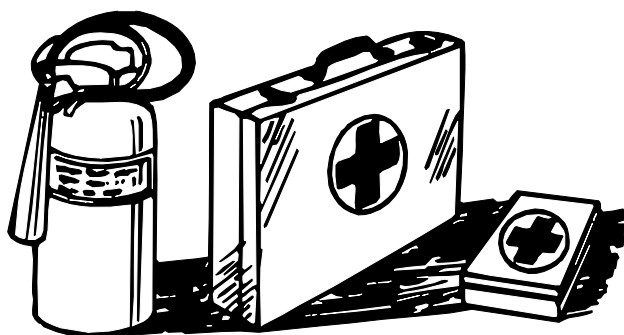

When you work around fuel, do not smoke or work near heaters or other fire hazards.

Store flammable fluids away from fire hazards. Do not incinerate or puncture pressurized containers.

Make sure machine is clean of trash, grease, and debris.


Do not store oily rags; they can ignite and burn spontaneously.

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

USE CARE IN HANDLING AND SERVICING BATTERIES

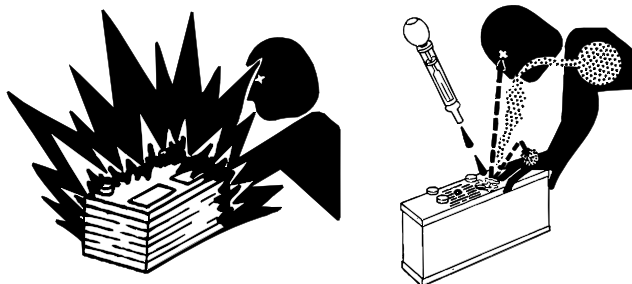

Prevent Battery Explosions

- Keep sparks, lighted matches, and open flame away from the top of battery. Battery gas can explode.
- Never check battery charge by placing a metal object across the posts. Use a volt-meter or hydrometer.
- Do not charge a frozen battery; it may explode. Warm battery to 16°C (60°F).

Prevent Acid Burns

- Sulfuric acid in battery electrolyte is poisonous. It is strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.
- **Avoid acid burns by:**
 1. Filling batteries in a well-ventilated area.
 2. Wearing eye protection and rubber gloves.
 3. Avoiding breathing fumes when electrolyte is added.
 4. Avoiding spilling or dripping electrolyte.
 5. Use proper jump start procedure.
- **If you spill acid on yourself:**
 1. Flush your skin with water.
 2. Apply baking soda or lime to help neutralize the acid.
 3. Flush your eyes with water for 10_15 minutes.
 4. Get medical attention immediately.
- **If acid is swallowed:**
 1. Drink large amounts of water or milk.
 2. Then drink milk of magnesia, beaten eggs, or vegetable oil.
 3. Get medical attention immediately.

USE CARE AROUND HIGH-PRESSURE FLUID LINES

Avoid High-pressure Fluids



Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid injury from escaping fluid under pressure by stopping the engine and relieving pressure in the system before disconnecting or connecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

Avoid Heating Near Pressurized Fluid Lines



Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can be accidentally cut when heat goes beyond the immediate flame area.

CONTENTS

Page

GENERAL VEHICLE SPECIFICATIONS – ALL TRACTORS	3
ELECTRICAL	3
FUEL SYSTEM	4
3-POINT HITCH	4
HYDRAULIC SYSTEM	4
PTO	4
GENERAL VEHICLE SPECIFICATIONS – 4500 TRACTORS	5
FUEL SYSTEM	5
DRIVE TRAIN	5
PTO (PTO Shaft Speed Measured at 2664 Engine rpm).	5
CLUTCH	5
HYDRAULIC SYSTEM	5
WEIGHT	5
GENERAL VEHICLE SPECIFICATIONS – 4600 TRACTORS	6
FUEL SYSTEM	6
DRIVE TRAIN	6
PTO	6
CLUTCH	6
HYDRAULIC SYSTEM	6
WEIGHT	6
GENERAL VEHICLE SPECIFICATIONS* – 4700 TRACTORS	7
FUEL SYSTEM	7
DRIVE TRAIN	7
PTO	7
CLUTCH	7
HYDRAULIC SYSTEM	7
WEIGHT	7
FASTENER TORQUE VALUES	8
JIS FASTENER TORQUE VALUES.	8
METRIC FASTENER TORQUE VALUES	9
INCH FASTENER TORQUE VALUES.	10
O-RING SEAL SERVICE RECOMMENDATIONS.	11
FACE SEAL FITTINGS WITH INCH STUD ENDS TORQUE	11
FACE SEAL FITTINGS WITH METRIC STUD ENDS TORQUE.	12
O-RING FACE SEAL FITTINGS	13
O-RING BOSS FITTINGS	13
DIESEL FUEL SPECIFICATIONS.	14
DIESEL FUEL	14
DIESEL FUEL LUBRICITY	14
DIESEL FUEL STORAGE	14
ENGINE OIL	14
BREAK-IN ENGINE OIL	15
TRANSMISSION & HYDRAULIC OIL.	16
CHASSIS GREASE.	16
ALTERNATIVE LUBRICANTS	17



BUY NOW

**Then Instant Download
the Complete Manual
Thank you very much!**