


# John Deere 550B Crawler Dozer and 555B Crawler Loader

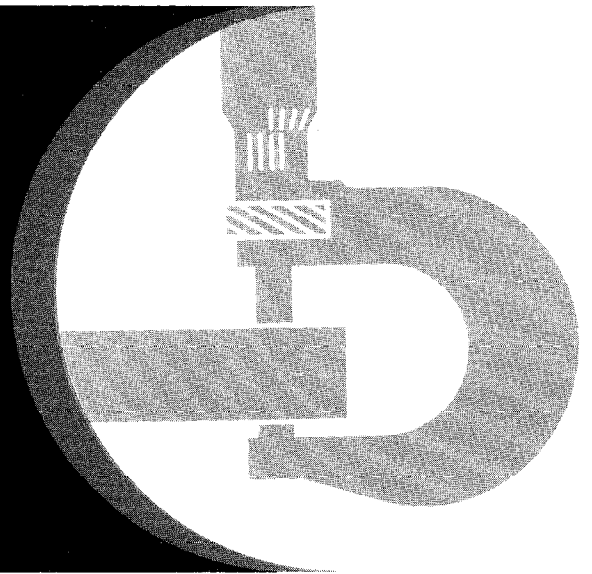

## TECHNICAL MANUAL

TM-1331 (Aug-87)

LITHO IN U.S.A.

# 550B CRAWLER DOZER AND 555B CRAWLER LOADER TECHNICAL MANUAL TM-1331 (AUG-87)

## SECTION AND GROUP CONTENTS

### SECTION I - GENERAL INFORMATION

- Group I - Introduction and Safety Information
- Group II - General Specifications
- Group III - Torque Specifications Chart  
for Cap Screws and Hydraulic  
Fittings
- Group IV - Lubrication

### SECTION 01 - TRACKS

- Group 0130 - Track Systems  
Track Chain, Track frame, Track Carrier  
Roller, Front Idler, Track Roller and Track  
Adjuster

### SECTION 02 - AXLES AND SUSPEN- SION SYSTEMS

- Group 0250 - Axle Shaft, Bearings, and Re-  
duction Gears  
Final Drive, Steering Clutch, Brake Band,  
Steering Clutch Housing and Linkage

### SECTION 03 - TRANSMISSION

- Group 0315 - Controls
- Group 0350 - Gears, Shafts, Bearings, Power  
Shift Clutch, and Torque Converter
- Group 0360 - Hydraulic System  
Oil Pump, Transmission Control Valve,  
Selector Valve, Oil Filter

### SECTION 04 - ENGINE

- Group 0400 - Removal and Installation
- Group 0401 - Crankshaft and Main Bearings
- Group 0402 - Camshaft and Valve Actuating  
Means
- Group 0403 - Connecting Rods and Pistons
- Group 0404 - Cylinder Block (Liners)
- Group 0407 - Engine Oiling System
- Group 0409 - Cylinder Head and Valves
- Group 0410 - Exhaust Manifold
- Group 0413 - Fuel Injection System
- Group 0415 - Engine Balancer
- Group 0416 - Turbocharger
- Group 0417 - Water Pump
- Group 0418 - Thermostats, Housing and Piping
- Group 0419 - Engine Oil Cooler
- Group 0420 - Fuel Filter
- Group 0421 - Fuel Transfer Pump
- Group 0422 - Starting System
- Group 0433 - Flywheel, Housing and Fasteners

### SECTION 05 - ENGINE AUXILIARY SYSTEMS

- Group 0505 - Cold Weather Starting Aids
- Group 0510 - Cooling Systems
- Group 0515 - Speed Controls
- Group 0560 - External Fuel Supply Systems

### SECTION 06 - TORQUE CONVERTER

- Group 0651 - Converter, Turbine, Gears, and  
Shafts (See Group 0350)

*Continued on next page*

*All information, illustrations and specifications contained in this technical manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

COPYRIGHT© 1987  
DEERE & COMPANY  
Moline, Illinois  
All rights reserved  
A JOHN DEERE ILLUSTRATION  
Previous Edition  
Copyright© 1986 Deere & Company  
Copyright© 1985 Deere & Company

T64;1331 16 310787

## SECTION AND GROUP CONTENTS - Continued

### SECTION 09 - STEERING SYSTEMS

Group 0960 - Power Steering

### SECTION 15 - EQUIPMENT ATTACHING

Group 1511 - Drawbar

### SECTION 16 - ELECTRICAL SYSTEM

Group 1671 - Batteries, Support, and Cables

Group 1672 - Alternator

Group 1674 - Wiring Harness and Switches

Group 1676 - Instruments and Indicators

### SECTION 17 - FRAME, CHASSIS, OR SUPPORTING STRUCTURE

Group 1740 - Frame Installation

Group 1746 - Frame Bottom Guards

Group 1749 - Chassis Weights

Sprocket, Rear, and Bottom Counterweights

### SECTION 18 - OPERATOR'S STATION

Group 1810 - Operator Enclosure

ROPS, Cab, Windshield Wiper Motor,

Operator Seat, and Backhoe Seat

### SECTION 19 - SHEET METAL

Group 1910 - Hood or Engine Enclosure

Grille and Grille Housing, Engine Side

Shields, Cowl and Cowl Support

### SECTION 30 - WINCH

Group 3015 - Controls Linkage

Group 3050 - Winch Drive and Clutches

Group 3060 - Winch Hydraulic System

Winch Control Valve and Hydraulic Pump

### SECTION 31 - LOADER

Group 3102 - Buckets

Group 3103 - Forks

Group 3115 - Controls Linkage

Group 3140 - Frames

Group 3160 - Hydraulic System

Loader Cylinders, Hydraulic Pump and

Loader Control Valve

### SECTION 32 - BULLDOZER

Group 3201 - Blades

Group 3215 - Controls Linkage

Group 3240 - Frames

Group 3260 - Hydraulic System

Hydraulic Return Filter, Reservoir, Pump,

Pump Drive, Dozer Control Valve, Auxiliary

Valve, Selector Valve, Flow Divider and

Bulldozer Cylinders

### SECTION 33A - BACKHOE - 9300

Group 3300A - Removal and Installation

Group 3302A - Bucket

Group 3315A - Controls Linkage

Group 3340A - Frames

Group 3360A - Hydraulic System

Control Valve, Lift Check, Anti-Cavitation

Valve, Relief Valve, Manifold Block and

Backhoe Cylinders

### SECTION 33B - BACKHOE - 9550

Group 3300B - Removal and Installation

Group 3302B - Bucket

Group 3315B - Controls Linkage

Group 3340B - Frames

Group 3360B - Hydraulic System

Control Valve, Lift Check, Anti-cavitation

Valve, Relief Valve, Manifold Block and

Backhoe Cylinders

### SECTION 37 - LOG ARCH

Group 3740 - Arch Frames

### SECTION 40 - WINCH DRIVE

Group 4051 - Gears, Shafts and Bearings

### SECTION 42 - GROUND CONDITIONING TOOL

Group 4201 - Teeth and Shanks

Group 4240 - Frame

Group 4260 - Hydraulic System

### SECTION 9005 - OPERATIONAL CHECK-OUT PROCEDURE

### SECTION 9010 - ENGINE

Group 9010-05 - Theory of Operation

Group 9010-10 - System Operational Checks

Group 9010-15 - Diagnostic Information

Group 9010-20 - Adjustments

Group 9010-25 - Tests

*Continued on next page*

T64:1331 17 121185

## SECTION AND GROUP CONTENTS—Continued

### **SECTION 9015 - ELECTRICAL SYSTEM**

- Group 9015-05 - Theory of Operation
- Group 9015-10 - System Operational Checks
- Group 9015-15 - Diagnostic Information
- Group 9015-25 - Tests

### **SECTION 9020 - POWER TRAIN**

- Group 9020-05 - Theory of Operation
- Group 9020-10 - System Operational Checks
- Group 9020-15 - Diagnostic Information
- Group 9020-20 - Adjustments
- Group 9020-25 - Tests

### **SECTION 9025 - HYDRAULIC SYSTEM**

- Group 9025-05 - Theory of Operation
- Group 9025-10 - System Operational Checks
- Group 9025-15 - Diagnostic Information
- Group 9025-25 - Tests

### **SECTION 9030 - MISCELLANEOUS COMPONENTS**

- Group 9030-05 - Theory of Operation
- Group 9030-15 - Diagnostic Information
- Group 9030-20 - Adjustments
- Group 9030-25 - Tests

### **SECTION 99 - DEALER FABRICATED TOOLS**

**BUY NOW**

**Then Instant Download  
the Complete Manual  
Thank you very much!**