


1. Introduction and Specifications

1.1 Introduction	1-2
1.2 Foreword	1-4
1.3 Machine Dimensions	1-5
1.4 Specifications	1-6
1.5 Function Speeds	1-18
1.6 Travel Speeds	1-18
1.7 Torque Values	1-19
1.7.1 Steel Fasteners	1-19
1.7.2 Hydraulic Fittings	1-23
1.8 Hydraulic Fluids	1-26
1.8.1 Recommended Hydraulic System Fluids	1-26
1.9 Application of Adhesives	1-27
1.9.1 Through Hole (Bolts and Nuts)	1-27
1.9.2 Blind Holes (Cap Screw, etc)	1-27
1.9.3 Pre-Assembled Fasteners	1-28
1.9.4 Hydraulic Fittings	1-28
1.10 Tool List	1-29
1.10.1 Service Shop	1-29
1.10.2 Service Truck	1-30
1.11 Modifications or Repairs to Roll-over Protective Structures (ROPS)	1-37

2. Safety Rules

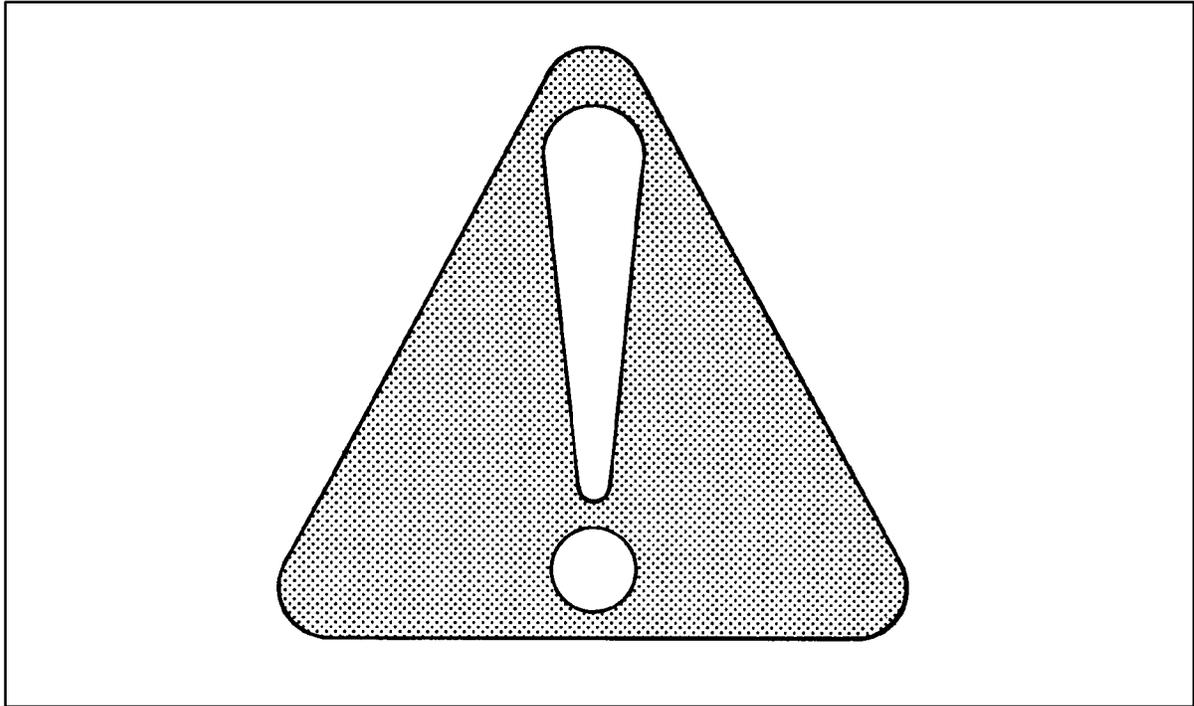

<u>2.1</u>	<u>General</u>	<u>2 - 2</u>
<u>2.2</u>	<u>Safety Symbol</u>	<u>2 - 2</u>
<u>2.3</u>	<u>Understanding Signal Words</u>	<u>2 - 2</u>
<u>2.4</u>	<u>General Safety Precautions</u>	<u>2 - 3</u>
<u>2.5</u>	<u>Operating Safety Precautions</u>	<u>2 - 8</u>
<u>2.6</u>	<u>Servicing Safety Precautions</u>	<u>2 - 12</u>
<u>2.7</u>	<u>Transporting on Public Roads</u>	<u>2 - 19</u>
<u>2.8</u>	<u>Fire Prevention</u>	<u>2 - 20</u>
<u>2.9</u>	<u>What to Do if the Machine Catches Fire</u>	<u>2 - 21</u>

3. Power Unit

3.1 Engine Mounting	3-2
3.1.1 Front and Rear Engine Mounts	3-2
3.1.2 Hydraulic Pump Drive Mounting	3-4
3.1.3 Flywheel Runout	3-5
3.2 Air Intake System	3-6
3.2.1 Air Filter Inspection	3-7
3.2.2 Air Filter Replacement	3-9
3.3 Exhaust System	3-10
3.3.1 Description	3-10
3.3.2 Exhaust Removal/Installation	3-10
3.4 Engine Cooling System	3-11
3.4.1 Description	3-11
3.4.2 Radiator Removal/Installation	3-12
3.4.3 Radiator Cap Pressure Test	3-14
3.4.4 Mounting the Cooling Fan and Guard	3-15
3.4.5 Cooling Differential Temperature Test	3-17
3.5 Fuel System	3-18
3.5.1 Description	3-18
3.5.2 Check Fuel/Water Separator	3-19
3.5.3 Bleeding the Fuel System	3-21
3.5.4 Fuel Pressure Test	3-23
3.6 Engine	3-24
3.6.1 Description	3-24
3.6.2 Engine Removal	3-25
3.6.3 Engine Replacement	3-31
3.7 Setting the Power Control	3-32
3.8 Troubleshooting	3-37

4. Power Train

4.1 General	4-2
4.2 Traction Drive	4-3
4.2.1 Traction Drive Components (Hydraulic and Planetary)	4-3
4.2.1.1 Function	4-4
4.2.1.2 Adjustments	4-6
4.2.1.3 Repairing Planetaries	4-9
4.2.2 Traction Drive Components (Track Components)	4-25
4.2.2.1 Function	4-26
4.2.2.2 Track Adjustment	4-28
4.2.2.3 Wear Limits and Replacement	4-30
4.2.2.4 Opening the Track	4-33
4.2.2.5 Replacing Drive Sprockets	4-35
4.2.2.6 Replacing Planetaries	4-35
4.2.2.7 Removing Idler Assembly	4-36
4.2.2.8 Track Link Pin & Bushing Repair	4-40
4.2.2.9 Roller Replacement	4-41
4.2.3 Traction Drive Speed Adjustment	4-42
4.2.3.1 Adjusting the Low (Working) Travel Speed	4-42
4.2.3.2 Adjusting the High Travel Speed	4-45
4.3 Swing Drive	4-48
4.3.1 Swing Drive Components	4-49
4.3.2 Torquing the Swing Bearing	4-50
4.3.3 Adjusting the Pinion Backlash	4-51
4.3.4 Gearbox Removal and Repair	4-54

5. Brake Systems

5.1 General	5-2
5.1.1 General	5-2
5.2 Track Brakes	5-3
5.2.1 Testing for Slippage	5-3
5.2.2 Repair	5-7
5.3 Swing Brakes	5-13
5.3.1 Testing	5-13
5.3.1.1 Slippage	5-13
5.3.1.2 No or Intermittent Release	5-15
5.3.2 Repair	5-16

6. Hydraulic System

6.1 Principles of Operation and Terminology	6-4
6.1.1 Hydraulic Oil Warm-Up Procedure	6-6
6.2 Hydraulic Pump	6-7
6.2.1 Maximum Stroke Adjustment	6-7
6.2.2 Removal and Replacement	6-8
6.3 Hydraulic Control Valve - Main	6-17
6.3.1 Location of Components	6-17
6.3.2 Location of Flow Ports and Controls	6-18
6.3.3 Function Component Detail	6-19
6.3.3.1 Main Inlet and Outlet Section	6-19
6.3.3.2 Unloader End Block	6-20
6.3.4 Port Relief Valve Settings	6-21
6.3.5 Hose Routing Detail	6-22
6.3.5.1 Function Hoses Main Valve to Boom	6-22
6.3.5.2 Pilot Hoses - Valve to Cab	6-23
6.3.5.3 Pilot Hoses - Joysticks to Cab	6-24
6.3.5.4 Pilot Hoses - Foot Pedals to Cab	6-25
6.4 Hydraulic Tank	6-26
6.4.1 General	6-26
6.4.2 Tank Description	6-27
6.5 Hydraulic System Filling	6-29
6.5.1 General	6-29
6.5.2 Filling Pumps and Motor Cases	6-30
6.5.3 Filling the Tank	6-31
6.5.4 Filling the Main Pump Motor Case	6-32
6.5.5 Cycling the System Components	6-34

6. Hydraulic System

6.6 Hydraulic Oil Cooling System	6-37
6.6.1 General	6-37
6.6.2 Some Causes of Overheating	6-38
6.6.3 Testing the Cooling System	6-39
6.6.3.1 Inspection	6-39
6.6.3.2 Thermostatic Control Valve Testing	6-40
6.6.3.3 Oil Cooler Pressure Test	6-41
6.7 Hydraulic Pressure Testing and Adjustment	6-42
6.7.1 General	6-42
6.7.2 Pressure Testing	6-43
6.7.2.1 Pilot Pressure Test	6-44
6.7.2.2 Track Brake Release Pressure	6-47
6.7.3 Pressure Adjustment	6-54
6.7.3.1 Saw Circuit	6-54
6.7.3.2 Saw Speed Adjustment	6-58
6.7.3.3 Main Pump Delta P	6-60
6.7.3.4 Track Drive	6-62
6.7.3.5 Swing Circuit	6-69
6.7.3.6 Hoist, Stick, Tilt Circuit	6-72
6.7.3.7 Clamps and Wrist Circuit	6-74
6.7.3.8 Pilot Shut-Off Switches	6-75
6.8 Elimination of Harsh or Jerky Machine Response	6-76
6.8.1 Bleeding Pilot System End Caps	6-78
6.8.2 Pilot Orifice Locations	6-79
6.8.3 Slow or Jerky Machine Response Only When Cold	6-80
6.8.4 Adjusting the Delta P Relief Valve	6-80

6. Hydraulic System

6.9 Rotary Manifold/Hydraulic Swivel	6-81
6.9.1 Leakage Symptoms	6-81
6.9.2 Leakage Test	6-82
6.9.3 Removal and Repair	6-84
6.9.3.1 Removal	6-84
6.9.3.2 Repair	6-87
6.9.3.3 Installation	6-89
6.10 Hydraulic Cylinders	6-91
6.10.1 Hydraulic Cylinder Description	6-91
6.10.1.1 Component Description	6-91
6.10.1.2 Hydraulic Cylinders - Hoist, Stick, Tilt	6-91
6.10.1.3 Hydraulic Cylinder - Enclosure Tilt	6-91
6.10.2 Hydraulic Cylinder Service - Hoist, Stick and Tilt	6-92
6.10.2.1 Cylinder Removal	6-92
6.10.2.2 Cylinder Disassembly	6-94
6.10.2.3 Inspection	6-97
6.10.2.4 Assembly	6-98
6.10.2.5 Bushing Replacement	6-101
6.10.3 Hydraulic Cylinder Service - Enclosure Tilt	6-102
6.10.3.1 Cylinder Removal	6-102
6.10.3.2 Cylinder Disassembly	6-104
6.10.3.3 Cylinder Assembly	6-107
6.11 Hydraulic Component Symbols	6-113
6.12 Hydraulic Schematics - 853G Feller Buncher	6-119

7. Electrical System

7.1 Electrical System Description	7-4
7.1.1 General	7-4
7.1.2 Electrical Box & Battery Cables	7-5
7.1.3 Electrical Wiring	7-6
7.1.3.1 Main Wire Harness	7-5
7.1.3.2 Engine Wire Harness	7-6
7.1.3.3 Cab Wire Harness	7-7
7.1.3.4 Gauge Panel Harness	7-7
7.1.3.5 Travel Alarm/Horn Harness	7-7
7.1.4 Solenoid Controls	7-9
7.1.4.1 Pilot Shut Off Solenoid	7-8
7.1.4.2 Solenoids on Main Valve	7-8
7.1.4.3 Pilot Shut-Off Solenoid	7-8
7.1.5 Circuit Breakers	7-10
7.1.6 Relays	7-11
7.1.6.1 Upper and Lower Control Panel Relays	7-10
7.1.6.2 Starter Relay	7-11
7.1.7 Gauges and Warning Devices	7-12
7.1.7.1 Gauges	7-11
7.1.7.2 Warning Devices	7-11
7.1.7.3 Travel/Enclosure Alarm	7-12
7.1.8 Pressure Switches & Senders	7-14
7.1.8.1 Engine Oil Pressure	7-13
7.1.8.2 Engine Coolant Temperature	7-13
7.1.8.3 Engine Coolant Level Sensor	7-14
7.1.8.4 Fuel Level Sensor	7-14
7.1.8.5 Hydraulic Oil Level Switch	7-15
7.1.8.6 Hydraulic Oil Switches & Sender	7-15
7.1.8.7 Switches on Hydraulic Tank	7-15
7.1.9 Machine Electrical Grounds	7-17

7. Electrical System

7.1.10	Wiring Harness and Switches	7-19
7.1.10.1	Replace Deutsch Connectors	7-18
7.1.10.2	Install Deutsch Contact	7-19
7.1.10.3	Replace Weather Pack Connector	7-20
7.1.10.4	Install Weather Pack Contact	7-22
7.1.10.5	Install Metri-Pack Connectors	7-23
7.1.10.6	Install Metri-Pack Contact	7-24
7.1.10.7	Remove Connector Body From Blade Terminals	7-25
7.1.10.8	Remove Blade Terminals From Fuse Block	7-25
7.1.10.9	Replace Sealed Connectors	7-25
7.2	Electrical Circuit Testing	7-27
7.2.1	Circuit Basics	7-27
7.2.2	Circuit Resistance	7-28
7.2.3	Tracing Circuits	7-30
7.2.4	Continuity Tests	7-35
7.2.5	Testing Solenoids and Relays	7-36
7.2.6	Testing Sensors and Circuit Breakers	7-38
7.2.7	Testing Diodes	7-39
7.3	Coding and Symbols	7-40
7.3.1	Wire Number	7-40
7.3.2	Wiring Connector Codes	7-40
7.3.3	Schematic Gridding	7-41
7.3.4	Component Symbols	7-42
7.4	Component Locator	7-51
7.4.1	Component Location Table	7-51
7.4.2	Machine Location Grid	7-55

7. Electrical System

7.5 Batteries	7-56
7.5.1 Servicing the Batteries	7-56
7.5.2 Testing the Batteries	7-58
7.5.3 Checking Electrolyte Specific Gravity	7-59
7.5.4 Checking Battery Electrolyte Level and Terminals	7-61
7.5.5 Using Booster Batteries	7-63
7.5.6 Using Battery Charger	7-64
7.6 Electrical Schematics - 853G Feller Buncher	7-65

8. Attachments

8.1	Introduction	8-6
8.1.1	General	8-6
8.1.2	Models Covered By This Manual	8-6
8.2	Technical Information	8-7
8.2.1	Component Description	8-7
8.2.2	General Dimensions	8-8
8.2.3	General Specifications	8-9
8.3	Felling Head Frame	8-10
8.3.1	General	8-10
8.3.2	Felling Head Frame Inspection	8-10
8.3.3	Safety Precautions	8-10
8.3.4	Component Description	8-11
8.3.5	Inspection	8-12
8.3.5.1	Guards & Cover Plates	8-12
8.3.5.2	Felling Head Frame	8-13
8.3.5.3	Butt Plate Inspection	8-14
8.3.5.4	Saw Housing Restriction	8-15
8.3.5.5	Chip Deflector	8-16
8.3.6	Butt Plate Replacement	8-17
8.3.6.1	Removal	8-17
8.3.6.2	Installation	8-17
8.4	Clamp Arms	8-20
8.4.1	General	8-20
8.4.2	Inspection	8-20
8.5	Clamp Arms Repair	8-21
8.5.1	Component Description	8-21
8.5.2	Inspection	8-22
8.5.3	Harvesting Clamp & Bushing Replacement	8-24
8.5.3.1	Removal	8-24
8.5.3.2	Removal - R.H. Clamp	8-25
8.5.3.3	Removal Link	8-26
8.5.3.4	Bushing Replacement	8-27
8.5.4	Accumulating Clamp, Link & Bushing Replacement	8-29

8. Attachments

8.5.4.1	Removal	8-29
8.5.4.2	Bushing Replacement	8-30
8.6	Wrist & Boom Adapter	8-31
8.6.1	General	8-31
8.6.2	Inspection	8-31
8.7	Wrist & Boom Adapter Repair	8-32
8.7.1	Component Description	8-32
8.7.2	Inspection	8-33
8.7.2.1	General	8-33
8.7.2.2	Bearing End Play and Wear	8-37
8.7.3	Wrist Bearing & Boom Adapter Replacement	8-40
8.7.3.1	Removal	8-40
8.7.3.2	Installation	8-43
8.8	Disc Saw Group Repair	8-46
8.8.1	General	8-46
8.8.2	Inspection	8-46
8.8.3	Component Description	8-47
8.8.4	Inspection	8-48
8.8.5	Saw Tooth Replacement	8-54
8.8.5.1	Removal	8-54
8.8.5.2	Installation	8-55
8.8.6	Disc Saw Blade Replacement	8-56
8.8.6.1	Removal	8-56
8.8.6.2	Installation	8-58
8.9	Disc Saw Driveshaft	8-61
8.9.1	General	8-61
8.9.2	Driveshaft Components	8-61
8.10	Disc Saw Driveshaft Repair	8-62
8.10.1	Driveshaft, Bearing & Seal Replacement	8-62
8.10.1.1	Removal	8-62
8.10.1.2	Assembly	8-66
8.11	Hydraulic Group	8-74
8.11.1	General	8-74
8.11.2	Inspection	8-74

8. Attachments

8.11.3 Hydraulic Motor Data	8-74
8.11.4 Hydraulic Cylinder Operation - Cushioned Cylinder	8-75
8.11.4.1 General	8-75
8.11.4.2 Components	8-76
8.11.5 Hydraulic Cylinder Operation - Noncushioned Cylinder	8-77
8.11.5.1 General	8-77
8.11.5.2 Components	8-78
8.11.6 Hydraulic Motor Operation	8-79
8.11.6.1 General	8-79
8.12 Hydraulic Group Repair	8-81
8.12.1 Component Description	8-81
8.12.2 Inspection	8-82
8.12.2.1 General Inspection	8-82
8.12.2.2 Checking for Leaks	8-83
8.12.2.3 Hydraulic System Warm-up	8-85
8.12.2.4 Checking Disc Saw Blade Speed	8-86
8.12.2.5 Checking Begin of Regulation	8-87
8.12.2.6 Checking Hydraulic Pressure & Flow	8-90
8.12.3 Hydraulic Cylinder Replacement	8-96
8.12.3.1 Removal - Upper Clamp Cylinder	8-96
8.12.3.2 Removal - Lower Clamp Cylinder	8-97
8.12.3.3 Removal - Wrist Cylinder	8-98
8.12.4 Hydraulic Motor Replacement	8-100
8.12.4.1 Removal	8-100
8.13 Troubleshooting	8-101
8.13.1 Hydraulic Motor	8-101
8.13.2 Can't Obtain Maximum Blade Speed	8-101
8.14 Hydraulic Motors	8-102
8.14.1 Hydraulic Motor Repair - Saw Drive	8-102
8.14.1.1 Seal Replacement	8-102
8.14.1.2 Bypass Check Valve	8-103
8.14.1.3 Control Parts	8-104
8.14.1.4 Control Plate	8-107
8.14.1.5 Control Piston	8-110
8.14.1.6 Swivel Time Orifice	8-113
8.14.1.7 Initial Pump & Motor Setup	8-115
8.14.1.8 Initial Saw Circuit Begin of Regulation Adjustment	8-117

8. Attachments

8.15 Hydraulic Cylinders	8-119
8.15.1 General	8-119
8.15.2 Hydraulic Cylinder Repair - Cushioned Cylinder	8-120
8.15.2.1 Disassembly	8-120
8.15.2.2 Inspection	8-123
8.15.2.3 Assembly	8-124
8.15.2.4 Bushing Replacement	8-126
8.15.3 Hydraulic Cylinder Repair - Noncushioned Cylinder	8-127
8.15.3.1 Disassembly	8-127
8.15.3.2 Inspection	8-130
8.15.3.3 Assembly	8-131
8.16 Saw Speed Sense Equipment	8-133
8.16.1 Component Description	8-133
8.16.2 General	8-134
8.16.2.1 Installation	8-134
8.16.2.2 Sensor Adjustment	8-134
8.16.2.3 Power Supply	8-135

9. Frames

9.1 Cab	9-2
9.1.1 Front Window Replacement	9-2
9.1.2 Service Panel Removal	9-6
9.2 Auto-Lubrication (Option)	9-7
9.2.1 Description	9-7
9.2.2 System Configuration	9-10
9.2.3 Divider Valve Assembly	9-11
9.2.4 Pump/Reservoir Assembly	9-12
9.2.5 Auto-Lubrication	9-13
9.2.6 Filling & Priming the System	9-16
9.2.7 Troubleshooting	9-17
9.2.7.1 General	9-17
9.2.7.2 System Malfunctions	9-17
9.2.8 System Blockage	9-19
9.2.9 Auto-Lubrication Routing	9-21

10. Heating & Air Conditioning

10.1 System Description	10-2
10.1.1 General	10-2
10.1.2 System Components	10-3
10.2 Air Conditioning	10-4
10.2.1 Component Operation	10-4
10.2.1.1 Compressor	10-5
10.2.1.2 Condenser	10-5
10.2.1.3 Receiver Drier	10-5
10.2.1.4 Expansion Valve	10-6
10.2.1.5 Evaporator	10-7
10.2.1.6 Controls	10-7
10.2.1.7 Refrigerant	10-7
10.2.2 Charging the System	10-8

BUY NOW

**Then Instant Download
the Complete Manual
Thank you very much!**