

880 Hydrostatic Drive Windrower



JOHN DEERE

TECHNICAL MANUAL 880 Hydrostatic Drive Windrower

TM 1013 (01 NOV70) English

John Deere Ottumwa Works
TM1013 (01 NOV70)

LITHO IN U.S.A.
ENGLISH

880 HYDROSTATIC DRIVE WINDROWER

TECHNICAL MANUAL

TM-1013 (NOV-70)

CONTENTS

Section 10 - GENERAL

- Group 5 - Specifications
- Group 10 - Tune-Up and Adjustment
- Group 15 - Lubrication
- Group 20 - Operator's Cab

Section 20 - ENGINE

- Group 5 - General Information

Section 30 - ELECTRICAL SYSTEM

- Group 5 - Description
- Group 10 - Wiring Diagrams

Section 40 - POWER TRAIN

- Group 5 - Main Drive Case and Drive Shaft
- Group 10 - Final Drive
- Group 15 - Platform Drive

Section 50 - STEERING AND BRAKES

- Group 5 - Steering
- Group 10 - Brakes

Section 60 - HYDRAULIC SYSTEM

- Group 5 - Components and Tests
- Group 10 - Reservoir and Filter
- Group 15 - Control Valves
- Group 20 - Hydraulic Cylinders
- Group 25 - Hydrostatic Transmission

Section 70 - AIR CONDITIONING

- Group 5 - General Information
- Group 10 - Diagnosis and Testing
- Group 15 - Evacuation and Charging
- Group 20 - Compressor
- Group 25 - Condenser, Receiver-Dryer, and Evaporator
- Group 30 - Regulatory Controls
- Group 35 - Air Intake System

Copyright 1968
DEERE & COMPANY
Moline, Illinois
All rights reserved

"All information, illustrations and specifications contained in this technical manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice. "

Hello

**Thank you very much for your
patience.**

Want to get more information.

Please click here. Go back to the page.

**At the bottom of the page there is a
“Free-Purchase” button.**

**Click on it and you will get file on the
bottom of the website.**

Have questions.

Please write to me.

aservicemanuapdf@yahoo.com