
### **Horicon Hydraulic Attachments:**

7, 8, 8A, 10, &10A Backhoes 40, 44, 51, 52, 60, 67, 70, & 70A Loaders 365, 375, 380, 380A, & 390 Front Blades 30-Inch Hydraulic Tiller Hydraulic Dump MCS

## TECHNICAL MANUAL

John Deere Lawn & Grounds Care Division TM1593 (May 95) Replaces TM1429

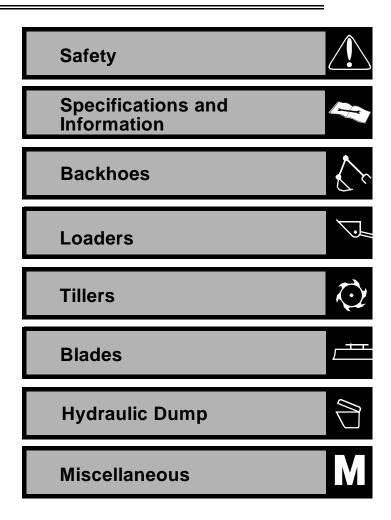

5/2/95



#### RECOGNIZE SAFETY INFORMATION



This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.


Follow recommended precautions and safe servicing practices.

#### **Understand Signal Words**

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.


#### REPLACE SAFETY SIGNS

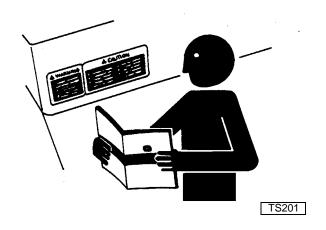

Replace missing or damaged safety signs. See the machine operator's manual for correct safety sign placement.

### HANDLE FLUIDS SAFELY-AVOID FIRES

#### **Be Prepared For Emergencies**

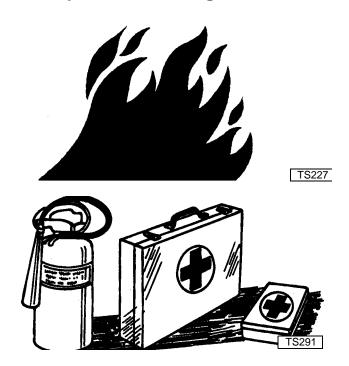

When you work around fuel, do not smoke or work near heaters or other fire hazards.

Store flammable fluids away from fire hazards. Do not incinerate or puncture pressurized containers.

Make sure machine is clean of trash, grease, and debris.

Do not store oily rags; they can ignite and burn spontaneously.

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

**1 - 2** 5/2/95

#### USE CARE AROUND HIGH-PRESSURE FLUID LINES

#### **Avoid High-pressure Fluids**



Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid injury from escaping fluid under pressure by stopping the engine and relieving pressure in the system before disconnecting or connecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

### **Avoid Heating Near Pressurized Fluid Lines**



Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can be accidentally cut when heat goes beyond the immediate flame area.

#### **USE SAFE SERVICE PROCEDURES**




#### **Wear Protective Clothing**

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing. Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

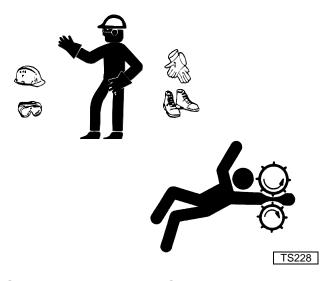

#### **Service Machines Safely**

Tie long hair behind your head. Do not wear a necktie, scarf, loose clothing, or necklace when you work near machine tools or moving parts. If these items were to get caught, severe injury could result.

Remove rings and other jewelry to prevent electrical shorts and entanglement in moving parts.


#### **Use Proper Tools**

Use tools appropriate to the work. Makeshift tools and procedures can create safety hazards. Use power tools only to loosen threaded parts and fasteners. For loosening and tightening hardware, use the correct size tools. **DO NOT** use U.S. measurement tools on metric fasteners. Avoid bodily injury caused by slipping wrenches. Use only service parts meeting John Deere specifications.

5/2/95 1 - 3




#### Park Machine Safely

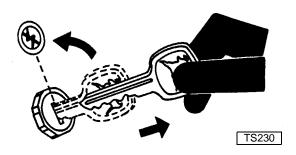

#### Before working on the machine:

- 1. Lower all equipment to the ground.
- 2. Stop the engine and remove the key.
- 3. Disconnect the battery ground strap.
- Hang a "DO NOT OPERATE" tag in operator station.

### **Support Machine Properly And Use Proper Lifting Equipment**

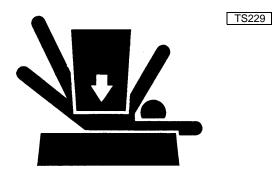

If you must work on a lifted machine or attachment, securely support the machine or attachment.

Do not support the machine on cinder blocks, hollow tiles, or props that may crumble under continuous load. Do not work under a machine that is supported solely by a jack. Follow recommended procedures in this manual.

Lifting heavy components incorrectly can cause severe injury or machine damage. Follow recommended procedure for removal and installation of components in the manual.

#### Work In Clean Area

#### Before starting a job:

- 1. Clean work area and machine.
- Make sure you have all necessary tools to do your job.
- 3. Have the right parts on hand.
- Read all instructions thoroughly; do not attempt shortcuts.


#### **Using High Pressure Washers**

Directing pressurized water at electronic/electrical components or connectors, bearings, hydraulic seals, fuel injection pumps or other sensitive parts and components may cause product malfunctions. Reduce pressure and spray at a 45 to 90 degree angle.

#### **Illuminate Work Area Safely**

Illuminate your work area adequately but safely. Use a portable safety light for working inside or under the machine. Make sure the bulb is enclosed by a wire cage. The hot filament of an accidentally broken bulb can ignite spilled fuel or oil.

#### **Work In Ventilated Area**

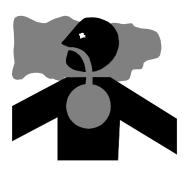

Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove the exhaust fumes from the area with an exhaust pipe extension.


If you do not have an exhaust pipe extension, open the doors and get outside air into the area.

#### Remove Paint Before Welding Or Heating

Avoid potentially toxic fumes and dust. Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch. Do all work outside or in a well ventilated area. Dispose of paint and solvent properly. Remove paint before welding or heating: If you sand or grind paint, avoid breathing the dust. Wear an approved respirator. If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.


**1 - 4** 5/2/95

# AVOID INJURY FROM ROTATING BLADES, AUGERS AND PTO SHAFTS

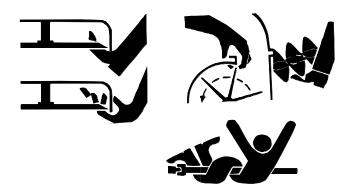

Keep hands and feet away while machine is running. Shut off power to service, lubricate or remove mower blades, augers or PTO shafts.

### HANDLE CHEMICAL PRODUCTS SAFELY

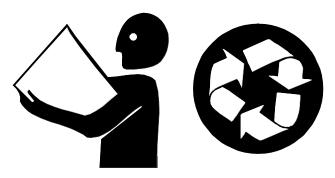

Direct exposure to hazardous chemicals can cause serious injury. Potentially hazardous chemicals used with John Deere equipment include such items as lubricants, coolants, paints, and adhesives.

A Material Safety Data Sheet (MSDS) provides specific details on chemical products: physical and health hazards, safety procedures, and emergency response techniques. Check the MSDS before you start any job using a hazardous chemical. That way you will know exactly what the risks are and how to do the job safely. Then follow procedures and recommended equipment.

#### **Dispose of Waste Properly**



Improperly disposing of waste can threaten the environment and ecology. Potentially harmful waste used with John Deere equipment include such items as oil, fuel, coolant, brake fluid, filters, and batteries. Use leakproof containers when draining fluids. Do not use food or beverage containers that may mislead someone into drinking from them. Do not pour waste onto the ground, down a drain, or into any water source. Inquire on the proper way to recycle or dispose of waste from your local environmental or recycling center, or from your John Deere dealer.

#### LIVE WITH SAFETY



Before returning machine to customer, make sure machine is functioning properly, especially the safety systems. Install all guards and shields.

5/2/95 1 - 5



**1 - 6** 5/2/95

### **CONTENTS**



SPECIFICATIONS AND INFORMATION
7, 8, 8A, 10, & 10A BACKHOES
HYDRAULIC SYSTEM REQUIREMENTS AND SPECIFICATIONS
BACKHOE HYDRAULIC SPECIFICATIONS
INTERNAL VALVE LEAKAGE
LIFT CYLINDER DROP RATE4
STABILIZER CYLINDER DROP RATE
STABILIZER CYLINDER RETRACT RATE
7 BACKHOE FUNCTION TIMES
8 AND 8A BACKHOE FUNCTION TIMES—TRACTORS
8 AND 8A BACKHOE FUNCTION TIMES—SKID-STEER LOADERS
10 AND 10A BACKHOE FUNCTION TIMES
LOADERS
CAPACITY—44 Loader, 316, 318, 330, 420 and 430 Tractor
CAPACITY—40 Loader, 415, 425, 445 and 455 Tractor
(Two-Wheel Steer)
CAPACITY—60 Loader, 650, and 655 Tractor
CAPACITY—60 Loader, 670 Tractor
CAPACITY—70, Loader, 750 Tractor
CAPACITY—70, 70A Loader, 755, 770 and 855 Tractor
CAPACITY—70A Loader, 955 Tractor
DIMENSIONS—40 Loader, 415, 425, 445, 455
(Two-Wheel Steer)
DIMENSIONS—44 LOADER
DIMENSIONS—60, 70, 70A
CYCLE TIMES
BUCKET STRUCK CAPACITY1
INTERNAL VALVE LEAKAGE
LIFT CYLINDER DROP RATE1
BUCKET CYLINDER DROP RATE
FITTINGS 12
SERVICE RECOMMENDATIONS FOR O-RING BOSS FITTINGS12
SERVICE RECOMMENDATIONS FOR FLAT FACE O-RING SEAL FITTINGS 13
FLAT FACE O-RING SEAL FITTING TORQUE13
UNIFIED INCH TORQUE VALUES 14
METRIC TORQUE VALUES
LUBRICANTS
GREASE
ANTI-CHATTER TRANSMISSION/HYDRAULIC OIL
ALTERNATIVE LUBRICANTS16
LUBRICANT STORAGE16

5/3/95 **2 - 1** 

Page



**2 - 2** 5/3/95

# **BUY NOW**

Then Instant Download the Complete Manual Thank you very much!