

S2048, S2348 and S2554
SCOTTS YARD AND GARDEN TRACTORS



TECHNICAL MANUAL

TM1777 (24Feb00)
Replaces TM1777 (10Mar99)

Safety



Specifications and Information



Engine – 20, 23 & 25 HP



Electrical System



Hydrostatic Power Train



Steering



Brakes



Attachments



Miscellaneous





RECOGNIZE SAFETY INFORMATION



This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe servicing practices.

Understand Signal Words

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.


REPLACE SAFETY SIGNS



Replace missing or damaged safety signs. See the machine operator's manual for correct safety sign placement.

HANDLE FLUIDS SAFELY-AVOID FIRES

Be Prepared For Emergencies

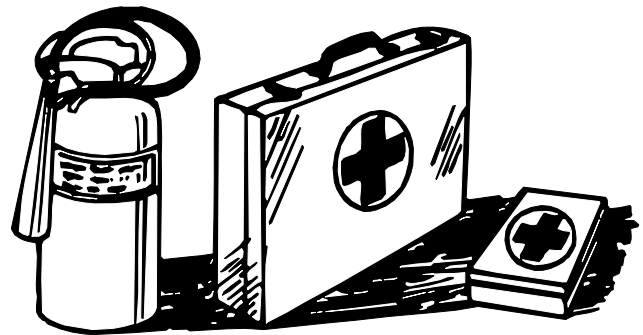

When you work around fuel, do not smoke or work near heaters or other fire hazards.

Store flammable fluids away from fire hazards. Do not incinerate or puncture pressurized containers.

Make sure machine is clean of trash, grease, and debris.


Do not store oily rags; they can ignite and burn spontaneously.

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

USE CARE IN HANDLING AND SERVICING BATTERIES

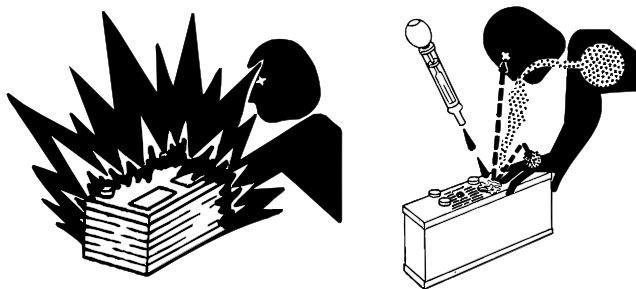

Prevent Battery Explosions


- Keep sparks, lighted matches, and open flame away from the top of battery. Battery gas can explode.
- Never check battery charge by placing a metal object across the posts. Use a volt-meter or hydrometer.
- Do not charge a frozen battery; it may explode. Warm battery to 16°C (60°F).

Prevent Acid Burns

- Sulfuric acid in battery electrolyte is poisonous. It is strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.
- **Avoid acid burns by:**
 1. Filling batteries in a well-ventilated area.
 2. Wearing eye protection and rubber gloves.
 3. Avoiding breathing fumes when electrolyte is added.
 4. Avoiding spilling or dripping electrolyte.
 5. Use proper jump start procedure.
- **If you spill acid on yourself:**
 1. Flush your skin with water.
 2. Apply baking soda or lime to help neutralize the acid.
 3. Flush your eyes with water for 10_15 minutes.
 4. Get medical attention immediately.
- **If acid is swallowed:**
 1. Drink large amounts of water or milk.
 2. Then drink milk of magnesia, beaten eggs, or vegetable oil.
 3. Get medical attention immediately.

USE SAFE SERVICE PROCEDURES

Wear Protective Clothing

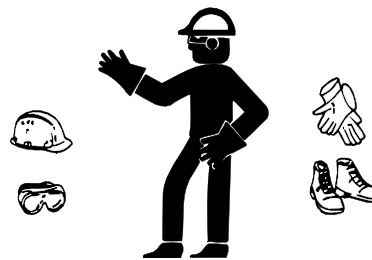


Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing. Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

Service Machines Safely

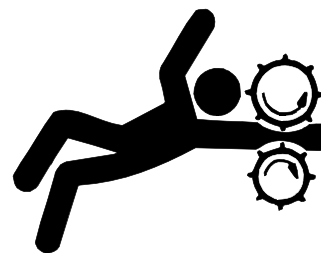

Tie long hair behind your head. Do not wear a necktie, scarf, loose clothing, or necklace when you work near machine tools or moving parts. If these items were to get caught, severe injury could result.


Remove rings and other jewelry to prevent electrical shorts and entanglement in moving parts.

Use Proper Tools

Use tools appropriate to the work. Makeshift tools and procedures can create safety hazards. Use power tools only to loosen threaded parts and fasteners. For loosening and tightening hardware, use the correct size tools. **DO NOT** use U.S. measurement tools on metric fasteners. Avoid bodily injury caused by slipping wrenches. Use only service parts meeting John Deere specifications.




Park Machine Safely

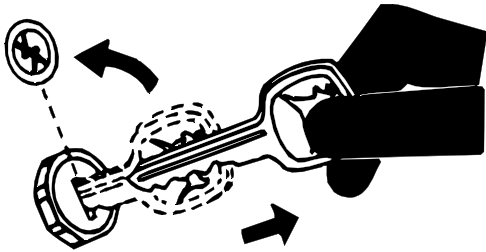

Before working on the machine:

1. Lower all equipment to the ground.
2. Stop the engine and remove the key.
3. Disconnect the battery ground strap.
4. Hang a "DO NOT OPERATE" tag in operator station.

Support Machine Properly And Use Proper Lifting Equipment

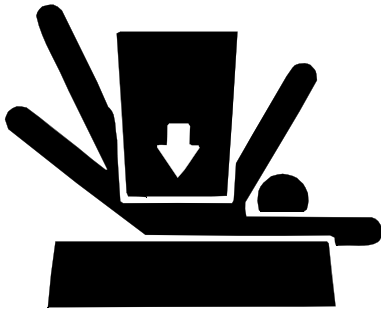

If you must work on a lifted machine or attachment, securely support the machine or attachment.

Do not support the machine on cinder blocks, hollow tiles, or props that may crumble under continuous load. Do not work under a machine that is supported solely by a jack. Follow recommended procedures in this manual.

Lifting heavy components incorrectly can cause severe injury or machine damage. Follow recommended procedure for removal and installation of components in the manual.

Work In Clean Area

Before starting a job:

1. Clean work area and machine.
2. Make sure you have all necessary tools to do your job.
3. Have the right parts on hand.
4. Read all instructions thoroughly; do not attempt shortcuts.


Using High Pressure Washers

Directing pressurized water at electronic/electrical components or connectors, bearings, hydraulic seals, fuel injection pumps or other sensitive parts and components may cause product malfunctions. Reduce pressure and spray at a 45 to 90 degree angle.

Illuminate Work Area Safely

Illuminate your work area adequately but safely. Use a portable safety light for working inside or under the machine. Make sure the bulb is enclosed by a wire cage. The hot filament of an accidentally broken bulb can ignite spilled fuel or oil.

Work In Ventilated Area

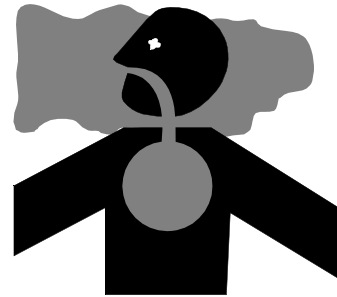

Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove the exhaust fumes from the area with an exhaust pipe extension.

If you do not have an exhaust pipe extension, open the doors and get outside air into the area.

WARNING: California Proposition 65

Warning:

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

Gasoline engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.

Remove Paint Before Welding Or Heating

Avoid potentially toxic fumes and dust. Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch. Do all work outside or in a well ventilated area. Dispose of paint and solvent properly. Remove paint before welding or heating: If you sand or grind paint, avoid breathing the dust. Wear an approved respirator. If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

Avoid Harmful Asbestos Dust

Avoid breathing dust that may be generated when handling components containing asbestos fibers. Inhaled asbestos fibers may cause lung cancer.

Components in products that may contain asbestos fibers are brake pads, brake band and lining assemblies, clutch plates, and some gaskets. The asbestos used in these components is usually found in a resin or sealed in some way. Normal handling is not hazardous as long as airborne dust containing asbestos is not generated.

Avoid creating dust. Never use compressed air for cleaning. Avoid brushing or grinding material containing asbestos. When servicing, wear an approved respirator. A special vacuum cleaner is recommended to clean asbestos. If not available, apply a mist of oil or water on the material containing asbestos. Keep bystanders away from the area.

SERVICE TIRES SAFELY




Explosive separation of a tire and rim parts can cause serious injury or death.

Do not attempt to mount a tire unless you have the proper equipment and experience to perform the job. Always maintain the correct tire pressure. Do not inflate the tires above the recommended pressure. Never weld or heat a wheel and tire assembly. The heat can cause an increase in air pressure resulting in a tire explosion. Welding can structurally weaken or deform the wheel.

When inflating tires, use a clip-on chuck and extension hose long enough to allow you to stand to one side and NOT in front of or over the tire assembly. Use a safety cage if available.


Check wheels for low pressure, cuts, bubbles, damaged rims or missing lug bolts and nuts.

AVOID INJURY FROM ROTATING BLADES, AUGERS AND PTO SHAFTS

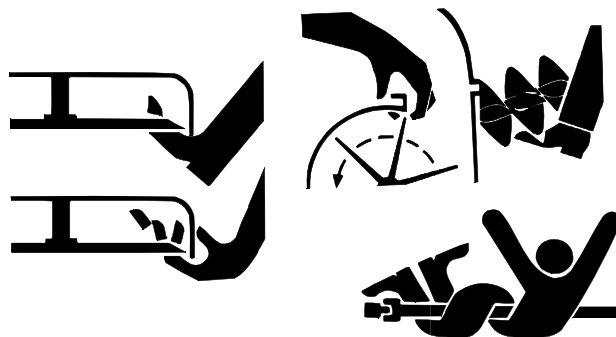

Keep hands and feet away while machine is running. Shut off power to service, lubricate or remove mower blades, augers or PTO shafts.

HANDLE CHEMICAL PRODUCTS SAFELY

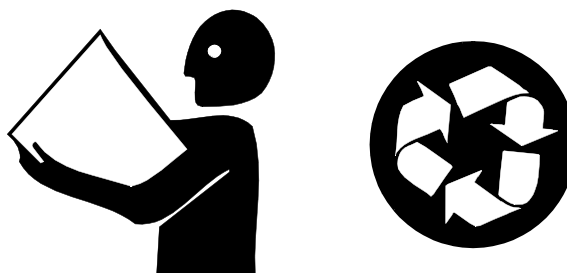

Direct exposure to hazardous chemicals can cause serious injury. Potentially hazardous chemicals used with John Deere equipment include such items as lubricants, coolants, paints, and adhesives.

A Material Safety Data Sheet (MSDS) provides specific details on chemical products: physical and health hazards, safety procedures, and emergency response techniques. Check the MSDS before you start any job using a hazardous chemical. That way you will know exactly what the risks are and how to do the job safely. Then follow procedures and recommended equipment.

Dispose of Waste Properly

Improperly disposing of waste can threaten the environment and ecology. Potentially harmful waste used with John Deere equipment include such items as oil, fuel, coolant, brake fluid, filters, and batteries. Use leakproof containers when draining fluids. Do not use food or beverage containers that may mislead someone into drinking from them. Do not pour waste onto the ground, down a drain, or into any water source. Inquire on the proper way to recycle or dispose of waste from your local environmental or recycling center, or from your John Deere dealer.



LIVE WITH SAFETY



Before returning machine to customer, make sure machine is functioning properly, especially the safety systems. Install all guards and shields.

CONTENTS

	Page
SPECIFICATIONS	3
INCH TORQUE VALUES	6
METRIC TORQUE VALUES	7
GASOLINE SPECIFICATIONS	8
GASOLINE STORAGE	8
LUBRICANT SPECIFICATIONS	8
ENGINE OIL	8
ENGINE BREAK-IN OIL	8
HYDROSTATIC TRANSMISSION OIL.....	9
GREASE	9
ALTERNATIVE LUBRICANTS.....	9
SYNTHETIC LUBRICANTS.....	10
OIL FILTERS	10
LUBRICANT STORAGE	10
SERIAL NUMBER LOCATIONS	10
TRACTOR IDENTIFICATION NUMBER	10
ENGINE SERIAL NUMBER.....	10
HYDROSTATIC TRANSMISSION SERIAL NUMBER.....	10





SPECIFICATIONS

ENGINE (2048)

Engine	Kohler
Model Number	CV20S
Horsepower	14.9 kW (20 hp)
Displacement	624 cm ³ (38.1 cu.in.)
Oil Capacity	
w/o oil filter	1.65 L (1.7 qt.)
w/ oil filter	2.0 L (2.1 qt.)
Cylinders	2
Stroke/Cycle	4
Valves	Overhead Valves
Lubrication	Fully Pressurized
Oil Filter	Single Element, Full Flow, Spin-On Filter
Cooling System	Air Cooled
Air Cleaner	Dual Stage
Muffler	Horizontal Discharge Below Frame

ENGINE (2348)

Model Number	CV23S
Horsepower	17.15 kW (23 hp)
Displacement	674 cm ³ (41.1 cu.in.)
Bore	80 mm (3.15 in.)
Stroke	67 mm (2.64 in.)
Oil Capacity	
w/o oil filter	1.65 L (1.7 qt.)
w/ oil filter	2.0 L (2.1 qt.)
Cylinders	2
Stroke/Cycle	4
Valves	Overhead Valves
Lubrication	Fully Pressurized
Oil Filter	Single Element, Full Flow, Spin-On Filter
Cooling System	Air Cooled
Air Cleaner	Dual Stage
Muffler	Horizontal Discharge Below Frame

ENGINE (2554)

Engine	Kohler
Model Number	CV25S
Horsepower	18.6 kW (25 hp)
Displacement	725 cm ³ (44.0 cu.in.)
Oil Capacity	
w/o oil filter	1.65 L (1.7 qt.)
w/ oil filter	2.0 L (2.1 qt.)
Cylinders	2
Stroke/Cycle	4
Valves	Overhead Valves
Lubrication	Fully Pressurized
Oil Filter	Single Element, Full Flow, Spin-On Filter
Cooling System	Air Cooled
Air Cleaner	Dual Stage
Muffler	Horizontal Discharge Below Frame





FUEL SYSTEM

Aspiration Natural
 Fuel Tank Location Rear
 Fuel Tank Capacity 11 L (3 U.S. gal)
 Fuel (minimum octane) Unleaded Gasoline, 87 Octane
 Fuel Delivery Float-Type Side Draft Carburetor
 Fuel Filter Replaceable In-Line

ELECTRICAL

Ignition. Electronic Capacitor Discharge Ignition (CDI)
 Type of Starter. Solenoid Shift
 Charging System. Flywheel Alternator
 Battery Type BCI Group, U1
 Battery Voltage 12 V
 Battery Reserve Capacity at 25 Amp 38 minutes
 Battery Cold Cranking Amps at -18°C (0°F) 295 amps

TRANSAXLE (HYDROSTATIC)

Drive Train Belt Drive Transaxle with foot-controlled variable speed drive
 Transaxle (S2048 and S2348). Tuff-Torq Model K-62C
 Transaxle (S554) Tuff-Torq Model K-66C

PTO DRIVE

Type. V-Belt
 Clutch Type Engine-Mounted, Electric
 Control. Switch on dash

IMPLEMENT LIFT

Lift System Manual with Lift-Assist Spring
 Lift Lever Location Left-hand side of hood

DIMENSIONS-MODEL NUMBER S2048

Overall Height 114.0 cm (44.9 in.)
 Overall Length. 182.9 cm (72 in.)
 Vehicle Weight. 259 kg (570 lb.)

DIMENSIONS-MODEL NUMBER S2348

Overall Height 114.0 cm (44.9 in.)
 Overall Length. 182.9 cm (72 in.)
 Vehicle Weight. 259 kg (570 lb.)

DIMENSIONS-MODEL NUMBER S2554

Overall Height 115.7 cm (45.6 in.)
 Overall Length. 183.6 cm (72.3 in.)
 Vehicle Weight. 275 kg (606 lb.)

TIRES

Model Number 2048	
Size Front	16 X 6.50
Size Rear	23 X 10.50
Model Number 2348	
Size Front	16 X 6.50
Size Rear	23 X 10.50
Model Number 2554	
Size Front	16 X 7.50
Size Rear	24 X 12



MOWER DECK (48-INCH)

Blades	3
Cutting Height-Approx.	25–102 mm (1–4 in.)
Blade Length	423 mm (16.6 in.)
Cutting Width	1219 mm (48 in.)

MOWER DECK (54-INCH)

Blades	3
Cutting Height-Approx.	25–102 mm (1–4 in.)
Blade Length	474 mm (18.7 in.)
Cutting Width	1372 mm (54 in.)

 










STEERING

Type	Manual—Pinion/Sector
Axle Pivot Hub	Shim Adjustable
Lubrication	Multipurpose Grease
Lubrication Interval	10 hrs (Maximum)
Toe-In	6 mm (0.24 in.) — Non-Adjustable
Turning Radius	584 mm (23 in.)

 PTO DRIVE

Type	V-Belt
Clutch Type	Manual Belt Tensioning
Control Location	Lever on dash

INCH TORQUE VALUES

SAE Grade and Head Markings	1 or 2 ^b No Marks 	5  5.1  5.2 	8  8.2 
	2 No Marks 	5  	8  

Size	Grade 1				Grade 2 ^b				Grade 5, 5.1 or 5.2				Grade 8 or 8.2			
	Lubricated ^a		Dry ^a		Lubricated ^a		Dry ^a		Lubricated ^a		Dry ^a		Lubricated ^a		Dry ^a	
	Nm	lb-ft	Nm	lb-ft	Nm	lb-ft	Nm	lb-ft	Nm	lb-ft	Nm	lb-ft	Nm	lb-ft	Nm	lb-ft
1/4	3.8	2.8	4.7	3.5	6	4.4	7.5	5.5	9.5	7	12	9	13.5	10	17	12.5
5/16	7.7	5.7	9.8	7.2	12	9	15.5	11.5	19.5	14.5	25	18.5	28	20.5	35	26
3/8	13.5	10	17.5	13	22	16	27.5	20	35	26	44	32.5	49	36	63	46
7/16	22	16	28	20.5	35	26	44	32.5	56	41	70	52	80	59	100	74
1/2	34	25	42	31	53	39	67	49	85	63	110	80	120	88	155	115
9/16	48	35.5	60	45	76	56	95	70	125	92	155	115	175	130	220	165
5/8	67	49	85	63	105	77	135	100	170	125	215	160	240	175	305	225
3/4	120	88	150	110	190	140	240	175	300	220	380	280	425	315	540	400
7/8	190	140	240	175	190	140	240	175	490	360	615	455	690	510	870	640
1	285	210	360	265	285	210	360	265	730	540	920	680	1030	760	1300	960
1-1/8	400	300	510	375	400	300	510	375	910	670	1150	850	1450	1075	1850	1350
1-1/4	570	420	725	535	570	420	725	535	1280	945	1630	1200	2050	1500	2600	1920
1-3/8	750	550	950	700	750	550	950	700	1700	1250	2140	1580	2700	2000	3400	2500
1-1/2	990	730	1250	930	990	730	1250	930	2250	1650	2850	2100	3600	2650	4550	3350

DO NOT use these values if a different torque value or tightening procedure is given for a specific application. Torque values listed are for general use only. Check tightness of fasteners periodically.

Shear bolts are designed to fail under predetermined loads. Always replace shear bolts with identical grade.

Fasteners should be replaced with the same or higher grade. If higher grade fasteners are used, these should only be tightened to the strength of the original.

Make sure fasteners threads are clean and that you properly start thread engagement. This will prevent them from failing when tightening.

Tighten plastic insert or crimped steel-type lock nuts to approximately 50 percent of the dry torque shown in the chart, applied to the nut, not to the bolt head.

Tighten toothed or serrated-type lock nuts to the full torque value.

^a "Lubricated" means coated with a lubricant such as engine oil, or fasteners with phosphate and oil coatings.

"Dry" means plain or zinc plated without any lubrication.

^b Grade 2 applies for hex cap screws (not hex bolts) up to 152 mm (6 in.) long. Grade 1 applies for hex cap screws over 152 mm (6 in.) long, and for all other types of bolts and screws of any length.

METRIC TORQUE VALUES

Property Class and Head Markings	4.8	8.8	9.8	10.9	12.9
Property Class and Nut Markings	5	10	10	12	

Size	Class 4.8				Class 8.8 or 9.8				Class 10.9				Class 12.9			
	Lubricated ^a		Dry ^a		Lubricated ^a		Dry ^a		Lubricated ^a		Dry ^a		Lubricated ^a		Dry ^a	
	Nm	lb-ft	Nm	lb-ft	Nm	lb-ft	Nm	lb-ft	Nm	lb-ft	Nm	lb-ft	Nm	lb-ft	Nm	lb-ft
M6	4.7	3.5	6	4.4	9	6.6	11.5	8.5	13	9.5	16.5	12.5	15.5	11.5	19.5	14.5
M8	11.5	8.5	14.5	10.7	22	16	28	20.5	32	23.5	40	29.5	37	27.5	47	35
M10	23	17	29	21	43	32	55	40	63	46	80	59	75	55	95	70
M12	40	29.5	50	37	75	55	95	70	110	80	140	105	130	95	165	120
M14	63	46	80	59	120	88	150	110	175	130	220	165	205	150	260	190
M16	100	74	125	92	190	140	240	175	275	200	350	225	320	235	400	300
M18	135	100	175	125	265	195	330	245	375	275	475	350	440	325	560	410
M20	190	140	245	180	375	275	475	350	530	390	675	500	625	460	790	580
M22	265	195	330	245	510	375	650	480	725	535	920	680	850	625	108	800
M24	330	245	425	315	650	480	820	600	920	680	115	850	108	800	135	100
M27	490	360	625	460	950	700	1200	885	1350	1000	1700	1250	1580	1160	200	1500
M30	660	490	850	625	1290	950	1630	1200	1850	1350	2300	1700	2140	1700	2700	2000
M33	900	665	1150	850	1750	1300	2200	1625	2500	1850	3150	2325	2900	2150	3700	2730
M36	1150	850	1450	1075	2250	1650	2850	2100	3200	2350	4050	3000	3750	2770	4750	3500

DO NOT use these values if a different torque value or tightening procedure is given for a specific application. Torque values listed are for general use only. Check tightness of fasteners periodically.

Shear bolts are designed to fail under predetermined loads. Always replace shear bolts with identical property class.

Fasteners should be replaced with the same or higher property class. If higher property class fasteners are used, these should only be tightened to the strength of the original.

Make sure fasteners threads are clean and that you properly start thread engagement. This will prevent them from failing when tightening.

Tighten plastic insert or crimped steel-type lock nuts to

approximately 50 percent of the dry torque shown in the chart, applied to the nut, not to the bolt head. Tighten toothed or serrated-type lock nuts to the full torque value.

^a "Lubricated" means coated with a lubricant such as engine oil, or fasteners with phosphate and oil coatings.

"Dry" means plain or zinc plated without any lubrication.

GASOLINE SPECIFICATIONS

**CAUTION**

Handle fuel with care, it is highly flammable. **DO NOT** refuel machine:

- Indoors. Always fill fuel tank outdoors.
- While you smoke.
- When machine is near and open flame or sparks.
- When engine is running. **STOP** engine.
- When engine is hot. Allow it to cool.

Help prevent fires:

- Fill fuel tank only to bottom of filler neck.
- Clean oil, grease and dirt from machine.
- Clean up spilled fuel immediately.
- Do not store machine with fuel in tank in a building where fumes may reach an open flame or spark.

To prevent fire and explosion caused by static electric discharge while you fill tank:

- Use approved, non-metal fuel container.
- When using a funnel, **MAKE SURE** it is **PLASTIC**.
- Avoid using a funnel which has a metal screen or filter.

IMPORTANT: To avoid engine damage:

- DO NOT mix oil with gasoline
- Use only clean oil and fuel
- Use clean approved containers and funnels.
- Store oil and fuel in an area protected from dust, moisture and other contamination.

Unleaded fuel is recommended because it burns cleaner and leaves less unburned deposits in engine combustion chamber. Regular unleaded gasoline with an anti-knock index of 85 octane or higher may be used. Use of gasohol is acceptable as long as the ethyl alcohol blend does not exceed 11 percent. Do not use gasoline that contains Methanol.

Fill fuel tank at end of each day's operation. Fill only to bottom of filler neck.

GASOLINE STORAGE

Keep fuel in a clean container in a protected area. Do not use deicers to remove water from fuel. Do not depend on fuel filters to remove water.

If possible, install a water separator at the storage tank outlet.

IMPORTANT: Keep all dirt, scale, water or other foreign material out of fuel.

If mower is stored for the winter, add gasoline storage stabilizer to the fuel. Follow directions on can.


LUBRICANT SPECIFICATIONS

ENGINE OIL

Use oil viscosity based on the expected air temperature range during the period between oil changes.

The following oil is preferred:

- 10W30

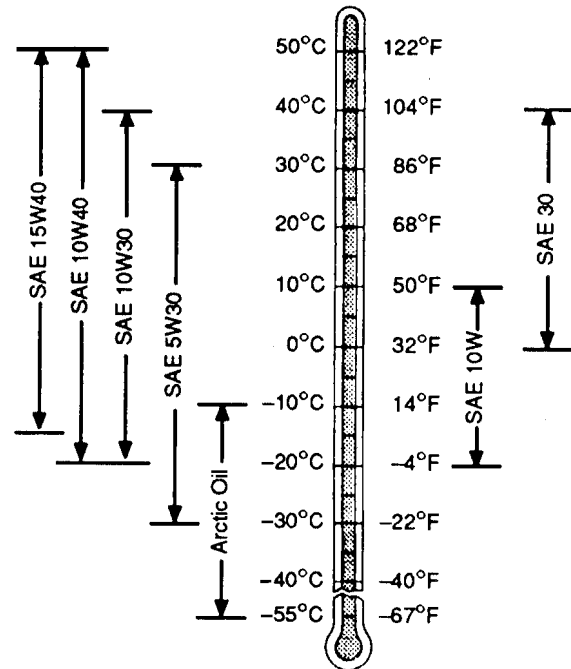

Other oils may be used if they meet one of the following:

- API Service Classification SG
- API Service Classification SF
- CCMC Specification G4

Oils meeting Military Specification MIL-L-46167B may be used as arctic oils.

ENGINE BREAK-IN OIL

IMPORTANT: ONLY use a quality break-in oil in rebuilt or remanufactured engines for the **first 5 hours (maximum) of operation**. **DO NOT** use oils with heavier viscosity weights than SAE 5W-30 or oils meeting specifications API SG, SH; or oils meeting CCMC Specification G5. These oils will not allow rebuilt or remanufactured engines to break-in properly.

HYDROSTATIC TRANSMISSION OIL

Use the appropriate oil viscosity based on these air temperature ranges. Operating outside of these recommended oil air temperature ranges may cause premature hydrostatic transmission failure.


IMPORTANT: ONLY use a quality SAE 5W-30 (2048) or 5W-50 SYNTHETIC (2554) engine oil in this transmission. Mixing of two viscosity grade oils is NOT RECOMMENDED. DO NOT use BIO-HY-GARD® in this transmission.

The following oil is **RECOMMENDED**:

- S2048 use 5W-30 or 10W-30
- S2554 use 5W-50 SYNTHETIC

Use only oils that meet the following specifications:

- API Service Classifications SG or higher.
- CCMC Specifications G4 or higher.

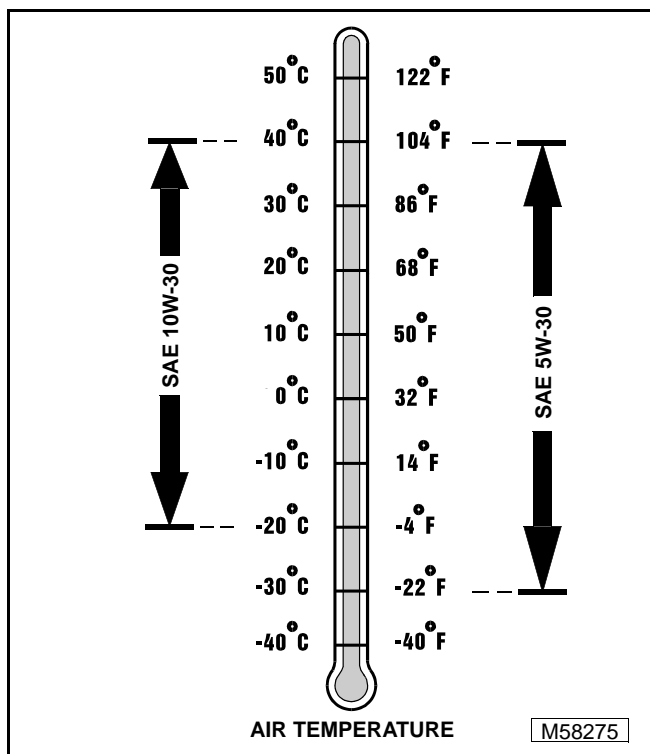

John Deere Dealers: You may want to cross-reference the following publications to recommend the proper oil for your customers:


- Module DX, ENOIL2 in JDS-G135;
- Section 530, Lubricants & Hydraulics, of the John Deere Merchandise Sales Guide;
- Lubrication Sales Manual PI7032.

GREASE

Use grease based on the expected air temperature range during the service interval.

The following greases are preferred:

- MOLY HIGH TEMPERATURE EP GREASE
- HIGH TEMPERATURE EP GREASE
- MULTI-PURPOSE GREASE

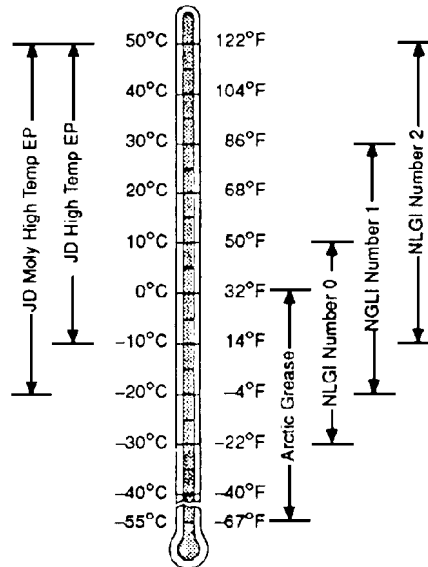

Other greases may be used if they meet one of the following:

- SAE Multipurpose EP Grease with a maximum of 5% molybdenum disulfide.
- SAE Multipurpose EP Grease

Greases meeting Military Specification MIL-G-10924F may be used as arctic grease.

ALTERNATIVE LUBRICANTS

Conditions in certain geographical areas outside the United States and Canada may require different lubricant recommendations than these printed in this manual or the operator's manual. Consult with your John Deere Dealer, or Sales Branch to obtain the alternative lubricant recommendations.

SYNTHETIC LUBRICANTS

Synthetic lubricants may be used in equipment if they meet the applicable performance requirements (industry classification and/or military specification) as shown in this group.



The recommended temperature limits and service or oil change intervals should be maintained as shown in the operator's manual.

Avoid mixing different brands, grades, or types of oil. Oil manufacturers blend additive in their oils to meet certain specifications and performance requirements. Mixing different oils can interfere with the proper functioning of these additives and degrade lubricant performance.

OIL FILTERS

Filtration of oils is critical to proper lubrication. Always change filters regularly.

Use filters meeting John Deere performance specification.

LUBRICANT STORAGE

This machine can operate at top efficiency only if clean lubricants are used.


Use clean containers to handle all lubricants. Store them in an area protected from dust, moisture, and other contamination. Store drums on their sides.

SERIAL NUMBER LOCATIONS



When working on machines or components that are covered by warranty, it is **IMPORTANT** that you include the tractor identification number and the component serial numbers on the warranty claim form.

The location of tractor identification number and component serial numbers are shown below.


TRACTOR IDENTIFICATION NUMBER

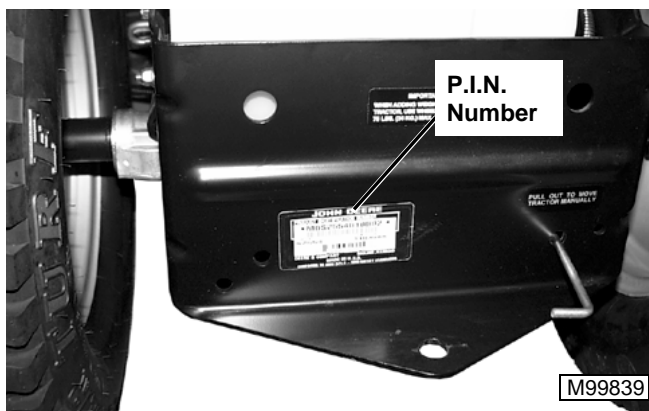

ENGINE SERIAL NUMBER

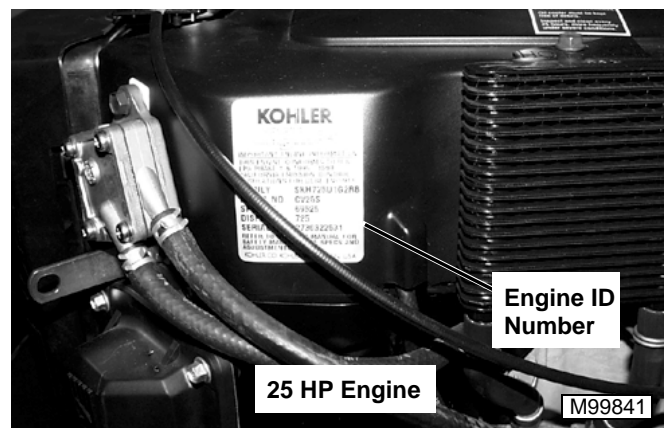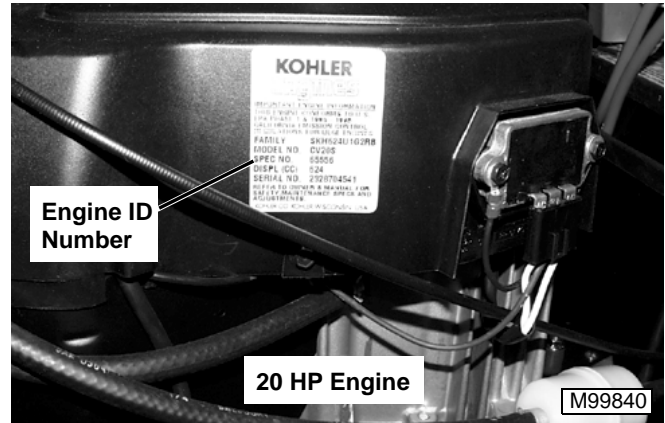

HYDROSTATIC TRANSMISSION SERIAL NUMBER

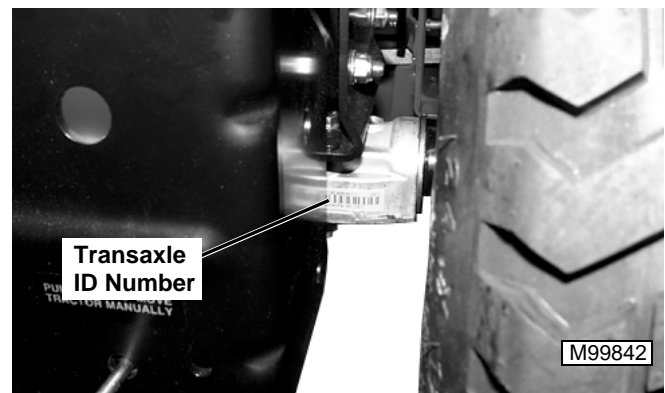

CONTENTS

	Page
SPECIFICATIONS	3
GENERAL SPECIFICATIONS	3
TEST & ADJUSTMENT SPECIFICATIONS	4
REPAIR SPECIFICATIONS	4
TORQUE SPECIFICATIONS	7
THEORY OF OPERATION	8
GENERAL	8
COOLING SYSTEM	8
CRANKCASE BREATHER SYSTEM	8
LUBRICATION SYSTEM	8
FUEL SYSTEM	8
CARBURETOR	8
AIR INTAKE SYSTEM OPERATION	8
GOVERNOR OPERATION	8
IGNITION	9
ENGINE TROUBLESHOOTING CHART	10
CARBURETOR TROUBLESHOOTING CHART	11
ENGINE TROUBLESHOOTING GUIDE	12
ENGINE HARD TO START	12
ENGINE MALFUNCTIONS AT LOW SPEED	13
ENGINE RUNS ERRATICALLY	14
OIL CONSUMPTION IS EXCESSIVE	14
ENGINE HAS LOW POWER	15
FUEL CONSUMPTION IS EXCESSIVE	15
IGNITION SYSTEM	15
TESTS AND ADJUSTMENTS	16
GOVERNOR ADJUSTMENT	16
CHOKE ADJUSTMENT	17
FAST IDLE SPEED ADJUSTMENT	18
SLOW IDLE SPEED ADJUSTMENT	19
CYLINDER COMPRESSION PRESSURE TEST	19
FUEL SHUTOFF SOLENOID TEST	21
CRANKCASE VACUUM TEST	21
ENGINE OIL PRESSURE TEST	23
FUEL PUMP TEST	24
SPARK TEST	24
SPARK PLUG GAP ADJUSTMENT	25
IGNITION MODULE AIR GAP ADJUSTMENT	26
FLYWHEEL MAGNETS TESTS	26
SPARK ADVANCE MODULE (SAM) TEST (25 HP)	27
REPAIR	28
ENGINE REMOVAL	28
ENGINE INSTALLATION	29
AIR CLEANER REMOVAL	30





	Page
FUEL PUMP, REMOVAL AND INSTALLATION	31
CARBURETOR REMOVAL AND INSTALLATION	31
ROCKER ARMS REMOVAL AND INSTALLATION	32
HYDRAULIC VALVE LIFTERS INSPECTION	33
STARTING MOTOR REMOVAL AND INSTALLATION	34
STARTING MOTOR REMOVAL AND INSTALLATION (CV25S).	34
CYLINDER HEAD REMOVAL AND INSTALLATION	35
VALVES AND SPRINGS REMOVAL AND INSTALLATION	37
VALVE SPRING INSPECTION.	38
VALVE INSPECTION	38
VALVE GUIDES INSPECTION.	39
CYLINDER HEAD INSPECTION	39
RECONDITION VALVE SEATS	39
LAP VALVES.	40
PUSH ROD INSPECTION	40
CRANKCASE REED VALVE INSPECTION	40
FLYWHEEL REMOVAL AND INSTALLATION	41
STATOR REMOVAL AND INSTALLATION	42
CAMSHAFT REMOVAL AND INSTALLATION	42
CAMSHAFT INSPECTION.	43
CAMSHAFT END PLAY	44
GOVERNOR REMOVAL AND INSTALLATION	44
GOVERNOR CONTROL ARM REMOVAL AND INSTALLATION.	45
PISTON REMOVAL	45
PISTON DISASSEMBLE	46
PISTON PIN INSPECTION	46
PISTON INSPECTION	46
PISTON RING END GAP	47
PISTON RING SIDE CLEARANCE	47
PISTON TO BORE MEASUREMENT	47
CRANKSHAFT MEASUREMENT	48
PISTON ASSEMBLY	49
PISTON INSTALLATION.	50
OIL PAN REMOVAL AND INSTALLATION	51
OIL PAN CRANKSHAFT SEAL REMOVAL AND INSTALLATION	52
CRANKSHAFT OIL SEAL REMOVAL AND INSTALLATION	52
OIL PRESSURE SWITCH, REPLACE	52
OIL PUMP REMOVAL AND INSTALLATION	53
BLOCK INSPECTION	53
CYLINDER BORE DEGLAZE	54

SPECIFICATIONS

GENERAL SPECIFICATIONS

Engine (S2048)

Model Number	CV20S
Horsepower	14.9 kW (20 hp)
Displacement	624 cm ³ (38.1 cu in.)
Bore	77 mm (3.03 in.)
Stroke	67 mm (2.64 in.)
Compression Ratio	8.2:1
Oil Capacity	
w/o oil filter	1.65 L (1.7 qt.)
w/ oil filter	1.9 L (2.0 qt.)

Engine (S2348)

Model Number	CV23S
Horsepower	17.15 kW (23 hp)
Displacement	674 cm ³ (41.1 cu in.)
Bore	80 mm (3.15 in.)
Stroke	67 mm (2.64 in.)
Compression Ratio	8.2:1
Oil Capacity	
w/o oil filter	1.65 L (1.7 qt.)
w/ oil filter	1.9 L (2.0 qt.)

Engine (S2554)

Model	CV25S
Horsepower	18.4 kW (25 hp)
Displacement	725 cm ³ (44.0 cu in.)
Bore	83 mm (3.27 in.)
Stroke	67 mm (2.64 in.)
Compression Ratio	9.0:1
Oil Capacity	
w/o oil filter	1.65 L (1.7 qt.)
w/ oil filter	2.0 L (2.1 qt.)

All Engines¹

Oil Filter	Single Element, Full Flow, Spin-On Filter
Cylinders	2
Stroke/Cycle	4
Valves	Overhead Valves
Lubrication	Fully Pressurized
Cooling System	Air Cooled
Air Cleaner	Dual Stage

1. NOTE: Specifications are for all engines unless otherwise noted.



BUY NOW

**Then Instant Download
the Complete Manual
Thank you very much!**