



135 Draper Platform



JOHN DEERE

 
TECHNICAL MANUAL

135
Draper Platform

TM1280 (01JUL82) English

Ottumwa Works
TM1280 (01JUL82)

LITHO IN U.S.A.
ENGLISH



135 DRAPER PLATFORM TECHNICAL MANUAL TM-1280 (JUL-82)

CONTENTS

SECTION 10 - GENERAL

- Group 05 - Safety
- Group 10 - Specifications and Torques
- Group 15 - Description
- Group 20 - Lubrication

SECTION 20 - POWER TRAIN

- Group 05 - Reel
- Group 10 - PTO Hookup
- Group 15 - Gear Case
- Group 20 - Right-Hand and Left-Hand
Cross Shaft
- Group 25 - Canvas
- Group 30 - 35 and 65 Conditioner

SECTION 30 - HYDRAULIC SYSTEM

- Group 05 - Diagnosis and Tests
- Group 10 - Control Valve
- Group 15 - Reel Drive Motor
- Group 20 - Reel Lift Cylinders
- Group 25 - Reel Drive Pump
- Group 30 - Reservoir

SECTION 40 - CUTTING COMPONENTS

- Group 05 - Knife Drive Case
- Group 10 - Cutterbars
- Group 15 - Knives

SECTION 50 - SPECIAL TOOLS

- Group 05 - Fabricated Tools
- Group 10 - Special Tools

COPYRIGHT© 1982
DEERE & COMPANY
Moline, Illinois
All rights reserved
A JOHN DEERE ILLUSTRATION

All information, illustrations and specifications contained in this technical manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

0A9; E05;0000 ZA 200882

Section 10 GENERAL

CONTENTS

| | Page | | Page |
|--|----------|---|----------|
| Introduction | 10-02 | GROUP 15 - DESCRIPTION | |
| Features of this Technical Manual | 10-02 | Platform with Mechanical Reel Drive ... | 10-15-01 |
| GROUP 05 - SAFETY | | GROUP 20 - LUBRICATION | |
| Safety Messages | 10-05-01 | Lubricate Platform Properly | 10-20-01 |
| GROUP 10 - SPECIFICATIONS AND TORQUES | | Choosing a Grease | 10-20-01 |
| Platform | 10-10-01 | Knife Drive Case | 10-20-02 |
| Hay Conditioner: | | Gear Case | 10-20-02 |
| 35 Conditioner | 10-10-02 | Use Approved Alternate Lubricants | 10-20-02 |
| 65 Conditioner | 10-10-02 | Store Lubricants Correctly | 10-20-03 |
| Torque Chart | 10-10-03 | Choosing Hydraulic Oil | 10-20-03 |
| | | Lubrication Services | 10-20-04 |

Contents

SAFETY MESSAGES



This safety alert symbol and the word **CAUTION** identify important safety messages in this manual and on the platform. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.

0A9; E05:1005 ZE 300682

IMPORTANT

The **IMPORTANT** message identifies potential problems which may cause consequential damage to the platform. Following the recommended procedure will instruct the technician how to avoid the problem.

0A9; E05:1005 ZF 300682

NOTES

The word *NOTE* is followed by a statement that identifies a qualification or exception to a previous statement. A "NOTE" may also identify nice-to-know information pertinent to, but not directly related to the previous statement.

0A9; E05:1005 ZG 140682

USE ADEQUATE SERVICE FACILITIES

Keep the service area clean and dry. Wet or oily floors are slippery. Wet spots can be dangerous when working with electrical equipment.

Make sure the service area is adequately vented.

Periodically check the shop exhaust system for leakage. Engine exhaust gas is dangerous.

Be sure all electrical outlets and tools are properly grounded.

Use adequate light for the job at hand.

Use lifting equipment and safety stands which have adequate strength for the job being performed.

Wear fairly tight clothing.

Know where the first aid kit and fire extinguishers are located, and know how to use them.

0A9; E05;1005 ZH 140682

PRACTICE SAFE MAINTENANCE

Before servicing or adjusting the platform or removing material from it always:

1. Disengage all drives.
2. Shut off windrower engine,
3. THEN WAIT until all moving parts have stopped rotating.

Do not leave windrower unattended with platform raised. Always lower it to the ground. When platform is raised for servicing, secure hydraulic stop on each side of the windrower.

Always engage both hydraulic cylinder stops on reel when working on platform with reel raised.

Keep hands, feet and clothing away from moving parts.


Never attempt to clear obstructions off the platform unless the windrower engine is shut off.

Replace any guards and shields removed for servicing.

0A9; E05;1005 ZI 300682

Safety

Wear safety equipment.

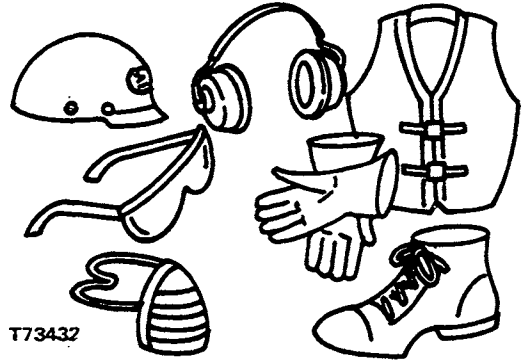


T73432

0A9:T73432 E05:1005 ZJ 150682

AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin, causing serious injury. Relieve pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure. Keep hands and body away from pinholes and nozzles which eject fluids under high pressure. Use a piece of cardboard or paper to search for leaks. Do not use your hand.

If ANY fluid is injected into the skin, it must be surgically removed within a few hours by a doctor familiar with this type injury or gangrene may result.

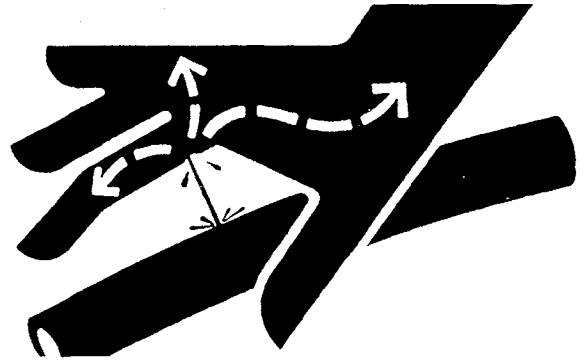

0A9:X9811 E05:1005 ZK 200882

BUY NOW

**Then Instant Download
the Complete Manual
Thank you very much!**