

John Deere 1500 Powr-Till Seeder



JOHN DEERE

TECHNICAL MANUAL John Deere 1500 Powr-Till Seeder

TM1152 (01MAR77) English

TM1152 (01MAR77)

LITHO IN U.S.A. (REVISED)
ENGLISH



1500 POWR-TILL SEEDER

Technical Manual

TM-1152 (Mar-77)

CONTENTS

	Page		Page
INTRODUCTION	2	CUTTER WHEEL UNITS	21
SAFETY AND YOU	3	General Information	21
GENERAL INFORMATION	4	Removing Line Shaft Assemblies	21
Description	4	Replacing Front Bearing	23
Lubrication	5	Replacing Front Sprocket	23
DIAGNOSING MALFUNCTIONS AND TESTING ..	6	Replacing Rear Shaft Components	24
Organizing the Diagnosis	6	Assembly	24
Diagnosing	6	END WHEEL DRIVE	25
POWERSHAFT	8	General Information	25
General Information	8	Axle and Axle Plate Disassembly	25
Removal and Installation	8	Installation	28
Disassembly	8	GRAIN MODEL DRIVES	28
Inspection and Repair	10	Drive Shaft Replacement	28
Assembly	11	Inner Bearing Replacement	30
GEAR CASE AND SLIP CLUTCH	11	Outer Bearing Replacement	30
General Information	11	Feed Shaft Bearing Replacement	31
Gear Case	11	Removing Grain Shifter	32
Removal	11	Grain Cups	32
Disassembly	13	GRASS BOX DRIVES	34
Inspection and Repair	15	Inner Bearing Replacement	34
Assembly	16	Drive Shaft Replacement	35
Installation	18	Outer Bearing Replacement	35
Slip Clutch	19	Grass Cups	36
Removal	19	SPECIFICATIONS	38
Disassembly	19		
Inspection	19		
Assembly	20		

All information, illustrations and specifications contained in this technical manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

Copyright © 1977
DEERE & COMPANY
Moline, Illinois
All rights reserved

BUY NOW

**Then Instant Download
the Complete Manual
Thank you very much!**