2600, 2700 and 2800 Semi-Integral; 3600 and 3700 Drawn Moldboard Plows






TECHNICAL MANUAL

2600, 2700 and 2800 Semi-Integral; 3600 and 3700 Drawn Moldboard Plows

TM1240 Issue K2 English

John Deere Harvester Works TM1240 Issue K2

LITHO IN U.S.A. ENGLISH

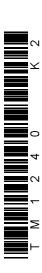

2600, 2700, AND 2800 SEMI-INTEGRAL; 3600 AND 3700 DRAWN MOLDBOARD PLOWS

TECHNICAL MANUAL TM-1240 (Nov-82)

CONTENTS

	Page
GENERAL INFORMATION Introduction Safety Serial Numbers Bolt Torque	
DIAGNOSING MALFUNCTIONS	5
HYDRAULIC REPAIR	<i>.</i> . €
Steering Control for 2600, 2700, and 2800 Plows	<i>. €</i>
Steering Cylinder (Tailwheel) for 2600, 2700 and 2800 Plows	
Lift Cylinder for 2600, 2700 and 2800 Plows	
Front Furrow Wheel Cylinder for 2700 and 2800 On-Land Plows	
Adjust-O-Cut Cylinder for 2800 Plow	
Pilot Valve for 3600 Plow	
Front Furrow Wheel Cylinder for 3600 Plow	
Optional Caster Tailwheel Cylinder for 3600 Plow	
Sequencing Valve for 3700 Plow	
Hitch Cylinder for 3700 Plow	
Furrow Wheel Cylinder for 3700 Plow	
Land Wheel Cylinder for 3700 Plow	
Tailwheel Cylinder for 3700 Plow	
HYDRAULIC OPERATION	54
2600, 2700 and 2800 Plows	
3600 Plow	
3700 Plow	

All information, illustrations and specifications contained in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

Because John Deere sells its products world-wide, U.S. units of measure are shown with their respective Metric equivalents throughout this technical manual. These equivalents are the SI (International System) Units of Measure.

Copyright © 1982
DEERE & COMPANY
Moline, Illinois
All rights reserved
Previous Edition
Copyright © 1980
DEERE & COMPANY

SAFETY

This safety alert symbol identifies important safety messages in this manual. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.

AVOID HIGH PRESSURE-FLUIDS



Fig 1-Fluid Leak

Escaping fluid under pressure can penetrate the skin gausing serious injury. Relieve pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure. Keep hands and body away from pinholes and nozzles which eject fluids under high pressure. Use a piece of cardboard or paper to search for leaks. Do not use your hand.

If ANY fluid is injected into the skin, it must be surgically removed within a few hours by a doctor familiar with this type injury or gangrene may result.

Transport Safely

Use care when transporting across rough ground.

Pln the drawbar tightly during road transport to provide stability.

Use Proper Tools Only

Use only metric tools on metric hardware. Other tools may not fit properly and could slip causing injury.

Lubricate the Plow Safely

Grease, oil, or adjust the plow only when tractor engine is off and plow is in a stationary position.

Dispose of Spray Cans Safely

If spray can paint is used for protecting plow bottoms to be put in storage, be careful when discarding empty can. Do not incinerate or puncture can.

BUY NOW

Then Instant Download the Complete Manual Thank you very much!