


**JD743-A  
Tree Harvester  
JD743-A  
Feller-Buncher**

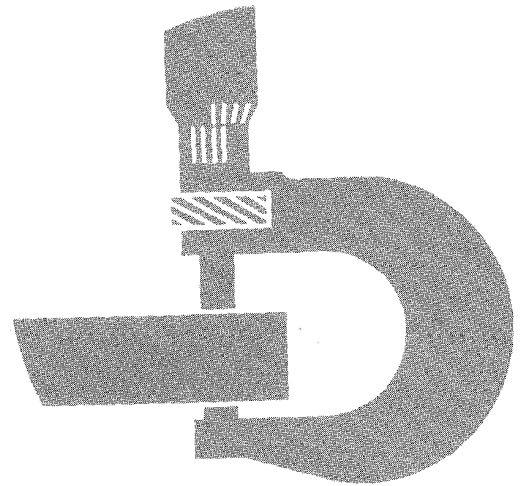

**TECHNICAL MANUAL**

**TM-1226**  
LITHO IN U.S.A.

## SECTION AND GROUP CONTENTS OF THIS MANUAL

### SECTION I - GENERAL INFORMATION

- Group I - Contents, Index and Page List
- Group II - Introduction and Safety Information
- Group III - General Specifications
- Group IV - Predelivery, Delivery and After-Sales Services
- Group V - Lubrication

### SECTION 1 - WHEELS

- Group 0110 - Powered Wheels, Tires and Fastenings
- Group 0199 - Specifications and Special Tools

### SECTION 2 - AXLES AND SUSPENSION SYSTEMS

- Group 0201 - Drive Axle Housing and Support
- Group 0210 - Differential or Bevel Drive
- Group 0225 - Input Drive Shaft and U-Joints
- Group 0243 - Axle Lock Mounting
- Group 0250 - Axle Shaft, Bearings, Reduction Gears
- Group 0260 - Hydraulic System
- Group 0299 - Specifications and Special Tools

### SECTION 3 - TRANSMISSION

- Group 0315 - Controls
- Group 0325 - Input Drive Shafts and U-Joints
- Group 0341 - Housings and Covers
- Group 0342 - Mounting Parts
- Group 0350 - Gears, Shafts, Bearings and Power Shift Clutch
- Group 0360 - Hydraulic System
- Group 0370 - Clutch Disconnect and Controls
- Group 0399 - Specifications and Special Tools

### SECTION 4 - ENGINE

- Group 0400 - Engine Removal and Installation
- Group 0401 - Crankshaft and Main Bearings
- Group 0402 - Camshaft and Valve Actuating Means
- Group 0403 - Connecting Rods and Pistons
- Group 0404 - Cylinder Block
- Group 0407 - Oiling System
- Group 0408 - Ventilating System
- Group 0409 - Cylinder Head and Valves
- Group 0410 - Exhaust Manifold
- Group 0413 - Fuel Injection System
- Group 0414 - Intake Manifold
- Group 0416 - Turbocharger
- Group 0417 - Water Pump
- Group 0418 - Thermostats, Housings and Water Piping
- Group 0419 - Oil Cooler
- Group 0420 - Fuel Filter
- Group 0422 - Starting Motor and Fastenings
- Group 0429 - Fan Drive
- Group 0433 - Flywheel, Housing and Fastenings
- Group 0499 - Specifications and Special Tools

### SECTION 5 - ENGINE AUXILIARY SYSTEMS

- Group 0505 - Cold Weather Starting Aids
- Group 0510 - Cooling Systems
- Group 0515 - Engine Speed Controls
- Group 0520 - Intake Systems
- Group 0503 - External Exhaust Systems
- Group 0540 - Mounting Frame
- Group 0560 - External Fuel Supply Systems
- Group 0599 - Specifications and Special Tools

## SECTION AND GROUP CONTENTS OF THIS MANUAL—Continued

### SECTION 9 - STEERING SYSTEM

- Group 0930 - Emergency Steering
- Group 0960 - Hydraulic System
- Group 0999 - Specifications and Special Tools

### SECTION 10 - SERVICE BRAKES

- Group 1011 - Active Elements
- Group 1015 - Controls Linkage
- Group 1060 - Hydraulic System
- Group 1099 - Specifications and Special Tools

### SECTION 11 - PARKING-EMERGENCY BRAKES

- Group 1111 - Active Elements
- Group 1115 - Controls Linkage
- Group 1199 - Specifications and Special Tools

### SECTION 16 - ELECTRICAL SYSTEM

- Group 1671 - Batteries, Support and Cables
- Group 1672 - Alternator, Regulator and Charging System Wiring
- Group 1673 - Lighting System
- Group 1674 - Wiring Harness and Switches
- Group 1675 - System Controls
- Group 1676 - Instruments and Indicators
- Group 1699 - Specifications and Special Tools

### SECTION 17 - FRAMES, CHASSIS OR SUPPORTING STRUCTURE

- Group 1740 - Frame Installation
- Group 1746 - Frame Bottom Guards
- Group 1799 - Specifications and Special Tools

### SECTION 18 - OPERATOR'S STATION

- Group 1810 - Operator Enclosure
- Group 1821 - Seat and Seat Belt
- Group 1830 - Heating and Air Conditioning
- Group 1899 - Specifications and Special Tools

### SECTION 19 - SHEET METAL AND STYLING

- Group 1910 - Hood or Engine Enclosure
- Group 1913 - Miscellaneous Shields
- Group 1921 - Grille and Grille Housing

### SECTION 20 - SAFETY, CONVENIENCE AND MISCELLANEOUS

- Group 2001 - Radio
- Group 2002 - Mirror
- Group 2003 - Fire Extinguisher
- Group 2004 - Horn
- Group 2006 - Cigar Lighter
- Group 2099 - Specifications and Special Tools

### SECTION 21 - MAIN HYDRAULIC SYSTEM

- Group 2160 - Hydraulic System
- Group 2199 - Specifications and Special Tools

### SECTION 32 - BULLDOZERS

- Group 3201 - Blades
- Group 3215 - Controls Linkage
- Group 3260 - Hydraulic System
- Group 3299 - Specifications and Special Tools

### SECTION 37 - ARCH OR BOOM, OR CRANES

- Group 3715 - Controls Linkage
- Group 3740 - Frames
- Group 3760 - Hydraulic System
- Group 3799 - Specifications and Special Tools

### SECTION 38 - GRAPPLE

- Group 3803 - Grapple Mechanism
- Group 3813 - Shielding
- Group 3860 - Hydraulic System
- Group 3899 - Specifications and Special Tools

### SECTION 39 - SHEAR

- Group 3901 - Blades and Cutting Elements
- Group 3903 - Tongue and Forks
- Group 3915 - Controls Linkage
- Group 3940 - Frame
- Group 3960 - Hydraulic System
- Group 3999 - Specifications and Special Tools

## SECTION AND GROUP CONTENTS OF THIS MANUAL—Continued

### SECTION 41 - MISCELLANEOUS FUNCTION MECHANICAL DRIVE

- Group 4125 - Input Drive Shafts
- Group 4141 - Housings and Covers
- Group 4151 - Gears, Shafts and Bearings
- Group 4152 - Clutch
- Group 4160 - Hydraulic System
- Group 4199 - Specifications and Special Tools

### SECTION 43 - SWING, ROTATION OR PIVOTING SYSTEM

- Group 4315 - Controls
- Group 4350 - Mechanical Drive Elements
- Group 4360 - Hydraulic System
- Group 4399 - Specifications and Special Tools

### SECTION 44 - CUTTING MECHANISMS

- Group 4401 - Blades
- Group 4440 - Frames
- Group 4460 - Hydraulic System
- Group 4499 - Specifications and Special Tools

### SECTION 90 - SYSTEM TESTING

- Group 9005 - General Information
- Group 9010 - Engine
- Group 9015 - Electrical System
- Group 9015A - Electrical System (Automatic Control)
- Group 9020 - Power Train
- Group 9025 - Hydraulic System (Flow Meter)
- Group 9030 - Miscellaneous Components
- Group 9031 - Heating and Air Conditioning
- Group 9035 - Specifications and Special Tools

## ALPHABETICAL INDEX

<b>A</b>		<b>D</b>	
Accumulator, brake	1060-4	(Delimber carriage), frames	4440-1
Active elements, service brakes	1011-3	Delimber knives and feed rolls cylinders	4460-18
After sales inspection	I-IV-27	Delimber knives and feed roll valve	4460-1, 9025-22
Air conditioning and heating system testing	9031-1	Delivery service	I-IV-27
Air filters	1830-34	Diagnosing malfunctions	9015A-11, 9025-45
Alternator, regulator and charging system wiring	1672-1	Differential housing with lock	0210-4
Automatic control circuit schematic	9015A-46	Differential case and cover	0210-1
Axle housing	0250-4	Differential drive shaft, front	0225-3
Axle lock mounting	0243-1	Differential drive shaft, rear	0225-1
Axle shaft, bearings, reduction gears	0250-1	Differential, front	0210-1
Axle stabilizer cylinder	0260-7	Differential lock valve	0210-32, 9025-16
Axle stabilizer valve	0260-1, 9025-18	Differential lock valve hydraulics	0210-34
Axle stabilizer valve testing	9015-32	Differential or bevel drive	0210-1
<b>B</b>		Differential, rear	0210-1
Batteries, support and cables	1671-3	Drive axle housing and support	0201-3
Blade control valve, bulldozers	3260-1	<b>E</b>	
Blades and cutting elements	3901-3	Electrical schematic complete	9015-43
Blades, bulldozer	3201-3	Emergency steering	0930-3
Blades (delimber knives)	4401-3	Emergency steering accumulator	0930-3
Block diagram	9015-3, 9015A-6	Emergency steering low pressure warning switch	0930-6, 9025-15
Blower motor	1830-32	Engine coolant heater	0505-5
Brake accumulator	1060-4, 9025-10	Engine oil cooler	0419-1
Brake system lines	1060-8	Engine oiling system	0407-1
Brake valve	9025-11	Engine removal and installation	0400-3
<b>C</b>		Engine system testing	9010-1
C1 - C2 accumulators	0360-12	Engine ventilating system	0408-1
Camshaft and valve actuating means	0402-1	Evaporator core	1830-26
Cigar lighter	2006-1	Exhaust manifold	0410-1
Circuit protectors	1674-1	Expansion valve	1830-28
Clutch housings, transmission	0350-11	External exhaust systems	0530-1
Clutch, mechanical drive	4152-1	External fuel supply systems	0560-1
Clutch valve linkage	0315-3	<b>F</b>	
Cold weather starting aids	0505-3	Fan	0510-1
Compressor	1830-5	Fan belt tightener	0429-1
Compressor relief valve	1830-30	Fan drive	0429-1
Condenser	1830-21	Fan drive support	0429-3
Connecting rods and pistons	0403-1	Fire extinguisher	2003-1
Controls linkage, arch or boom	3715-3	Fire stack valve	9025-26
Controls linkage, bulldozer	3215-1	Fire suppression system	9015-41
Controls, swing, rotation system	4315-3	Flywheel, housing and fastenings	0433-1
Cooling system	0510-1	Forks and tongue	3903-3
Crankshaft and main bearings	0401-1	Frames - arch or boom	3740-1
Cylinder block	0404-1	Frames (delimber carriage)	4440-1
Cylinder, bulldozer	3260-5	Front differential	0210-1
Cylinder, delimber knives and feed rolls	4460-18	Front differential drive shaft	0225-3
Cylinder head and valves	0409-1	Fuel filter	0420-1
Cylinders, steering	0960-10	Fuel injection nozzles	0413-9
		Fuel injection pump	0413-5
		Fuel injection system	0413-1

Fuel line .....	0560-6
Fuel supply pump .....	0560-1
Fuel tank .....	0560-4
Fuel transfer pump .....	0413-1
Frame bottom guards .....	1746-1
Frame installation .....	1740-3

**G**

Gears, shafts and bearings, mechanical drive	4151-1
General information .....	9015A-5
General specifications .....	I-III-1
Grapple hydraulic system .....	3860-1
Grapple mechanism .....	3803-3
Grapple shielding .....	3813-1
Grille and grille housing .....	1921-1

**H**

Harvesting control box wiring .....	9015A-45
Heater blowers .....	1830-4
Heater core .....	1830-2
Heater valve .....	1830-1
Heater pipes and hoses .....	1830-4
Heating and air conditioning system testing	9031-1
Hood or engine enclosure .....	1910-3
Horn .....	2004-1
Housing and covers .....	0341-1
Housing and covers, mechanical drive .....	4141-1
Hydraulic charge pump .....	2160-25
Hydraulic in-line filter .....	2160-47
Hydraulic manifold .....	2160-37
Hydraulic oil cooler and check valve .....	2160-45
Hydraulic oil filters .....	2160-39
Hydraulic pump .....	2160-6
Hydraulic pump destroke solenoid .....	9015-32
Hydraulic reservoir .....	2160-41
Hydraulic schematics .....	9025-105
Hydraulic service recommendations .....	2160-3
Hydraulic steering valve .....	0960-1
Hydraulic system .....	0260-1
Hydraulic system accumulator .....	2160-33
Hydraulic system, arch or boom .....	3760-1
Hydraulic system, cutting mechanism .....	4460-1
Hydraulic system, grapple .....	3860-1
Hydraulic system, mechanical drive .....	4160-1
Hydraulic system, steering .....	0960-1
Hydraulic system, swing and rotation system	4360-1
Hydraulic warm-up switch .....	9015-35

**I**

Indicator isolation diodes .....	1674-7
Input drive shafts and U-joints .....	0225-1, 0325-1
Input drive shafts, mechanical drive .....	4125-1
Instruments and indicators .....	1676-2
Instruments and indicators, testing .....	9015-25
Intake manifold .....	0414-1

Intake manifold pressure test .....	9010-19
Intake system .....	0520-1
Introduction .....	I-II-1

**L**

Lighting system .....	1673-1
Lighting system testing .....	9015-16
Log accumulator .....	9015-40
Log accumulator valve .....	9025-29
Lubrication .....	I-V-1

**M**

Main hydraulic pump .....	9025-3
Mechanical drive elements, swing, rotating	
▪ system .....	4350-1
Mirror .....	2002-1
Miscellaneous accessories .....	9015-28
Miscellaneous components system testing ..	9030-1
Miscellaneous shields .....	1913-1
Mounting frame .....	0540-1
Mounting parts .....	0342-1
Multi stem shear operation .....	9025-32
Multi-stem shear valve ..	3960-15, 9015-35, 9025-30

**O**

Operator enclosure .....	1810-3
Oscillating supports, differential .....	0210-20

**P**

Parking-emergency brakes active elements ..	1111-3
Parking-emergency brakes control linkage ..	1115-1
Planet pinion carrier .....	0250-4
Planetary pack .....	0350-27
Power shaft countershaft .....	0350-42
Power shift transmission assembly .....	0350-5
Power train system testing .....	9020-1
Precautions .....	9015A-10
Predelivery service .....	I-IV-1
Pressure control valve .....	2160-29, 9025-8
Pressure reducing valve ..	4460-14, 9015-40, 9025-27
Pump drive and support assembly .....	2160-33

**R**

Radiator and fan shroud .....	0510-2
Radio .....	2001-3
Rear differential .....	0210-1
Rear differential drive shaft .....	0225-1
Receiver-dryer .....	1830-24
Relays .....	1674-3, 1674-4

**S**

Seat .....	1821-1
Seat belt .....	1821-1
Service brake valve .....	1060-1
Service brakes active elements .....	1011-3
Service brakes controls linkage .....	1015-1

Shear and grapple control valve .....	3960-1
Shear cylinder .....	3960-19
Shear frame .....	3940-1
Shear grapple cylinder .....	3960-29
Shear/grapple valve .....	9015-35
Shear hydraulic system .....	3960-1
Shears controls linkage .....	3915-1
Shorted circuit test .....	9015A-10
Special procedures .....	9025-49
Special tools:	
Air conditioning system .....	1899-6
Alternator, regulator and charging system wiring .....	1699-7
Batteries, support and cables .....	1699-5
Camshaft and valve actuating means .....	0499-29
Clutch disconnect and controls, transmission .....	0399-26
Clutch, mechanical drive .....	4199-2
Connecting rods and pistons .....	0499-31
Cooling system .....	0599-4
Crankshaft and main bearings .....	0499-28
Cylinder block .....	0499-32
Cylinder head and valves .....	0499-34
Electrical system .....	9035-15
Electrical system (automatic control) .....	9035-19
Emergency steering accumulator .....	0999-6
Emergency steering valve .....	0999-7
Engine .....	9035-3
Fuel injection system .....	0499-36
Gears, shafts, bearings and power shift clutch transmission .....	0399-23
Grapple hydraulic system .....	3899-3
Housing and covers, transmission .....	0399-22
Hydraulic system .....	0299-13, 2199-11
Hydraulic system, arch or boom .....	3799-5
Hydraulic system, bulldozer .....	3299-3
Hydraulic system, cutting mechanisms .....	4499-2
Hydraulic system (flow meter) .....	9035-27
Operating enclosure .....	1899-4
Removal and installation, engine .....	0499-25
Service brakes hydraulic system .....	1099-3
Shear blades and cutting elements .....	3999-7
Shear hydraulic system .....	3999-8
Starting motor and fastenings .....	0499-40
Turbocharger .....	0499-38
Water pump .....	0499-39
Wheels and fastening .....	0199-2
Specifications:	
Air conditioning system .....	1899-2
Alternator, regulator and charging system wiring .....	1699-1
Axle lock mount .....	0299-10
Axle shafts, bearing, reduction gears .....	0299-10
Basic engine .....	9035-1
Batteries, support and cables .....	1699-1

Specifications (Continued):	
Blades, cutting mechanisms .....	4499-1
Camshaft and valve actuating means .....	0499-3
Clutch disconnect and controls, transmission .....	0399-20
Cold weather starting aids .....	0599-1
Connecting rods and pistons .....	0499-5
Cooling systems .....	0599-1
Crankshaft and main bearings .....	0499-2
Cylinder block .....	0499-8
Cylinder head and valves .....	0499-12
Differential or bevel drive .....	0299-2
Drive axle housing and support .....	0299-1
Electrical system .....	9035-5
Electrical system (automatic control) .....	9035-17
Emergency steering accumulator .....	0999-1
Emergency steering cylinder .....	0999-5
Emergency steering valve .....	0999-1
Engine break-in .....	0499-1
Engine oil cooler .....	0499-21
Engine oiling system .....	0499-10
External fuel supply system .....	0599-4
Fan drive .....	0499-24
Fire extinguisher .....	2099-1
Flywheel housing and fastenings .....	0499-24
Frame installation .....	1799-1
Frames, cutting mechanisms .....	4499-1
Fuel injection system .....	0499-15
Gears, shafts and bearings, mechanical drive .....	4199-3
Grapple hydraulic system .....	3899-1
Heating and air conditioning .....	9035-30
Housing and covers, mechanical drive .....	4199-2
Hydraulic system .....	0299-11
Hydraulic system, arch or boom .....	3799-1
Hydraulic system, bulldozers .....	3299-1
Hydraulic system, cutting mechanisms .....	4499-2
Hydraulic system (flow meter) .....	9035-22
Hydraulic system, mechanical drive .....	4199-11
Hydraulic system, swing and rotation system .....	4399-3
Hydraulic system, transmission .....	0399-3
Input drive shafts and U-joints .....	0299-9
Input drive shaft, mechanical drive .....	4199-1
Instruments and indicators .....	1699-4
Intake manifold .....	0499-17
Intake system .....	0599-3
Lighting system .....	1699-3
Miscellaneous components .....	9035-29
Mechanical drive elements, swing and rotation system .....	4399-1
Mounting frame .....	0599-4
Operator enclosure .....	1899-1

Specifications (Continued):

Parking brake active elements	1199-1
Parking-emergency brakes controls linkage	1199-1
Power train	9035-21
Service brakes hydraulic system	1099-1
Shears, blades and cutting elements	3999-1
Shear frames	3999-2
Shear hydraulic system	3999-4
Speed controls	0599-2
Starting motor and fastenings	0499-22
System controls	1699-4
Thermostats, housings and water piping	0499-20
Transmission gears, shafts, bearings and power shift clutch	0399-3
Transmission input drive shafts and U-joints	0399-1
Transmission mounting parts	0399-2
Turbocharger	0499-18
Water pump	0499-19
Wheels and fastenings	0199-1
Wiring harness and switches	1699-3
Speed controls	0515-1
Stabilizer cylinder, axle	0260-7
Stabilizer valve, axle	0260-1
Starting circuit	9015-11
Starting motor and fastenings	0422-1
Steering cylinders	0960-10
Steering system lines	0960-13
Steering valve	9025-12
Stroke control valve	2160-6
Stroke control valve assembly	9025-3
Surge relief valve	9025-8
Swing crossover relief valve	9025-25
Swing motor	9025-24
Switches	1674-4, 1674-6
System accumulator	9025-9
System controls	1675-1
System testing, engine	9010-1
System testing, heating and air conditioning	9031-1
System testing, miscellaneous components	9030-1
System testing, power train	9020-1

T

Test port locations	9025-39
Test procedures	9015A-12
Testing and adjustment	9025-54
Thermal fuse and superheat shut-off switch	1830-31
Thermostats, housings and water piping	0418-1
Thermostats temperature control switch	1830-29

Tongue and forks	3909-3
Transmission case	0350-15
Transmission clutch carrier assembly and elements	0370-1
Transmission clutch linkage	0370-7
Transmission clutch pack	0350-2
Transmission clutch valve	0360-8
Transmission clutch valve assembly	0360-4
Transmission control valve shift linkage	0315-5
Transmission hydraulic system	9025-35
Transmission oil cooler	0360-16
Transmission oil filter	0360-13
Transmission oil pressure regulating valve	0360-10
Transmission oil pump	0360-1
Transmission suction screen filter	0350-1
Turbocharger	0416-1

V

Valve, axle stabilizer	9025-18
Valve, brake	9025-11
Valve, delimeter knives and feed roll	4460-1
Valve, differential lock	9025-16
Valve, fire stack	9025-26
Valve, heater	1830-1
Valve, log accumulator	9025-29
Valve, multi stem shear	9025-30
Valve, pressure control	9025-8
Valve, pressure reducing	4460-14, 9015-40, 9025-27
Valve, service brake	1060-1
Valve, steering	0960-1, 9025-12
Valve, surge relief	9025-8
Valve, swing crossover relief	9025-25
Vibration damper	0401-8
Visual inspection	9015A-10, 9025-48

W

Water pump	0417-1
Wheel and fastenings	0110-3
Wire terminal location	9015A-7
Wiring diagram, complete	9015-45
Wiring harnesses and switches	1674-1



**BUY NOW**

**Then Instant Download  
the Complete Manual  
Thank you very much!**