



**Technical
Manual**

**John Deere
Mechanical Front Wheel Drive
for Tractors 1030, 1130,
1630, 1830 and 2030**

TM-4326



Mechanical Front Wheel Drive for JD 1030, 1130, 1630, 1830 and 2030 Tractors

Technical Manual
TM-4326 (Aug-76)

Group Index

Description, Operation and Specifications

5

Drive Train

10

Multi-Disk Clutch and Solenoid

15

Drive Shaft

20

Front Axle

25

Copyright © 1976
DEERE & COMPANY
European Office
D 68 Mannheim
All rights reserved

All information, illustrations, and specifications contained in this technical manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

TABLE OF CONTENTS

GROUP 5 — DESCRIPTION, OPERATION AND SPECIFICATIONS		GROUP 25 — FRONT AXLE	
	Page		Page
Description	5-1	Removal	25-2
Tumbler (operating) Switch	5-1	Disassembly	25-2
Solenoid	5-1	Jointed Wheel Drive Shaft	25-2
Drive Train	5-2	Differential	25-3
Multiple-Disk Clutch	5-2	Axle Flange Housing and	
Drive Shaft	5-3	Steering Knuckle	25-4
Front Axle	5-3	Front Axle Centerpiece	25-5
Operation	5-5	Inspection and Repair	25-6
Electrical Control Circuit	5-5	Wheel Flange, Steering Knuckle	
Hydraulic Oil Flow	5-6	Housing, Steering Knuckle and	
Drive Train	5-9	Axle Flange Housing	25-6
Specifications	5-10	Double-Jointed Drive Shaft	25-8
		Differential	25-8
		Components of Front Axle Centerpiece	25-9
		Assembly	25-9
		Front Axle Centerpiece	25-9
		Differential	25-9
		Axle Flange Housing and	
		Steering Knuckle	25-10
		Double-Jointed Wheel Drive Shaft	25-10
		Steering Knuckle Housing	
		and Wheel Flange	25-11
		Adjustments	25-12
		Cone Point Adjustment, Input Shaft	
		to Ring Gear	25-12
		Preload Adjustment of	
		Input Shaft Bearing	25-13
		Backlash Adjustment between Input	
		Shaft and Ring Gear	25-14
		Preload Adjustment of Taper Bearings	
		in Knuckle Housing	25-15
		Rolling Drag Torque Adjustment	
		of Wheel Flange	25-16
		End Play Adjustment of	
		Bellcrank	25-16
		Installation	25-16
		Front Wheel Toe-In Check and	
		Adjustment	25-16
		Front Wheel Steering Angle	
		Adjustment	25-17
		Specifications	25-18
		Torques for Hardware	25-21
		Special Tools	25-22
GROUP 10 — DRIVE TRAIN			
Removal	10-1		
Repair	10-3		
Adjustments	10-4		
Installation	10-7		
Specifications	10-8		
Torques for Hardware	10-10		
Special Tools	10-10		
GROUP 15 — MULTIPLE-DISK CLUTCH AND SOLENOID			
Multiple-Disk Clutch	15-1		
Removal	15-1		
Disassembly	15-2		
Inspection and Repair	15-4		
Assembly	15-4		
Installation and Adjustment	15-5		
Solenoid	15-7		
Repair	15-7		
Specifications	15-8		
Torques for Hardware	15-9		
GROUP 20 — DRIVE SHAFT			
Removal	20-1		
Repair	20-2		
Installation	20-3		
Torques for Hardware	20-3		

FOREWORD

This technical manual is a concise guide for the serviceman, containing all the vital information he requires on the Mechanical Front Wheel Drive for the JD Tractors 1030, 1130, 1630, 1830 and 2030.

The table of contents at front of the manual enables the serviceman to easily find detailed information and special characteristics of each group.

The characteristics of each subassembly group of the front wheel drive include: removal, disassembly, repair, assembly, installation, adjustments, specifications, hardware torques and special tools.

Specifications, hardware torques and special tools are shown together at the end of each group.

IMPORTANT: Your technical manual contains the new SI metric measurements which have been standardized internationally.

Example:

New	Old
10 N (Newton)	1 kp
10 Nm (Newton-Meter)	1 mkp
1 bar	1 kp/cm ²
1 kW = 1.36 PS (1.34 HP)	

This technical manual was planned and written for you — the serviceman.

Always keep it handy in the workshop, ready for reference, whenever in doubt about correct service or specifications.

Using the technical manual as a guide during servicing will reduce error and costly delay. It will also assure you the best in finished service work.

BUY NOW

**Then Instant Download
the Complete Manual
Thank you very much!**